


Service Manual



DVR-530H-S

ORDER NO.
RRV3149

DVD RECORDER

DVR-530H-S

DVR-530H-AV

DVR-630H-S

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Region No.	Serial No. Please confirm 3rd & 4th alphabetical letters.
DVR-530H-S	WYXV	AC220-240V	2	&&DL#####\$\$
DVR-530H-S	WVXV	AC220-240V	2	&&DL#####\$\$
DVR-530H-AV	WYXV	AC220-240V	2	&&DL#####\$\$
DVR-530H-AV	WVXV	AC220-240V	2	&&DL#####\$\$
DVR-630H-S	WYXV	AC220-240V	2	&&DL#####\$\$
DVR-630H-S	WVXV	AC220-240V	2	&&DL#####\$\$

- When servicing this model, some service procedures may reset the customer settings to the factory default settings. Make sure to explain this to the customer.

An HDD (Hard Disc Drive) is mounted in this product.

The HDD is a precision instrument very vulnerable to shock and electrostatic charges. Please read "7.3 Cautions on Handling the HDD" in this manual and exercise sufficient caution when handling the HDD itself, as well as the product with the HDD built in.

When an HDD becomes defective and inoperable, restoration of the user's data recorded on the HDD, or copying of the user's recorded data to other media (such as a new HDD) is totally impossible. Before servicing, OBTAIN THE USER'S PRIOR CONSENT to that effect.

The user must be made aware that all recorded data are deleted if the HDD is initialized.



For details, refer to "Important Check Points for Good Servicing".

SAFETY INFORMATION

LITHIUM BATTERY NOTICE

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

When replacing the lithium batteries, follow the note below. Dispose of the used battery promptly. Keep away from children. Do not disassemble and do not dispose of in fire.

The battery used in this device may present a fire or chemical hazard if mistreated. Do not recharge, disassemble, heat above 100°C or incinerate. Replace only with the same Part Number. Use of another battery may present a risk of fire or explosion.

Note : The lithium battery installation position is shown in the exploded views.

LABEL CHECK

IMPORTANT


THIS PIONEER APPARATUS CONTAINS LASER OF CLASS 1. SERVICING OPERATION OF THE APPARATUS SHOULD BE DONE BY A SPECIALLY INSTRUCTED PERSON.

LASER DIODE CHARACTERISTICS


MAXIMUM OUTPUT POWER: 100 mW
WAVELENGTH: 654 - 662 nm

LASER DIODE CHARACTERISTICS

MAXIMUM OUTPUT POWER: 5 mW
WAVELENGTH: 770 - 810 nm

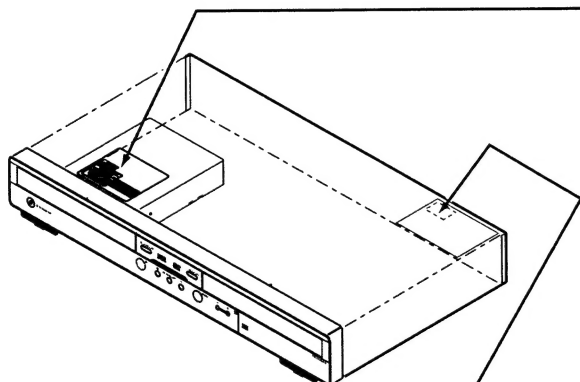

CLASS 1
LASER PRODUCT

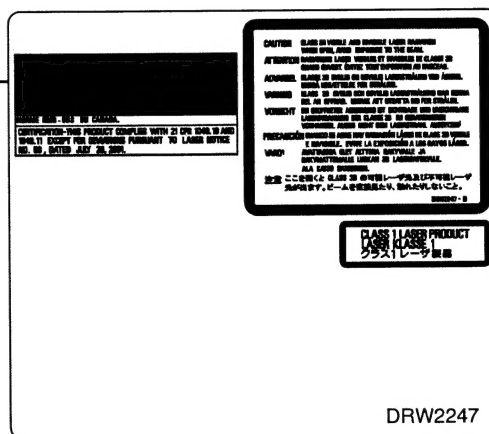

Additional Laser Caution

1. The ON/OFF(ON:low level,OFF:high level) status of the CLAMP signals for detecting the loading state are detected by the drive CPUs, and the design prevents laser diode oscillation when the CLAMP signal turns OFF. In normal operation, if no disc is clamped, the laser diode oscillation is disabled. However, the interlock does not always operate in the test mode.
2. When the cover is opened, close viewing of the objective lens with the naked eye will cause exposure to a Class 3A laser beam.

[Important Check Points for Good Servicing]

In this manual, procedures that must be performed during repairs are marked with the below symbol.
Please be sure to confirm and follow these procedures.

1. Product safety



Please conform to product regulations (such as safety and radiation regulations), and maintain a safe servicing environment by following the safety instructions described in this manual.

- ① Use specified parts for repair.

Use genuine parts. Be sure to use important parts for safety.

- ② Do not perform modifications without proper instructions.

Please follow the specified safety methods when modification (addition/change of parts) is required due to interferences such as radio/TV interference and foreign noise.

- ③ Make sure the soldering of repaired locations is properly performed.

When you solder while repairing, please be sure that there are no cold solder and other debris.
Soldering should be finished with the proper quantity. (Refer to the example)

- ④ Make sure the screws are tightly fastened.

Please be sure that all screws are fastened, and that there are no loose screws.

- ⑤ Make sure each connectors are correctly inserted.

Please be sure that all connectors are inserted, and that there are no imperfect insertion.

- ⑥ Make sure the wiring cables are set to their original state.

Please replace the wiring and cables to the original state after repairs.
In addition, be sure that there are no pinched wires, etc.

- ⑦ Make sure screws and soldering scraps do not remain inside the product.

Please check that neither solder debris nor screws remain inside the product.

- ⑧ There should be no semi-broken wires, scratches, melting, etc. on the coating of the power cord.

Damaged power cords may lead to fire accidents, so please be sure that there are no damages.
If you find a damaged power cord, please exchange it with a suitable one.

- ⑨ There should be no spark traces or similar marks on the power plug.

When spark traces or similar marks are found on the power supply plug, please check the connection and advise on secure connections and suitable usage. Please exchange the power cord if necessary.

- ⑩ Safe environment should be secured during servicing.

When you perform repairs, please pay attention to static electricity, furniture, household articles, etc. in order to prevent injuries.
Please pay attention to your surroundings and repair safely.

2. Adjustments



To keep the original performance of the products, optimum adjustments and confirmation of characteristics within specification. Adjustments should be performed in accordance with the procedures/instructions described in this manual.

3. Lubricants, Glues, and Replacement parts



Use grease and adhesives that are equal to the specified substance.
Make sure the proper amount is applied.

4. Cleaning



For parts that require cleaning, such as optical pickups, tape deck heads, lenses and mirrors used in projection monitors, proper cleaning should be performed to restore their performances.

5. Shipping mode and Shipping screws



To protect products from damages or failures during transit, the shipping mode should be set or the shipping screws should be installed before shipment. Please be sure to follow this method especially if it is specified in this manual.

CONTENTS

	SAFETY INFORMATION	2
	1. SPECIFICATIONS	5
A	2. EXPLODED VIEWS AND PARTS LIST	8
	2.1 PACKING	8
	2.2 EXTERIOR SECTION.....	10
	2.3 FRONT PANEL SECTION	12
	3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM	14
	3.1 BLOCK DIAGRAM	14
	3.1.1 OVERALL BLOCK DIAGRAM.....	14
	3.1.2 MAIN ASSY	16
	3.2 OVERALL WIRING DIAGRAM.....	18
	3.3 TUNB ASSY	20
	3.4 JACB(1/2) and FLJB ASSYS	22
	3.5 JACB ASSY(2/2)	24
B	3.6 DVJB ASSY	26
	3.7 ATAB ASSY	27
	3.8 PSWB and RSWB ASSYS.....	28
	3.9 MAIN ASSY(1/5)	30
	3.10 MAIN ASSY(2/5)	32
	3.11 MAIN ASSY(3/5)	34
	3.12 MAIN ASSY(4/5)	36
	3.13 MAIN ASSY(5/5)	38
	3.14 SCRB ASSY	40
	3.15 POWER SUPPLY UNIT.....	42
	3.16 WAVE FORMS	44
	4. PCB CONNECTION DIAGRAM	48
C	4.1 TUNB ASSY	49
	4.2 JACB, FLJB, DVJB and ATAB ASSYS	52
	4.3 PSWB and RSWB ASSYS.....	56
	4.4 MAIN ASSY	60
	4.5 SCRB ASSY	64
	4.6 POWER SUPPLY UNIT.....	66
	5. PCB PARTS LIST	68
	6. ADJUSTMENT	72
	7. GENERAL INFORMATION	73
	7.1 DIAGNOSIS	73
	7.1.1 MODEL TYPE SETTING	75
	7.1.2 CPRM ID NUMBER AND DATA SETTING.....	76
D	7.1.3 FIRMWARE DOWNLOADING METHOD.....	80
	7.1.4 VIDEO ADJUSTMENT FOR SPECIFIC AREA.....	83
	7.1.5 SERVICE MODE.....	87
	7.1.6 DV SERVICE MODE	101
	7.1.7 EPG SERVICE MODE (Except DVR-433H model).....	104
	7.1.8 AGING MODE.....	106
	7.1.9 HDD CHECK MODE	108
	7.1.10 SETUP SEQUENCE	114
	7.1.11 DISASSEMBLY	115
	7.2 IC	121
	7.3 CAUTIONS ON HANDLING THE HDD.....	134
E	7.4 DISC/CONTENT FORMAT	136
	8. PANEL FACILITIES	138

1. SPECIFICATIONS

Specifications

General

System	HDD, DVD-Video, DVD-R/RW, Video-CD, Super VCD, CD, CD-R/RW (WMA, MP3, JPEG, CD-DA)
Power requirements	220 – 240 V, 50/60 Hz
Power consumption	
DVR-630H	49 W
DVR-530H	48 W
Power consumption in standby mode	0.93 W (Front panel display: off)
Weight	4.1 kg
Dimensions	420 (W) x 59 (H) x 273 (D) mm
Operating temperature	+5°C to +35°C
Operating humidity	5% to 85% (no condensation)
TV system	PAL/SECAM/NTSC (external input only)

Recording

Recording format	DVD Video Recording DVD-VIDEO
------------------	-------------------------------

Recordable discs

DVD-RW (DVD Re-recordable disc)
DVD-R (DVD Recordable disc)

Video recording format

Sampling frequency	13.5MHz
Compression format	MPEG

Audio recording format

Sampling frequency	48kHz
Compression format	Dolby Digital or Linear PCM (uncompressed)

Recording time

HDD (250GB)

XP+	Approx. 36 hours
Fine (XP)	Approx. 53 hours
Standard Play (SP)	Approx. 106 hours
Long Play (LP)	Approx. 212 hours
Extended Play (EP)	Approx. 319 hours
Super Long Play (SLP)	Approx. 425 hours
Super Extended Play (SEP)	Approx. 532 hours
Manual Mode (MN)	Approx. 36 – 711 hours

HDD (160GB)

XP+	Approx. 23 hours
Fine (XP)	Approx. 34 hours
Standard Play (SP)	Approx. 68 hours
Long Play (LP)	Approx. 136 hours
Extended Play (EP)	Approx. 204 hours
Super Long Play (SLP)	Approx. 272 hours
Super Extended Play (SEP)	Approx. 340 hours
Manual Mode (MN)	Approx. 23 – 455 hours

DVD-R/DVD-RW

Fine (XP)	Approx. 1 hour
Standard Play (SP)	Approx. 2 hours
Long Play (LP)	Approx. 4 hours
Extended Play (EP)	Approx. 6 hours
Super Long Play (SLP)	Approx. 8 hours
Super Extended Play (SEP)	Approx. 10 hours
Manual Mode (MN)	Approx. 1 – 13 hours

Tuner

Receivable channels

SECAM B/G		PAL B/G		PAL I	
Frequency	Channel	Frequency	Channel	Frequency	Channel
VHF (low)	47 - 89 MHz	E2 - E4	X - Z	44 - 89 MHz	A - C
VHF (high)	104 - 300 MHz	E5 - E12	S1 - S20	104 - 300 MHz	D - J
		M1 - M10	U1 - U10		11, 13
					S1 - S20
Hyper	302 - 470 MHz	S21 - S41	302 - 470 MHz	S21 - S41	
UHF	470 - 862 MHz	E21 - E69	470 - 862 MHz	E21 - E69	

SECAM L		SECAM D/K		PAL D/K	
Frequency	Channel	Frequency	Channel	Frequency	Channel
VHF (low)	49 - 65 MHz	FB, FC1, FC	49 - 94 MHz	R1 - R5	
VHF (high)	104 - 300 MHz	F1 - F6	104 - 300 MHz	R6 - R12	
		B - Q		S1 - S20	
Hyper	300 - 470 MHz	S21 - S41	302 - 470 MHz	S21 - S41	
UHF	470 - 862 MHz	21 - 69	470 - 862 MHz	E21 - E69	

STEREO
B/G - A2
I - NICAM
L - NICAM
B/G - NICAM
D/K - NICAM

Timer

Programs	1 month/32 programs
Clock	Quartz lock (24-hour digital display)
Power off memory	Approx. 5 years (after manufacture)

Input/Output

VHF/UHF antenna input/output terminal	VHF/UHF set 75 Ω (IEC connector)
Video input	Input 1, 3 (rear), 2 (front)
Input level	1 V _{p-p} (75 Ω)
Jacks	AV connector2 (Input 1), RCA jack (Input 2, 3)
Video output	AV1, Output
Output level	1 V _{p-p} (75 Ω)
Jacks	AV connector (AV1) RCA jack (Output)
S-Video input	Input 1, 3 (rear), 2 (front)
Y (luminance) - Input level	1 V _{p-p} (75 Ω)
C (colour) - Input level	300 mV _{p-p} (75 Ω)
Jacks	AV connector2 (Input 1), 4 pin mini DIN (Input 2, 3)

S-Video output AV1, Output
Y (luminance) - Output level 1 Vp-p (75 Ω)
C (colour) - Output level 300 mVp-p (75 Ω)
Jacks AV connector 1 (AV1),
4 pin mini DIN (Output)

Component video output
Output level Y: 1.0 Vp-p (75 Ω)
P_B, P_R: 0.7 Vp-p (75 Ω)
Jacks RCA jacks

RGB input
Input level 0.7 Vp-p (75 Ω)
Jacks AV connector 2 (Input 1)

RGB output
Output level 0.7 Vp-p (75 Ω)
Jacks AV connector 1 (AV1)

Audio input Input 1, 3 (rear), 2 (front) L/R
Input level
During audio input 2V rms
(Input impedance: more than 22 k Ω)

Jacks AV connector 2 (Input 1),
RCA jacks (Input 2, 3)

Audio output AV1, Output
During audio output 2V rms
(Output impedance: less than 1.5 k Ω)

Jacks AV connector 1 (AV1),
RCA jacks (Output)

Control input Mini jack

DV input 4 pin (front)
(i.LINK/IEEE 1394 standard)


G-LINK™ Mini jack

AV Connectors (21-pin connector assignment)

AV connector input/output 21-pin connector

This connector provides the video and audio signals for
connection to a compatible colour TV or monitor.

20 18 16 14 12 10 8 6 4 2



21 19 17 15 13 11 9 7 5 3 1

PIN no. AV1(RGB)-TV / AV2(INPUT 1)

1 Audio 2/R out / Audio 2/R out

2 - / Audio 2/R in

11 G out / G in

3 Audio 1/L out / Audio 1/L out

6 - / Audio 1/L in

15 R or C out / R or C in

4 GND

17 GND

7 B out / B in

19 Video out or Y out / Video out

20 - / Video in or Y in

8 Status

21 GND

Supplied accessories

Remote control 1

Dry cell batteries (AA/R6P) 2

Audio / Video cable (red/white/yellow) 1

G-LINK™ cable 1

RF antenna cable 1

Power cable 1


Operating Instructions

Warranty card 1


*Note: The specifications and design of this product are subject
to change without notice, due to improvement.*

● Accessories


- Remote control ×1
(VXX2969)

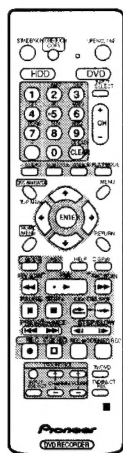


- Power cable ×1
(ADG7090 : WYXV type)




- (ADG7103 : WVXV type)




- Dry cell batteries ×2
(AA/R6P)




- RF antenna cable(PAL) ×1
(VDE1075)



- Audio / Video cable(1.5m) ×1
(red/white/yellow)
(VDE1077)

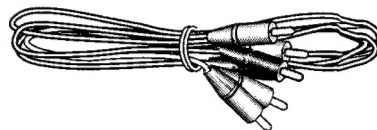


- IR Blaster(3m) ×1
(VDX1010)



2. EXPLODED VIEWS AND PARTS LIST

NOTES: ●Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.

●The  mark found on some component parts indicates the importance of the safety factor of the part.


Therefore, when replacing, be sure to use parts of identical designation.

●Screws adjacent to ▼ mark on product are used for disassembly.

●For the applying amount of lubricants or glue, follow the instructions in this manual.

(In the case of no amount instructions, apply as you think it appropriate.)

2.1 PACKING

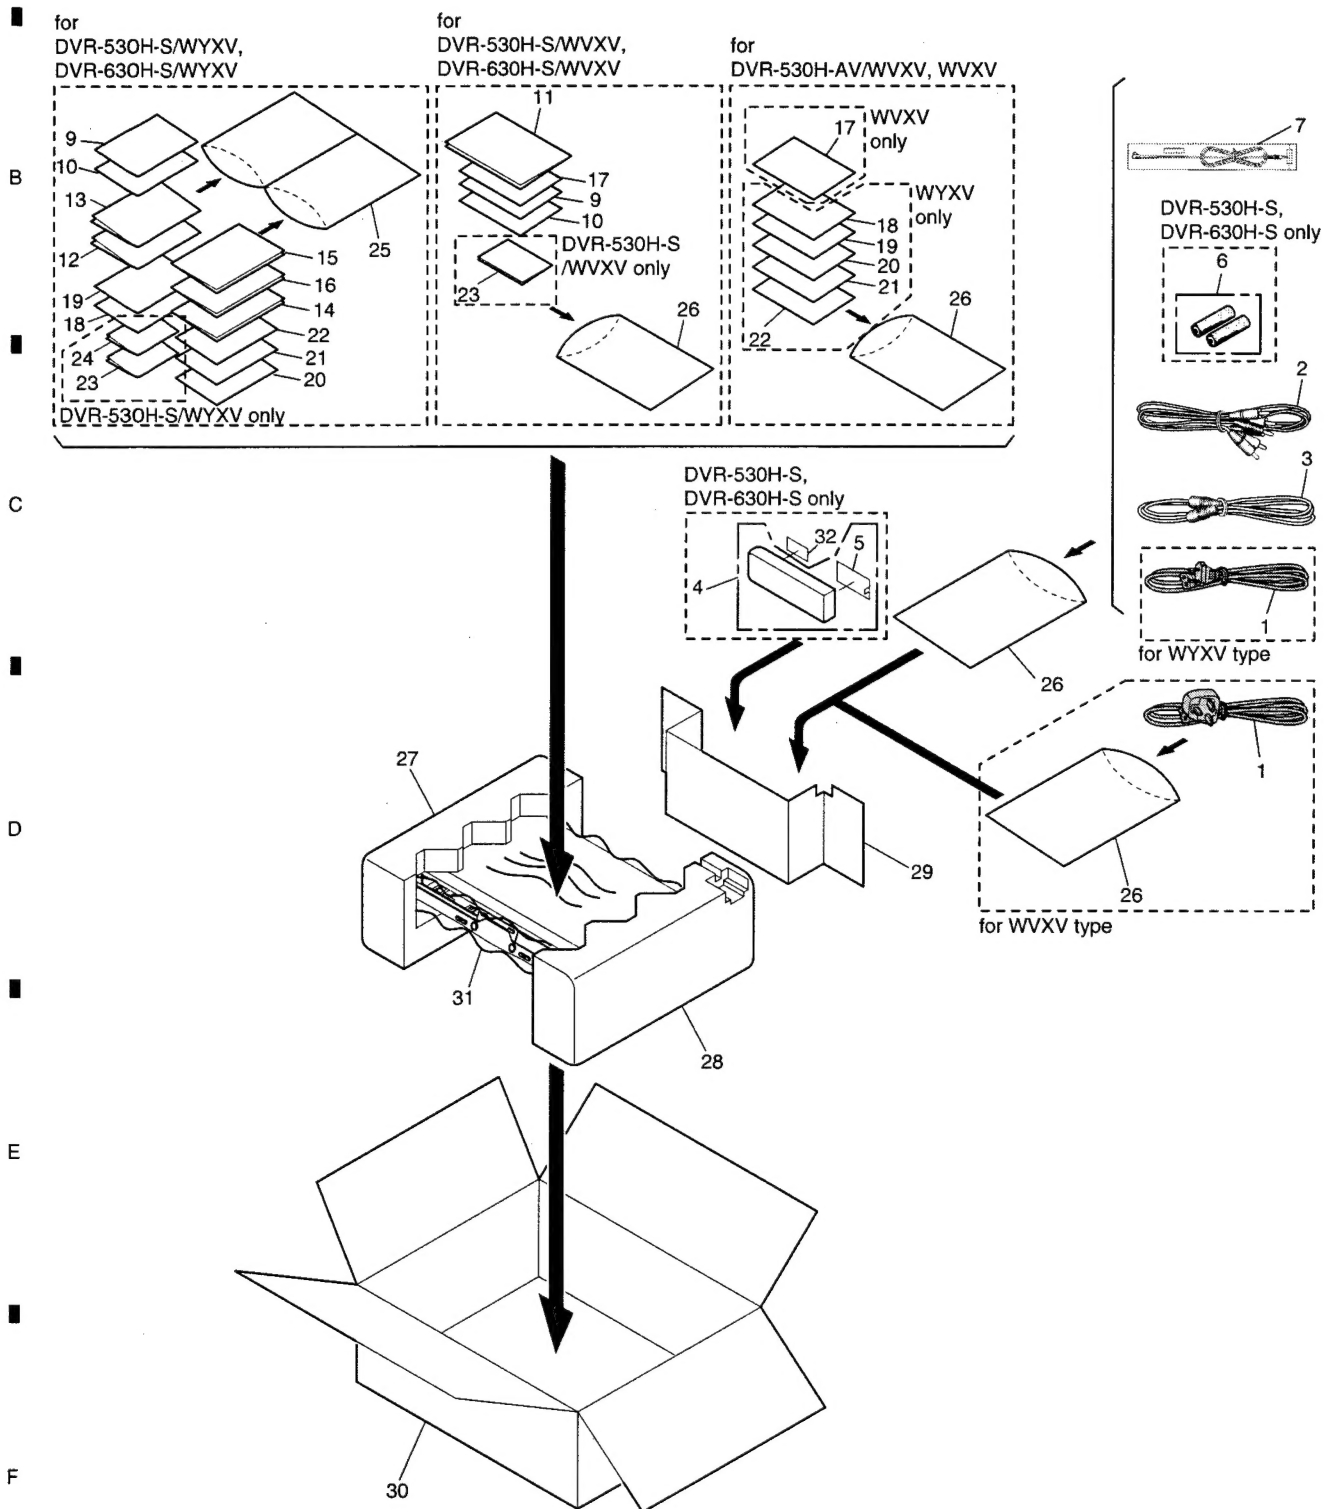


5

6

7

8

(1) PACKING SECTION PARTS LIST


Mark No.	Description	Part No.	Mark No.	Description	Part No.
 1	Power Cable	See Contrast table (2)	16	Operating Instructions	See Contrast table (2)
2	Audio / Video Cable (1.5m)	VDE1077	17	Dual Layer IM	See Contrast table (2)
3	RF Antenna Cable	VDE1075	18	Dual Layer IM	See Contrast table (2)
4	Remote Control Unit	See Contrast table (2)	19	Dual Layer IM	See Contrast table (2)
5	Battery Cover	See Contrast table (2)	20	Dual Layer IM	See Contrast table (2)
NSP 6	Dry Cell Battery (R6P, AA)	See Contrast table (2)	21	Dual Layer IM	See Contrast table (2)
7	IR Blaster	VDX1010	22	Dual Layer IM	See Contrast table (2)
NSP 8	Warranty Card	ARY7065	NSP 23	User Card	See Contrast table (2)
9	WEEE Caution Card	VRR1065	NSP 24	User Card	See Contrast table (2)
10	HDD Caution 8L	VRR1063	NSP 25	Polyethylene Bag (A4 x2)	See Contrast table (2)
11	Operating Instructions	See Contrast table (2)	26	Polyethylene Bag B5	VHL1088
12	Operating Instructions	See Contrast table (2)	27	Left Pad	VHA1386
13	Operating Instructions	See Contrast table (2)	28	Right Pad	VHA1387
14	Operating Instructions	See Contrast table (2)	29	Remote Control Holder	VHC1139
15	Operating Instructions	See Contrast table (2)	30	Packing Case	See Contrast table (2)
			31	Mirror Mat	VHL1089
			32	WEEE Label	See Contrast table (2)

(2) CONTRAST TABLE

DVR-530H-S/WYXV, WVXV, DVR-530H-AV/WYXV, WVXV, DVR-630H-S/WYXV and WVXV are constructed the same except for the following:

Mark	No.	Symbol and Description	DVR-530H-S /WYXV	DVR-530H-S /WVXV	DVR-530H-AV /WYXV	DVR-530H-AV /WVXV	DVR-630H-S /WYXV	DVR-630H-S /WVXV
⚠	1	Power Cable	ADG7090	ADG7103	ADG7090	ADG7103	ADG7090	ADG7103
NSP	4	Remote Control Unit	VXX2969	VXX2969	Not used	Not used	VXX2969	VXX2969
	5	Battery Cover	AZN7933	AZN7933	Not used	Not used	AZN7933	AZN7933
	6	Dry Cell Battery (R6P, AA)	VEM1030	VEM1030	Not used	Not used	VEM1030	VEM1030
	11	Operating Instructions (English)	Not used	VRB1371	Not used	Not used	Not used	VRB1371
	12	Operating Instructions (French)	VRC1251	Not used	Not used	Not used	VRC1251	Not used
	13	Operating Instructions (German)	VRC1252	Not used	Not used	Not used	VRC1252	Not used
	14	Operating Instructions (Italian)	VRC1253	Not used	Not used	Not used	VRC1253	Not used
	15	Operating Instructions (Dutch)	VRC1254	Not used	Not used	Not used	VRC1254	Not used
	16	Operating Instructions (Spanish)	VRC1255	Not used	Not used	Not used	VRC1255	Not used
	17	Dual Layer IM (English)	Not used	VRB1392	Not used	VRB1392	Not used	VRB1392
	18	Dual Layer IM (French)	VRC1280	Not used	VRC1280	Not used	VRC1280	Not used
	19	Dual Layer IM (German)	VRC1281	Not used	VRC1281	Not used	VRC1281	Not used
NSP	20	Dual Layer IM (Italian)	VRC1282	Not used	VRC1282	Not used	VRC1282	Not used
	21	Dual Layer IM (Spanish)	VRC1283	Not used	VRC1283	Not used	VRC1283	Not used
	22	Dual Layer IM (Dutch)	VRC1284	Not used	VRC1284	Not used	VRC1284	Not used
	23	User Card	VRY1157	VRY1157	Not used	Not used	Not used	Not used
	24	User Card	VRY1158	Not used	Not used	Not used	Not used	Not used
	25	Polyethylene Bag (A4 x2)	VHL1091	Not used	Not used	Not used	VHL1091	Not used
NSP	30	Packing Case	VHG2600	VHG2630	VHG2619	VHG2622	VHG2601	VHG2603
	32	WEEE Label	VRW2231	VRW2231	Not used	Not used	VRW2231	VRW2231

2.2 EXTERIOR SECTION

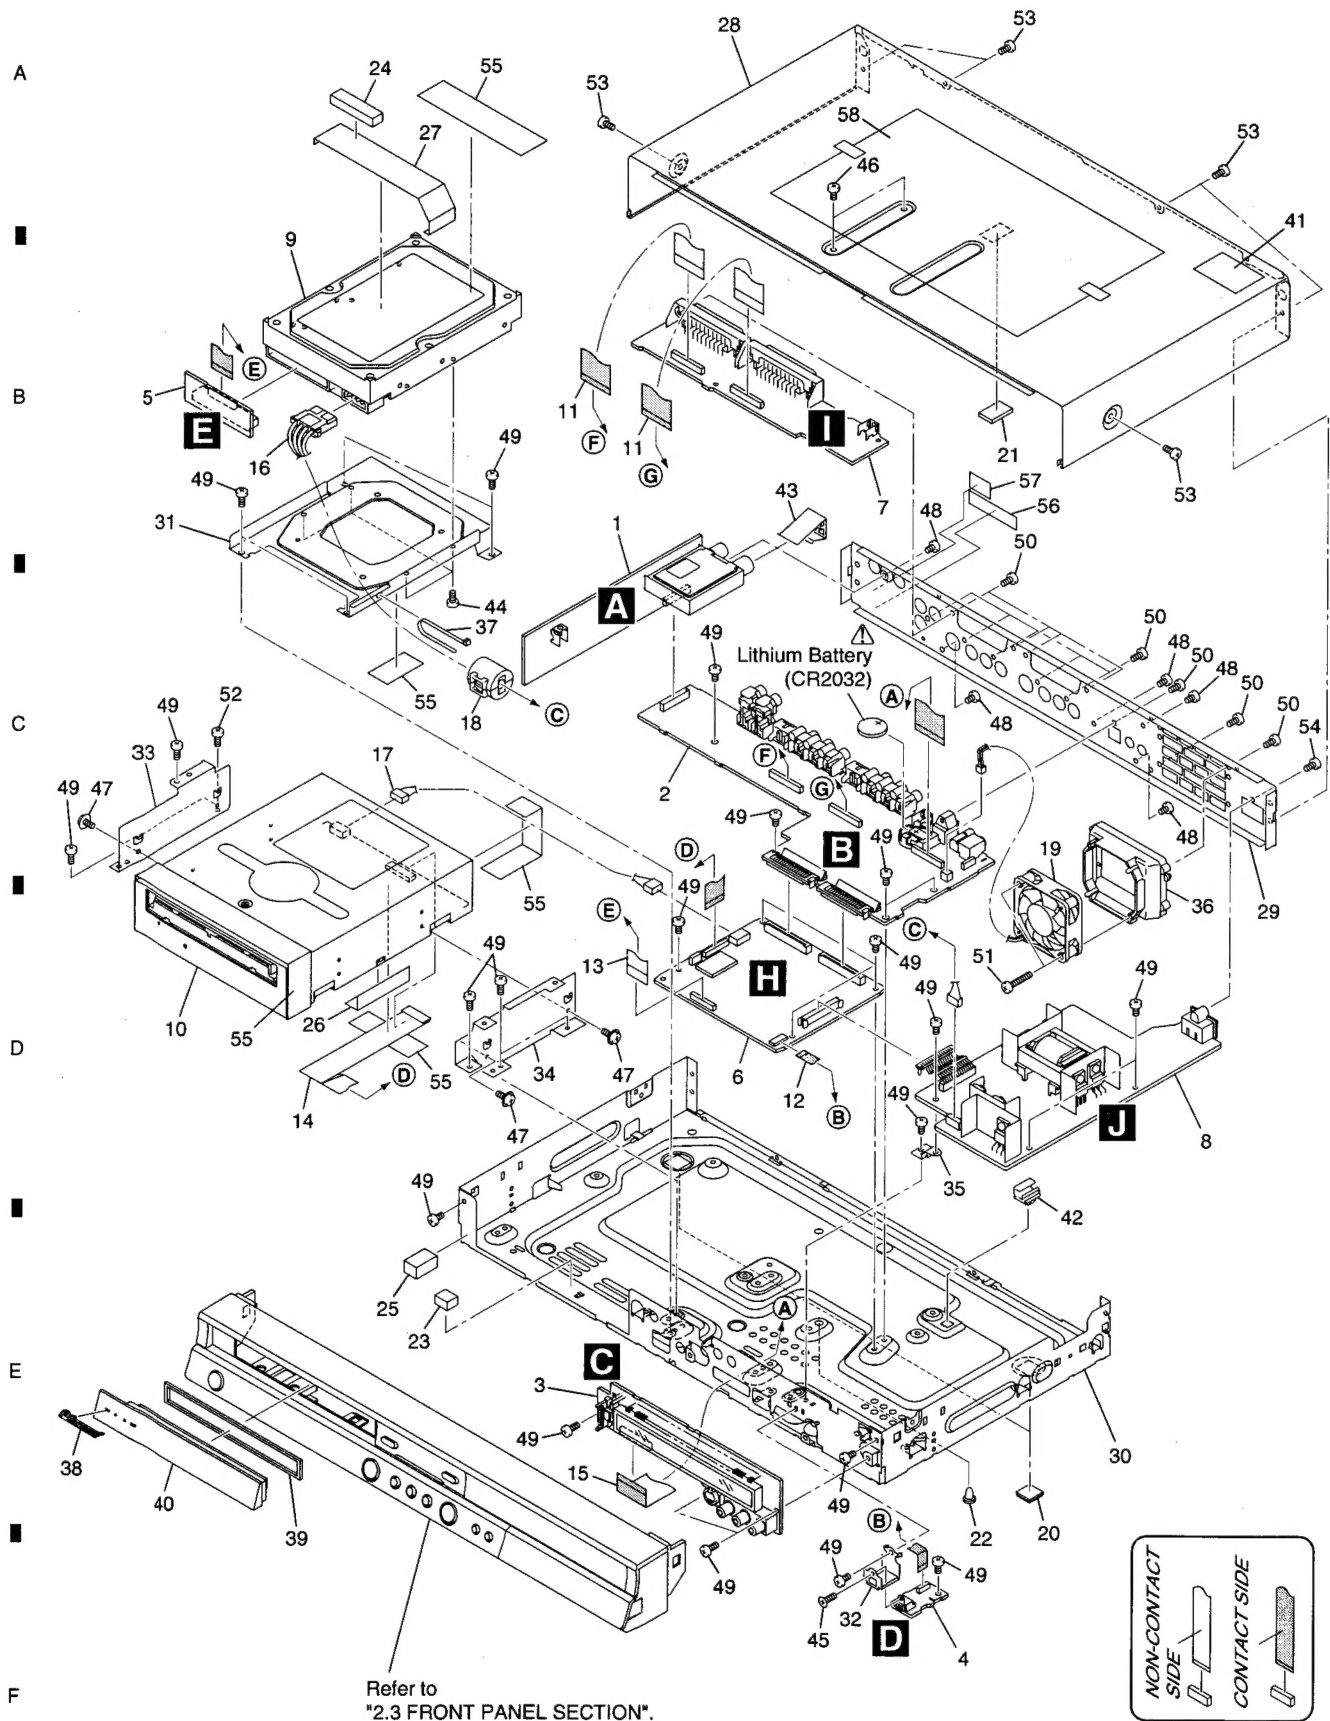



Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	TUNB Assy (for service)	VXX3025	NSP 31	HDD Stay	VNE2369
2	JACB Assy	VWV2115	32	DV Angle	VNE2370
3	FLJB Assy	VWG2536	NSP 33	Writer Stay L	VNE2371
4	DVJB Assy	VWG2523	NSP 34	Writer Stay R	VNE2372
5	ATAB Assy	VWV2123	NSP 35	PCB Base	VNE2378
6	MAIN Assy (for service)	VXX2997	36	Fan Duct	VNK5693
7	SCRB Assy (for service)	VXX3021	NSP 37	Binder (BK-1)	ZCA-BK1
8	POWER SUPPLY Unit	VWR1392	38	Pioneer Name Plate	VAM1148
9	HDD	See Contrast table (2)	39	Tray Sheet	VEC2467
10	DRIVE Assy R9R	VXX2987	40	Tray Panel EB	VNK5715
11	Flexible Cable (27P)	VDA2063	41	Bonnet Label	See Contrast table (2)
12	Flexible Cable (16P)	VDA2064	NSP 42	P. Plate Holder	PNY-405
13	Flexible Cable (40P)	VDA2065	43	Earth Plate TU	VBK1156
14	Flexible Cable (40P)	VDA2066	44	#6-32 Screw	DBA1125
15	Flexible Cable (27P)	VDA2067	45	Screw	VBA1098
16	Housing Assy (4P)	VKP2357	46	Screw	VBA1104
17	Housing Assy (4P)	VKP2358	47	Screw	AMZ30P06OFTC
18	Ferrite Core	VTH1050	48	Screw	BBZ30P04OFTC
19	DC Fan Motor	VXM1120	49	Screw	BBZ30P06OFTC
20	Rubber Foot	VEB1349	50	Screw	BPZ30P08OFTC
21	Rubber Spacer (CR)	VEB1373	51	Screw	BPZ30P25OFTC
NSP 22	PC Support	VEC1749	52	Screw	BSR30P06OFTC
23	Gasket 10 x 7T	VEC2472	53	Screw	BSZ30P06OFTC
24	Gasket 40 x 5T	VEC2473	54	Screw	PBZ30P08OFTC
25	Gasket 10 x 25T	VEC2475	NSP 55	Tape	ZTA-156A-19
26	Aluminum Tape 50 x 25	VEF1058	NSP 56	Serial Label S	VRW2188
27	Aluminum Tape 135 x 25	VEF1059	NSP 57	ID Label Assy	VXW1006
28	Bonnet Case S	VXX3039	58	HDD Caution 8L B	VRR1062
29	Rear Panel	See Contrast table (2)			
NSP 30	Base Chassis	VNB1052			

(2) CONTRAST TABLE

DVR-530H-S/WYXV, WVXV, DVR-530H-AV/WYXV, WVXV, DVR-630H-S/WYXV and WVXV are constructed the same except for the following:

Mark	No.	Symbol and Description	DVR-530H-S /WYXV	DVR-530H-S /WVXV	DVR-530H-AV /WYXV	DVR-530H-AV /WVXV	DVR-630H-S /WYXV	DVR-630H-S /WVXV
	9	HDD 160G WD1600BBGUCS	VXF1068	VXF1068	VXF1068	VXF1068	Not used	Not used
	9	HDD 250G ST3250823 S	Not used	Not used	Not used	Not used	VXF1082	VXF1082
	29	Rear Panel	VNA2772	VNA2772	VNA2773	VNA2773	VNA2793	VNA2793
	41	Bonnet Label	VRW2172	VRW2172	VRW2181	VRW2181	VRW2192	VRW2192

2.3 FRONT PANEL SECTION

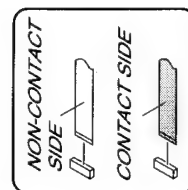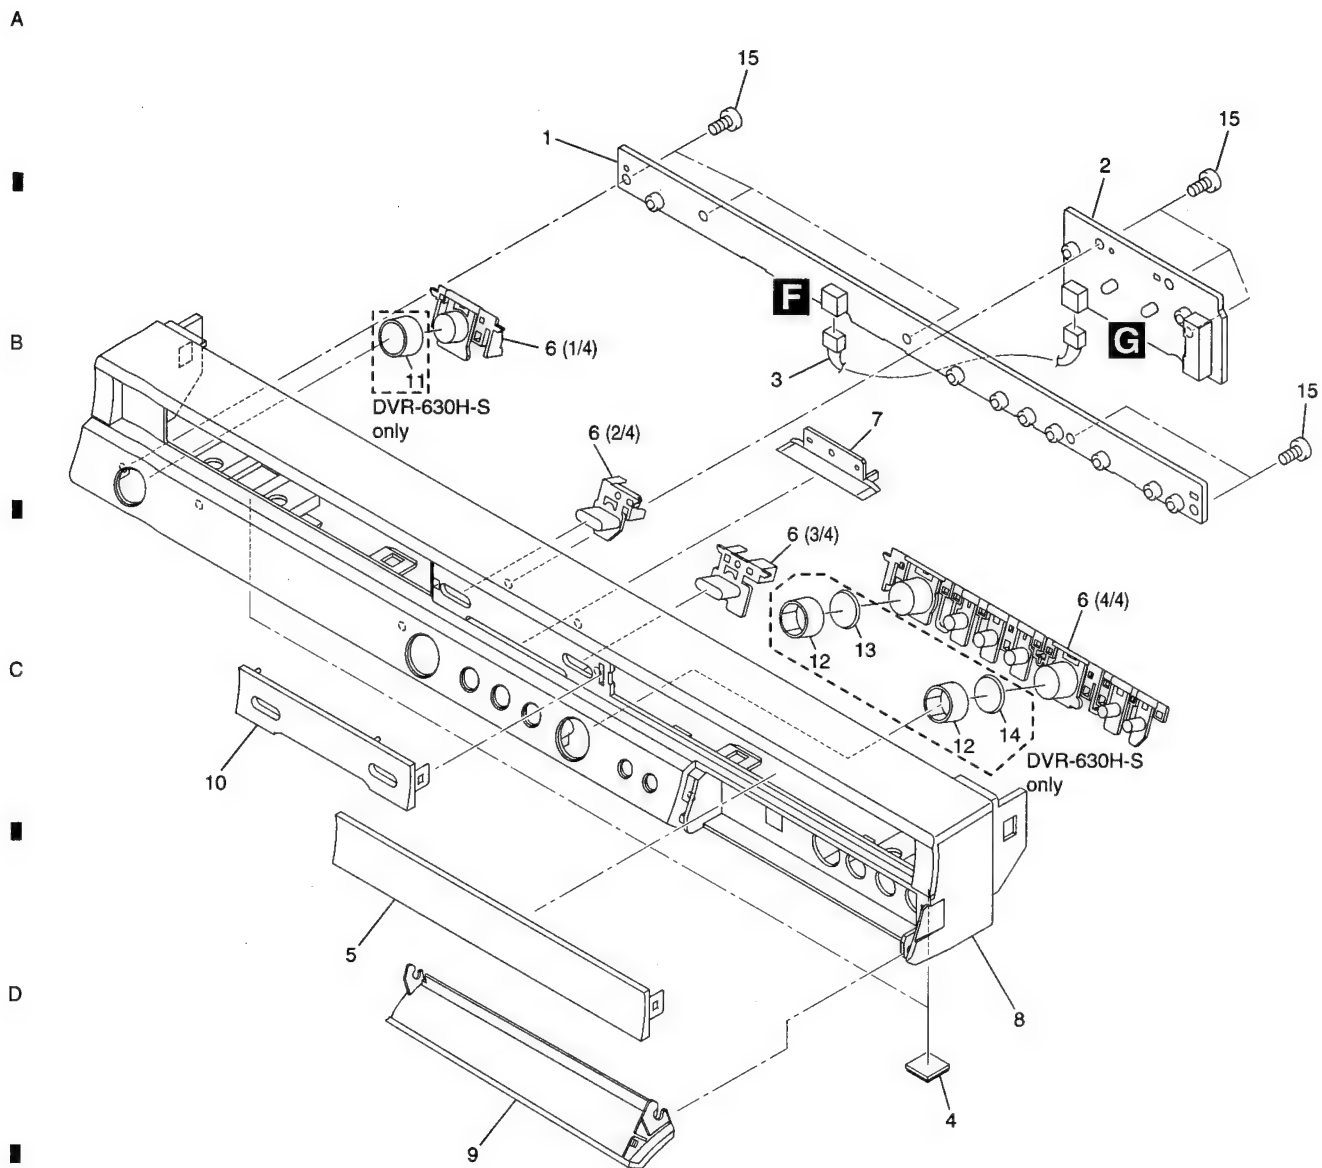

(1) FRONT PANEL SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	PSWB Assy	VWG2526
2	RSWB Assy	VWG2530
3	Housing Assy (3P)	VKP2359
4	Rubber Foot	VEB1349
5	FL Lens E	VNK5706
6	Main Key	See Contrast table (2)
7	Center Lens E	VNK5713
8	Front Panel E	See Contrast table (2)
9	Door E	See Contrast table (2)
10	Center Panel EB2	VNK5714
11	Key Top A	See Contrast table (2)
12	Ring E	See Contrast table (2)
13	PLAY Plate E	See Contrast table (2)
14	REC Plate E	See Contrast table (2)
15	Screw	BPZ30P080FTC

(2) CONTRAST TABLE


DVR-530H-S/WYXV, WVXV, DVR-530H-AV/WYXV, WVXV, DVR-630H-S/WYXV and WVXV are constructed the same except for the following:

Mark	No.	Symbol and Description	DVR-530H-S /WYXV	DVR-530H-S /WVXV	DVR-530H-AV /WYXV	DVR-530H-AV /WVXV	DVR-630H-S /WYXV	DVR-630H-S /WVXV
	6	Main Key E1	VNK5707	VNK5707	VNK5707	VNK5707	Not used	Not used
	6	Main Key E2	Not used	Not used	Not used	Not used	VNK5704	VNK5704
	8	Front Panel E	VNK5763	VNK5763	VNK5763	VNK5763	VNK5816	VNK5816
	9	Door E	VNK5708	VNK5708	VNK5708	VNK5708	VNK5834	VNK5834
	11	Key Top A	Not used	Not used	Not used	Not used	VNK5717	VNK5717
	12	Ring E	Not used	Not used	Not used	Not used	VNK5719	VNK5719
	13	PLAY Plate E	Not used	Not used	Not used	Not used	VNK5720	VNK5720
	14	REC Plate E	Not used	Not used	Not used	Not used	VNK5721	VNK5721


3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM

3.1 BLOCK DIAGRAM

3.1.1 OVERALL BLOCK DIAGRAM

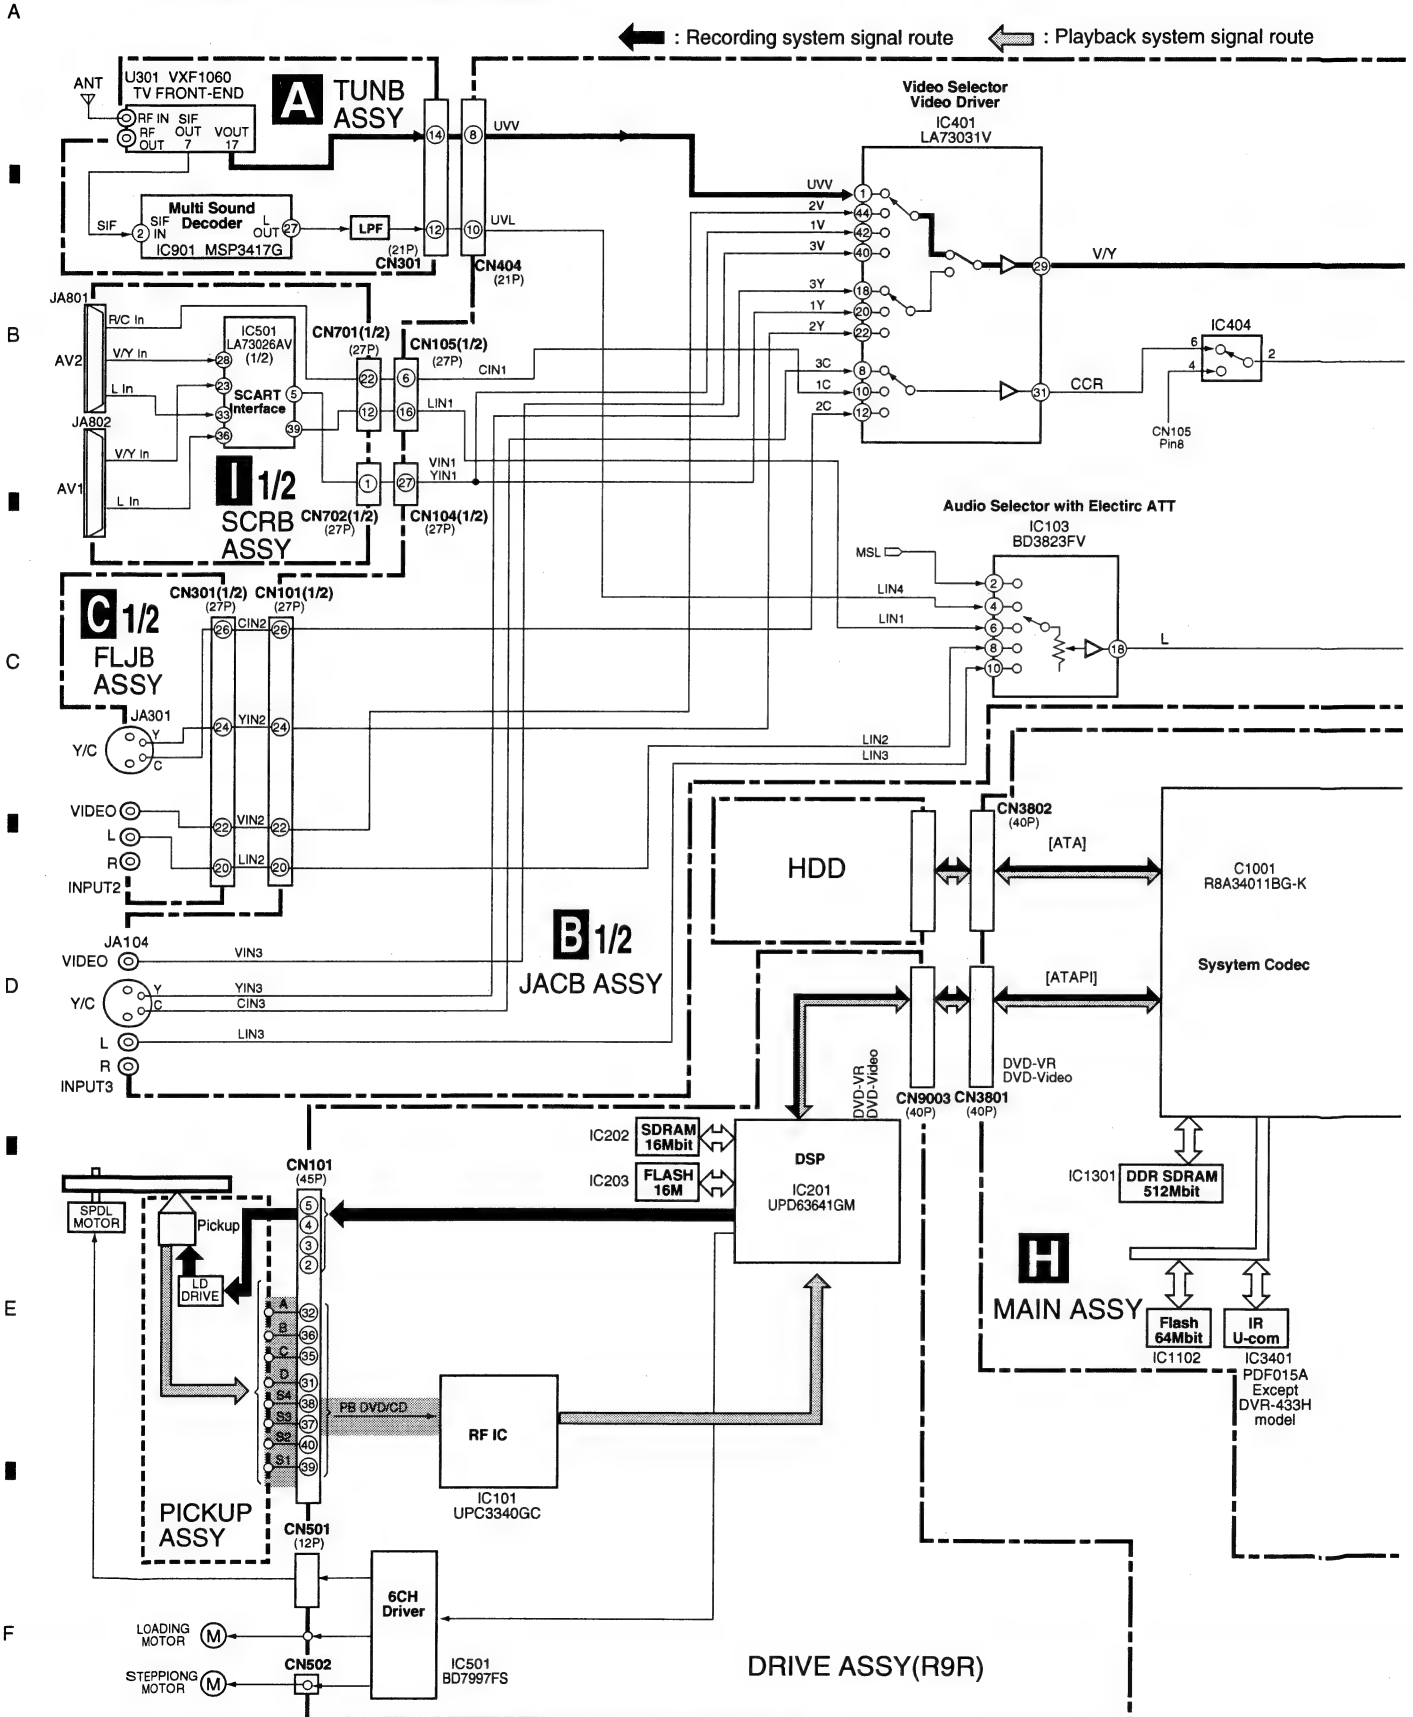

3.1.2 MAIN ASSY

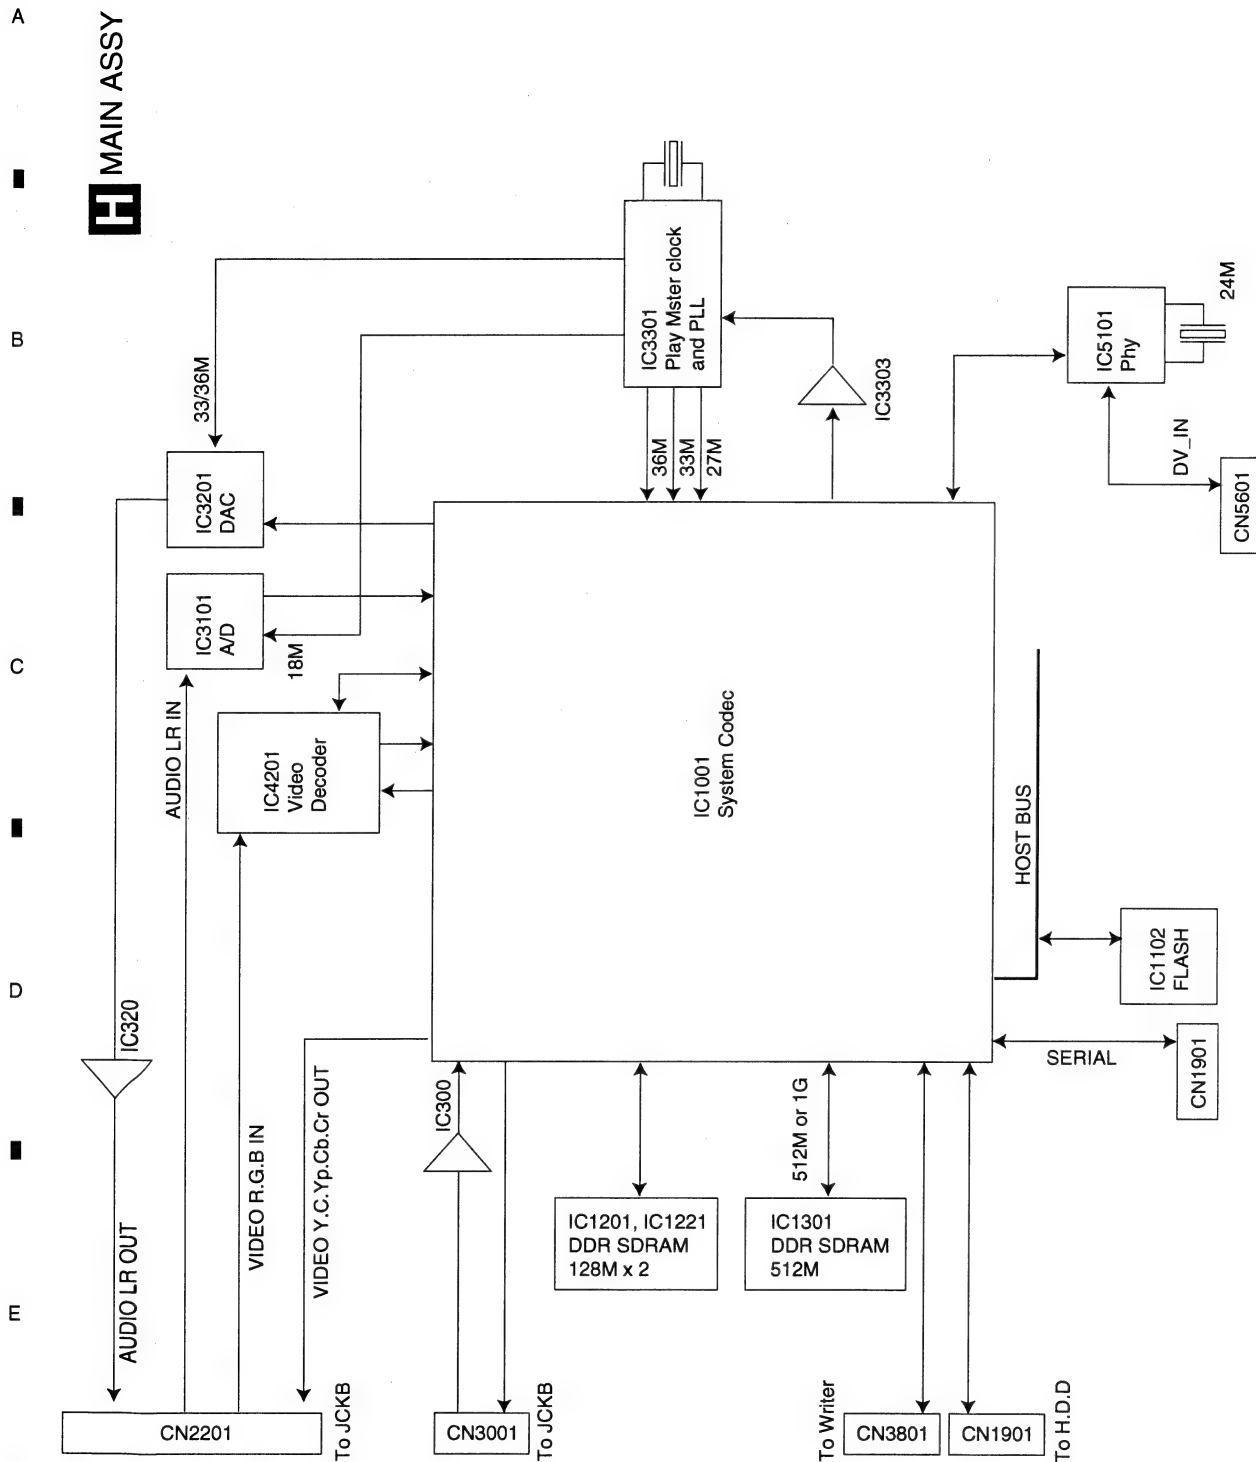



5



6



7



8



A



B



C



D



E



F



5



6



7



17



DVR-530H-S

3.2 OVERALL WIRING DIAGRAM

A


B

C

D

E

F

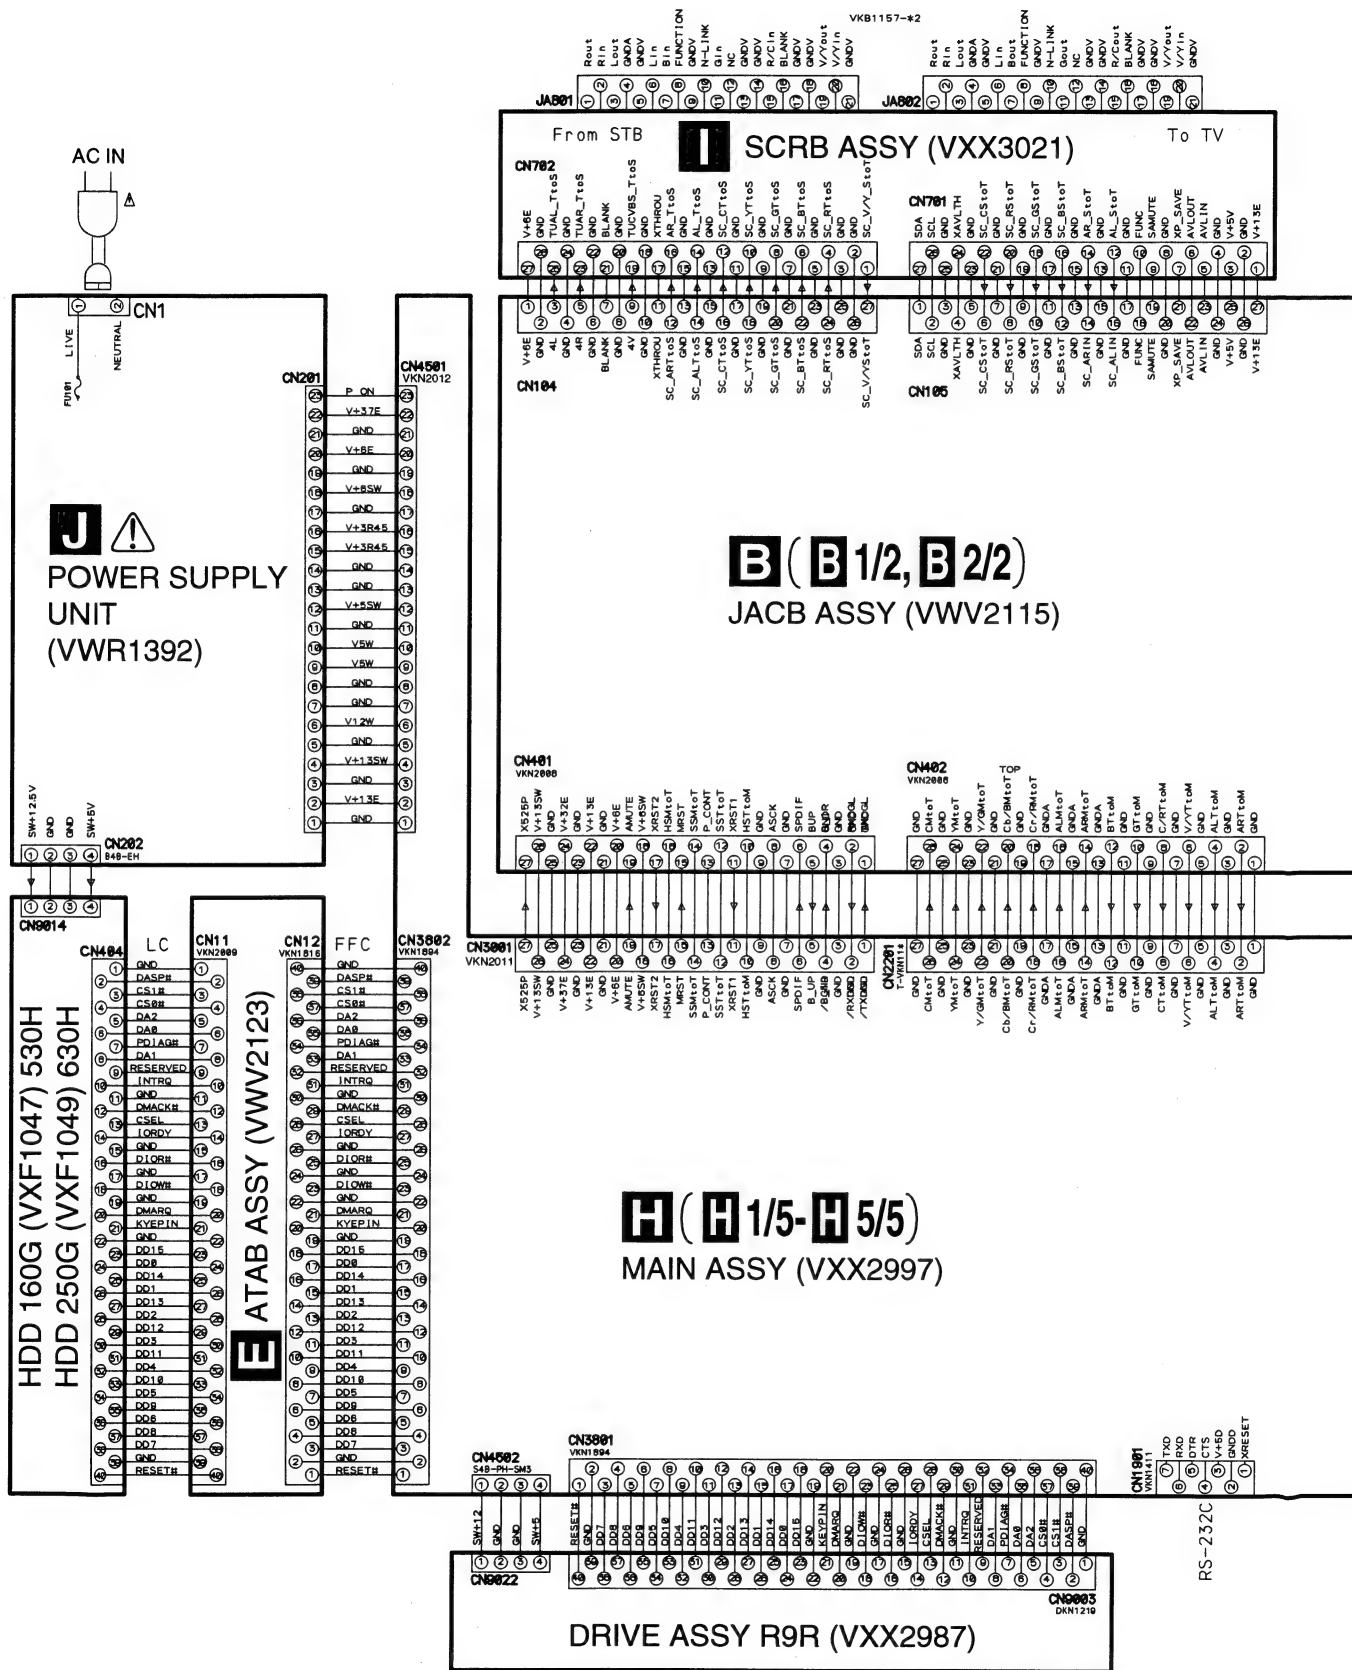



E


C


□

E


E

3.3 TUNB ASSY

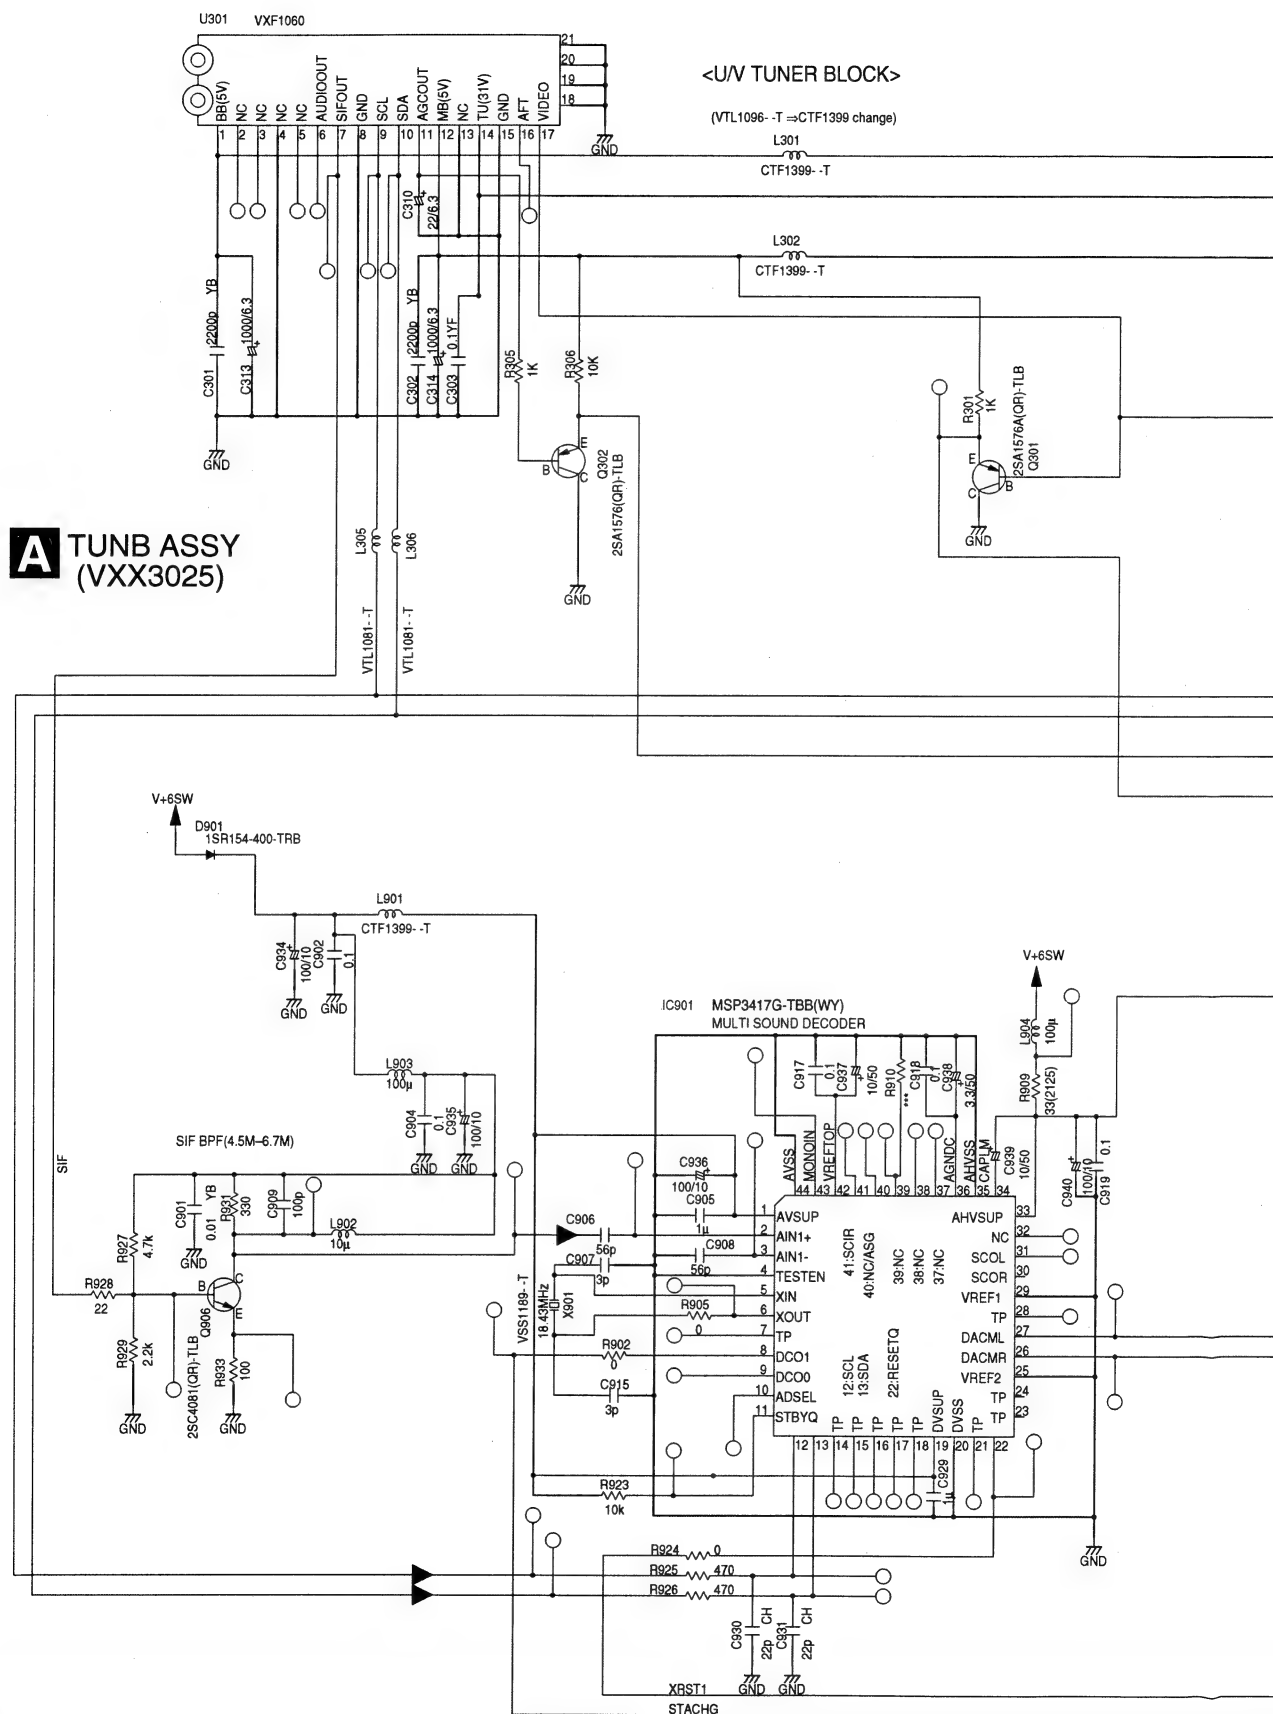

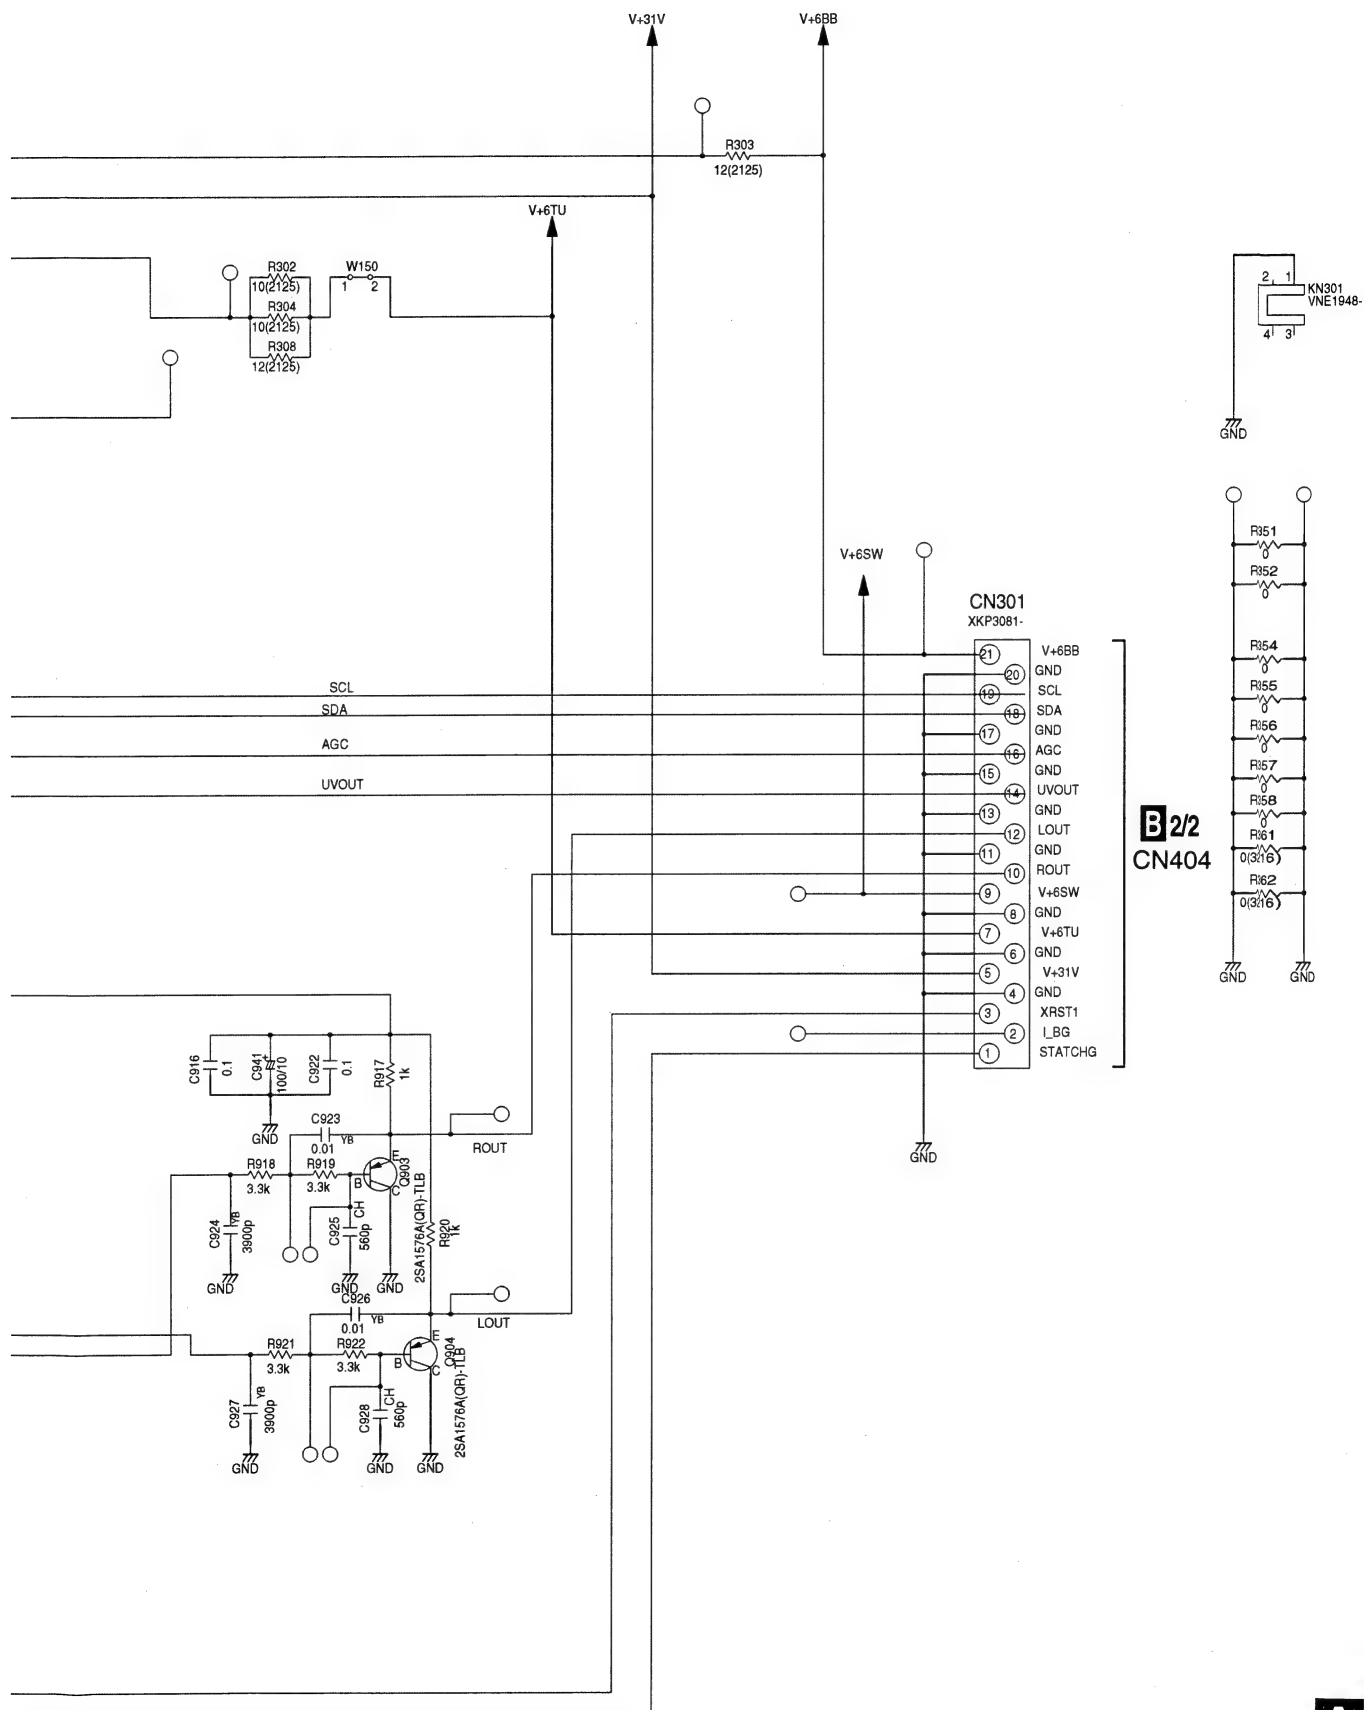


3.5 JACB ASSY(2/2)

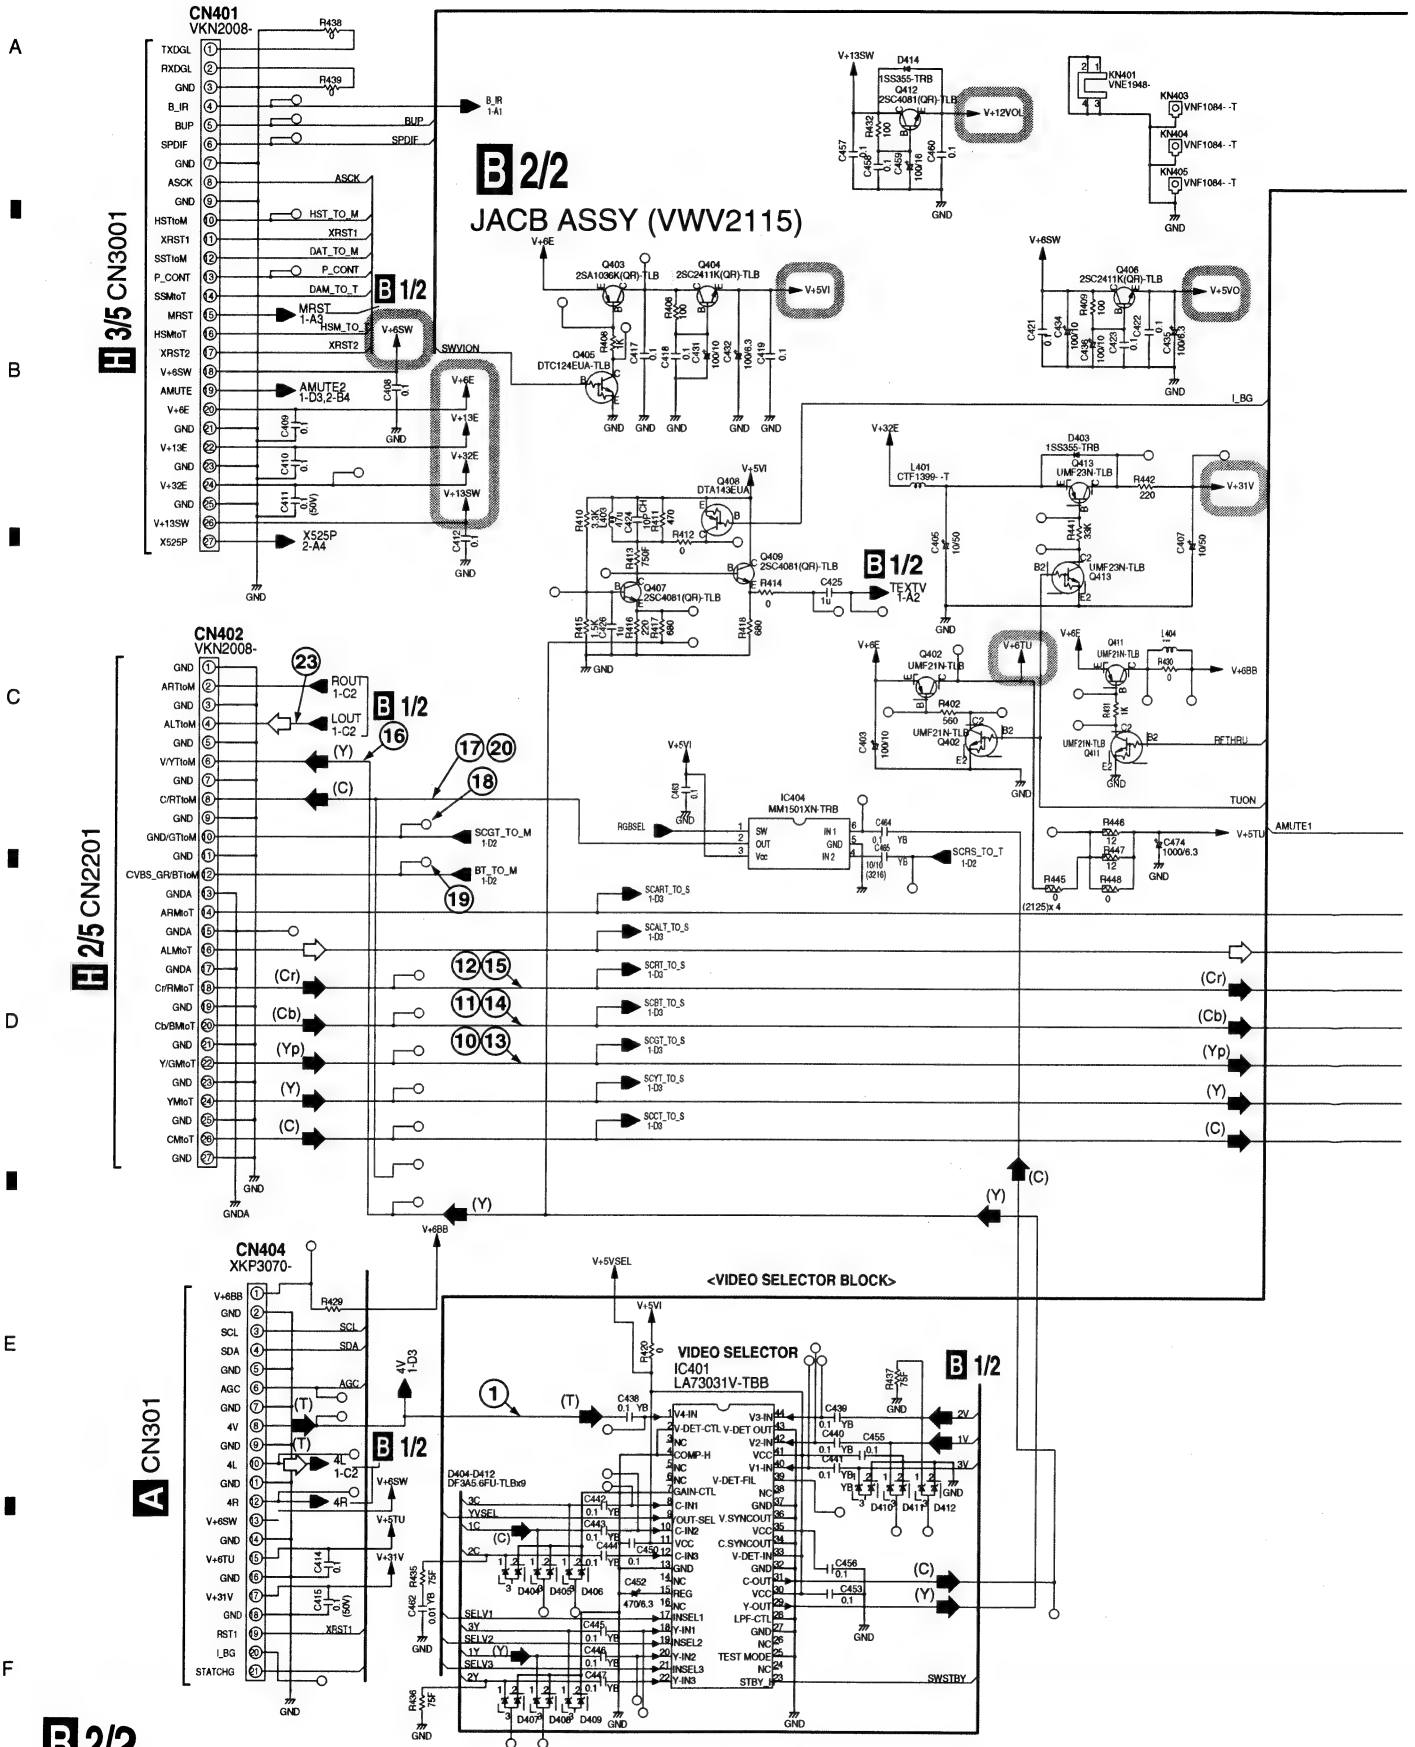


3.6 DVJB ASSY

D DVJB ASSY (VWG2523)

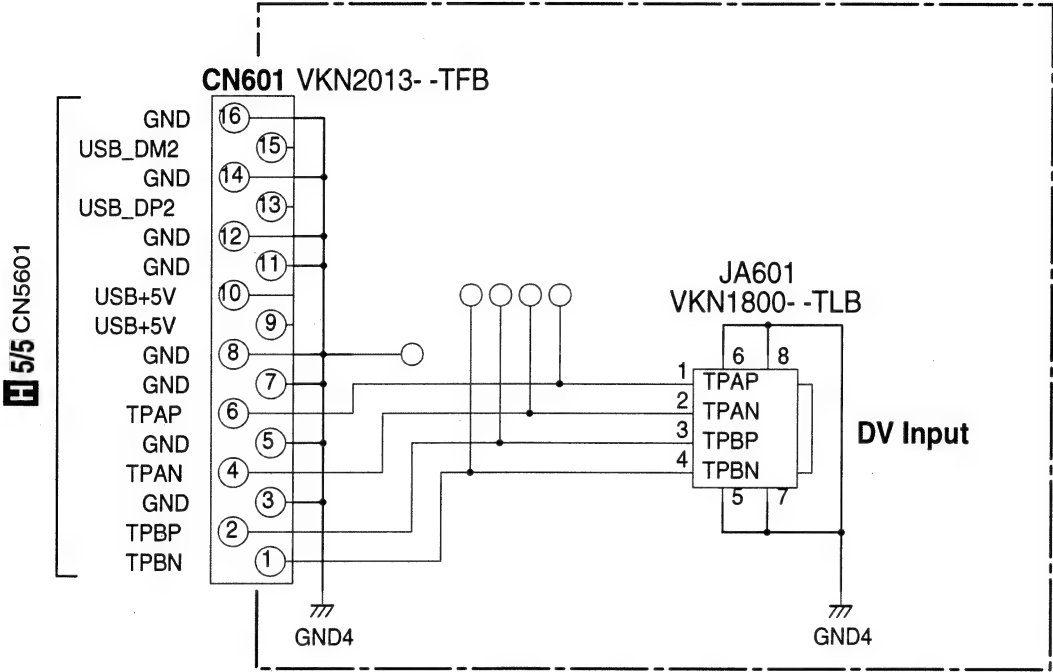


3.7 ATAB ASSY


E ATAB ASSY (VWV2123)(for HDD)

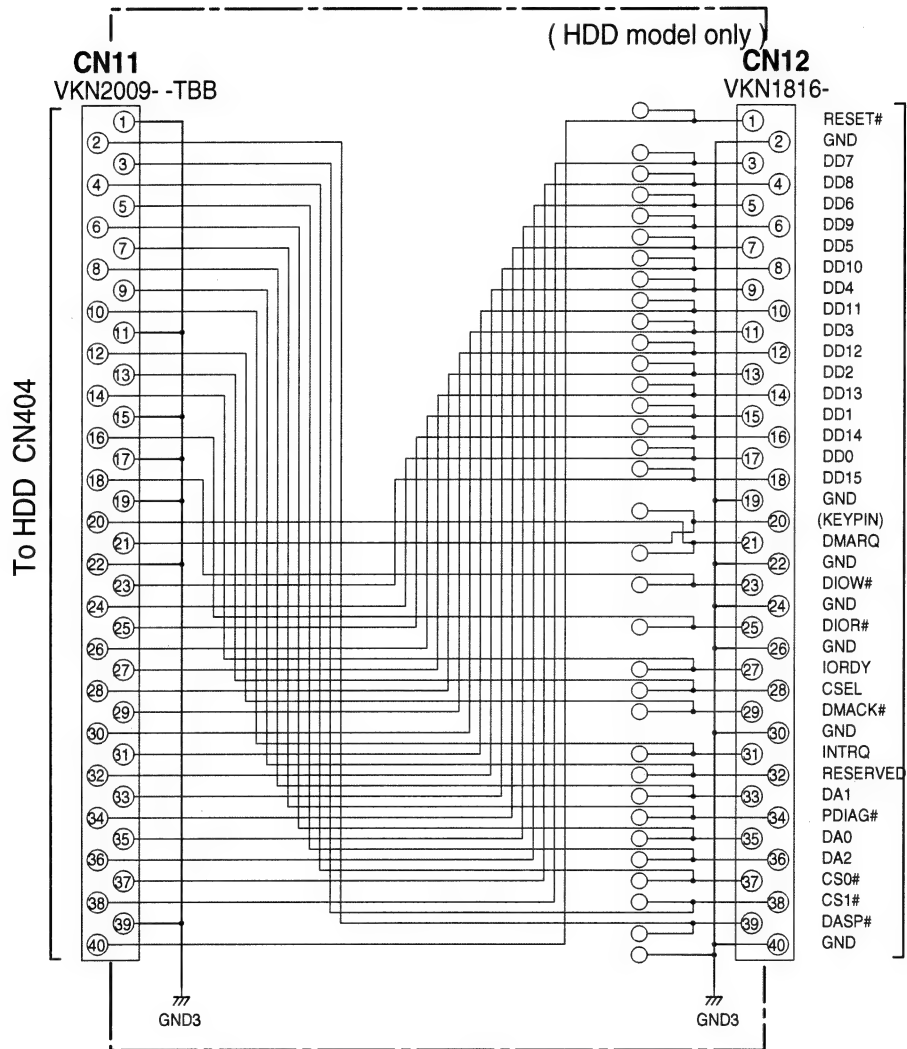


3.8 PSWB and RSWB ASSYS

F PSWB ASSY (VWG2526)

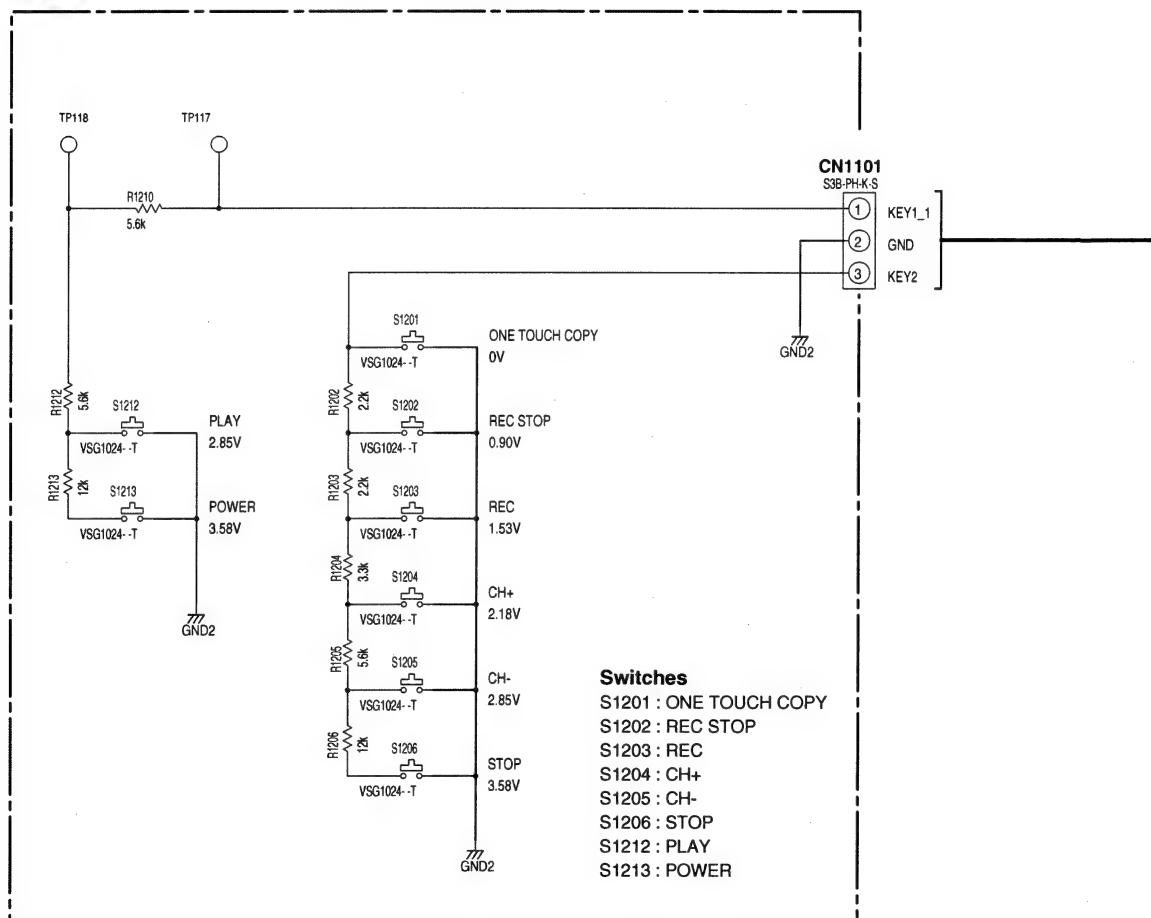

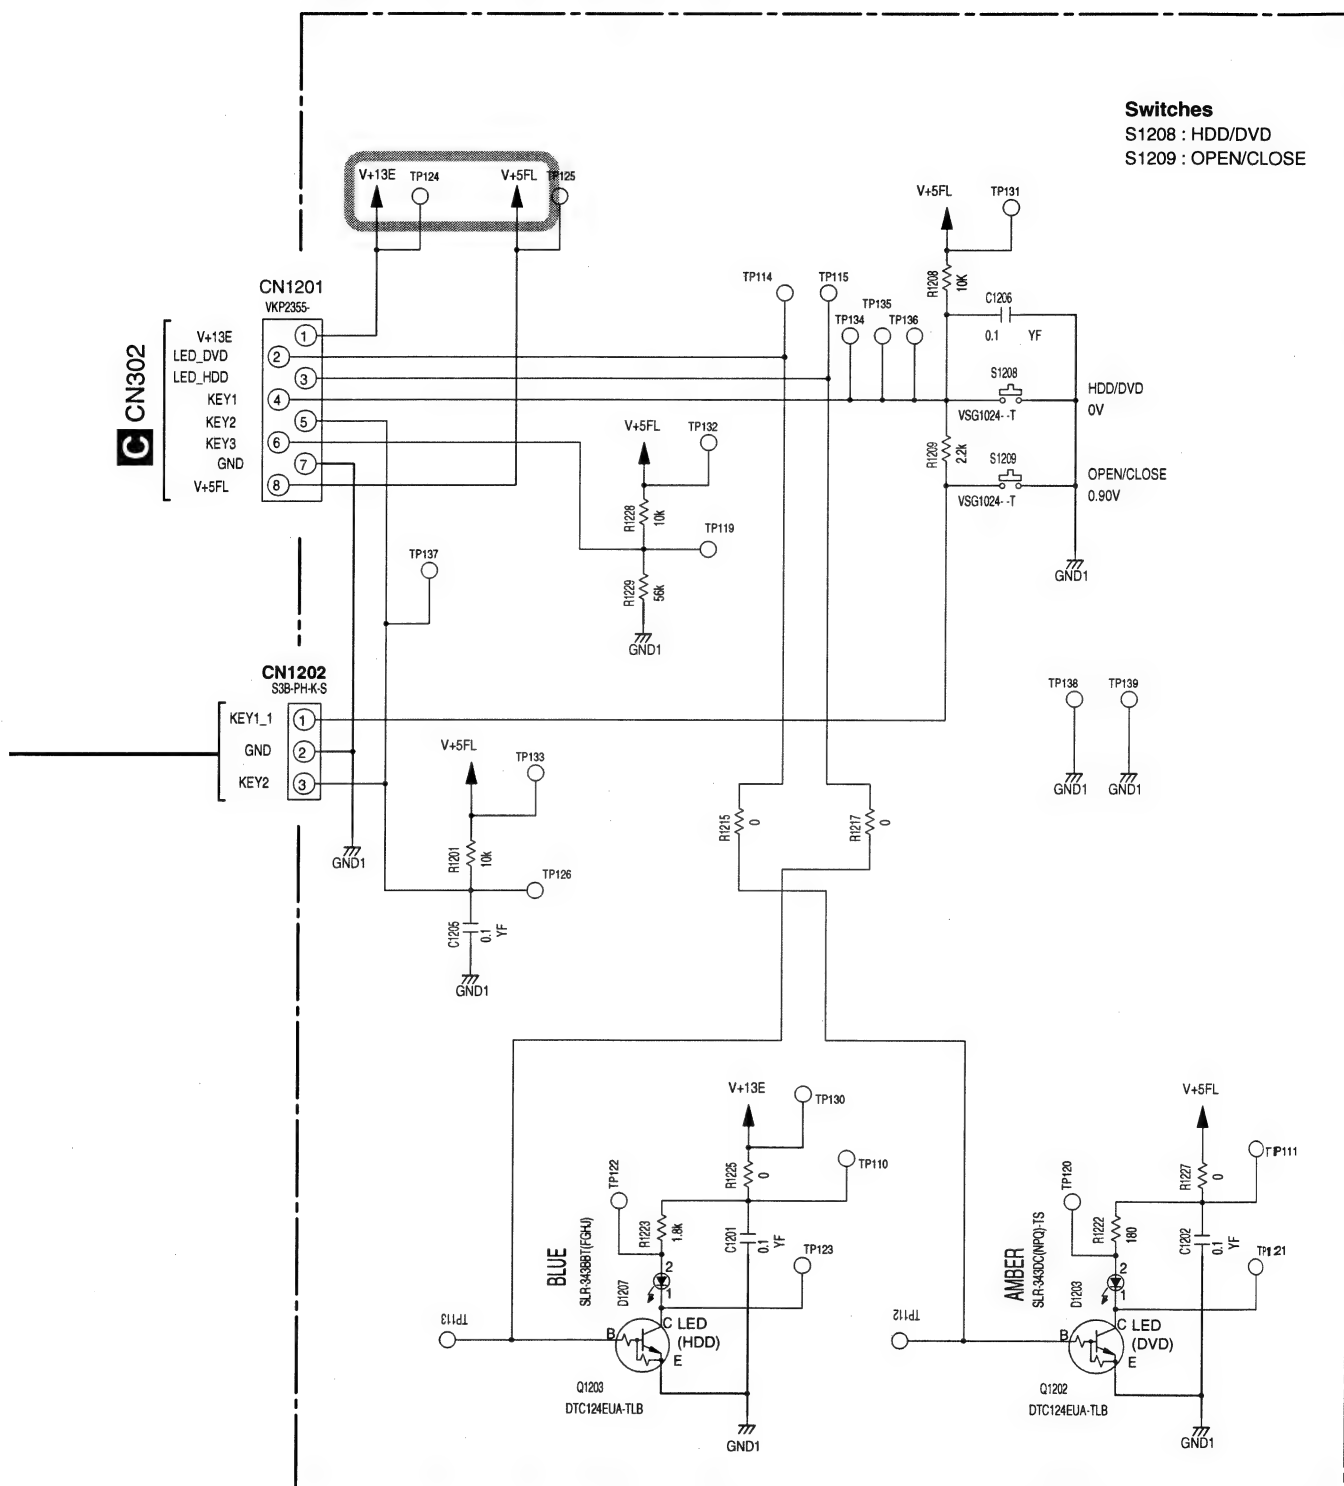
G RSWB ASSY (VWG2530)

3.9 MAIN ASSY(1/5)

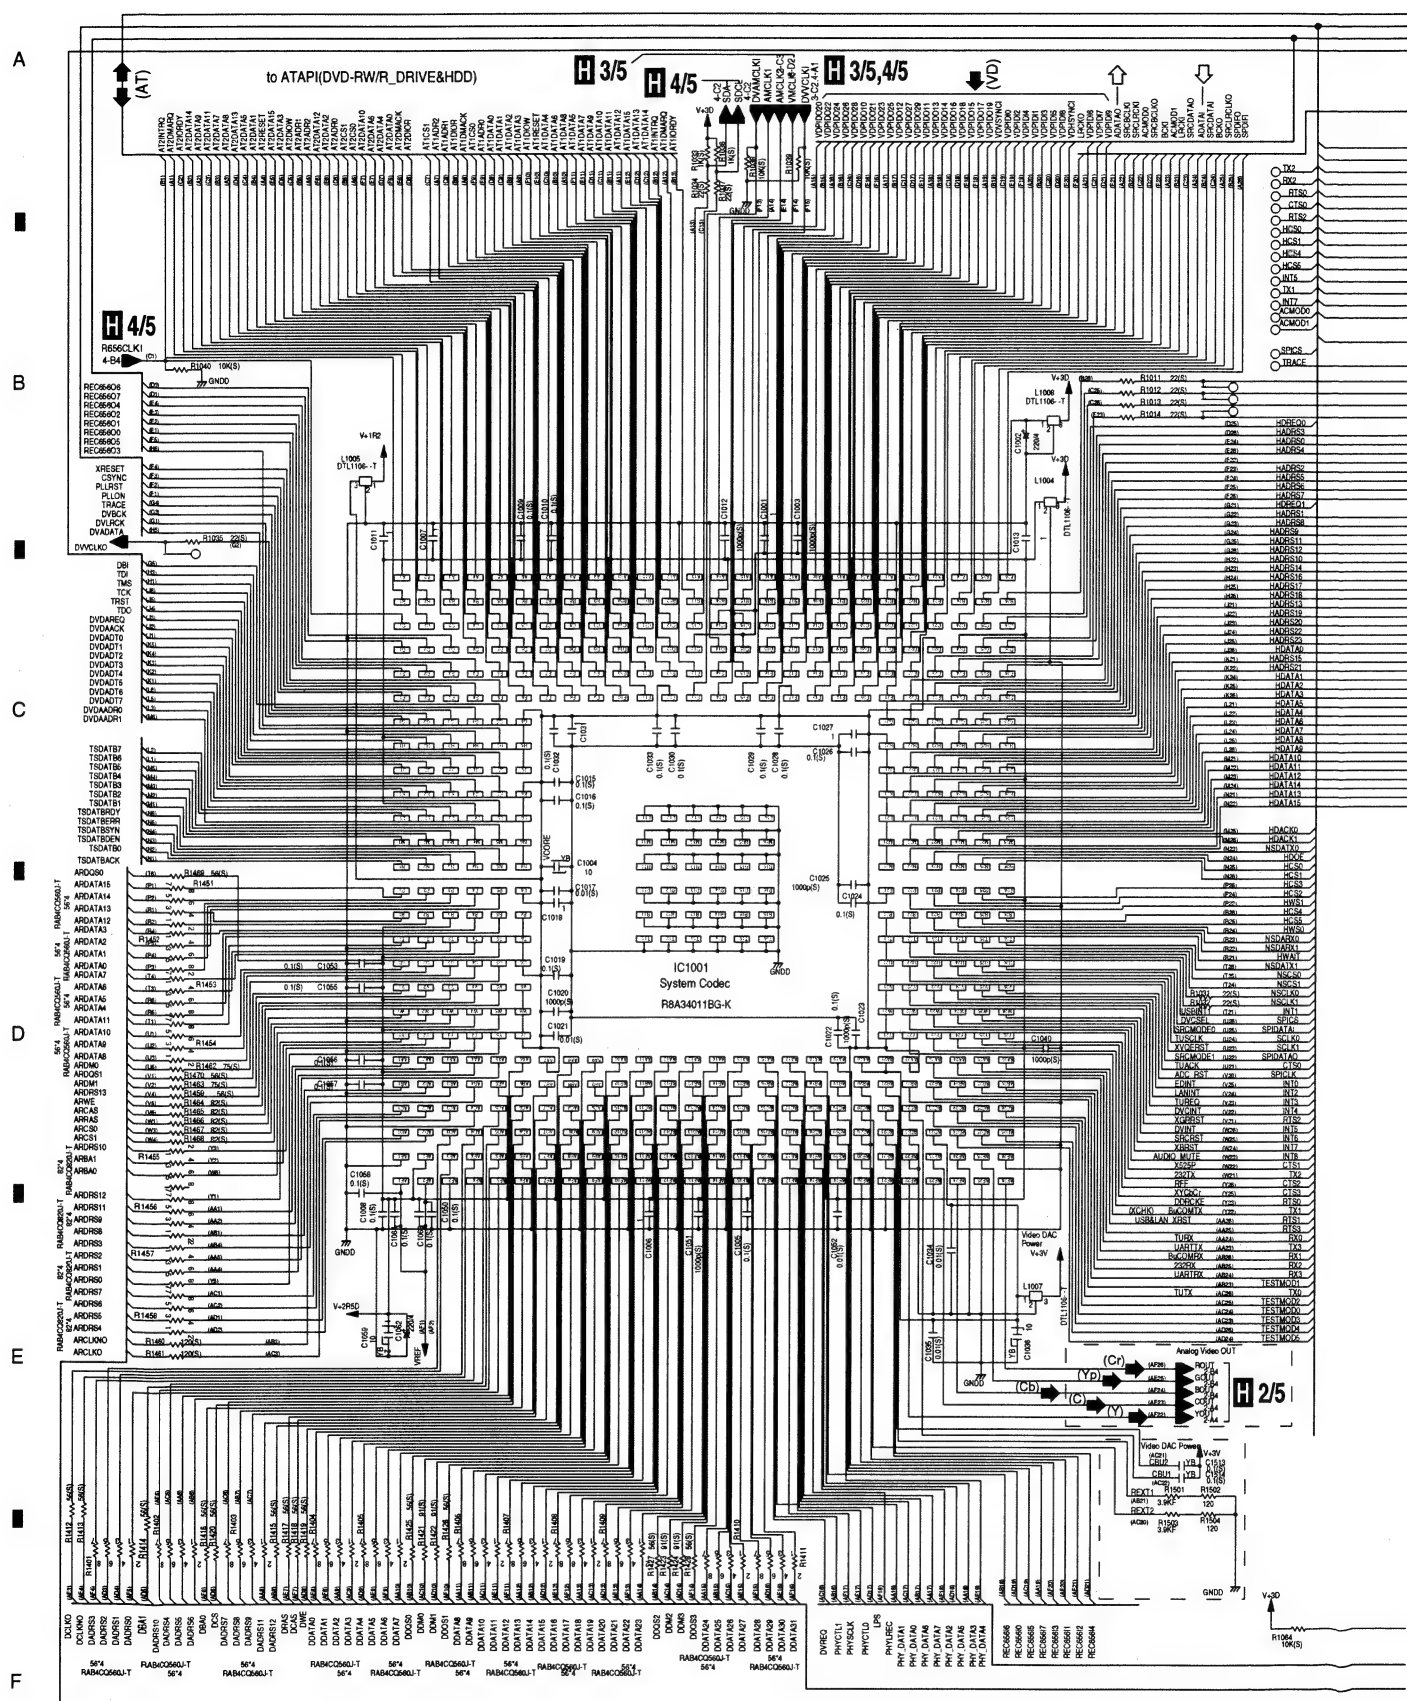

1/5

DVR-530H-S

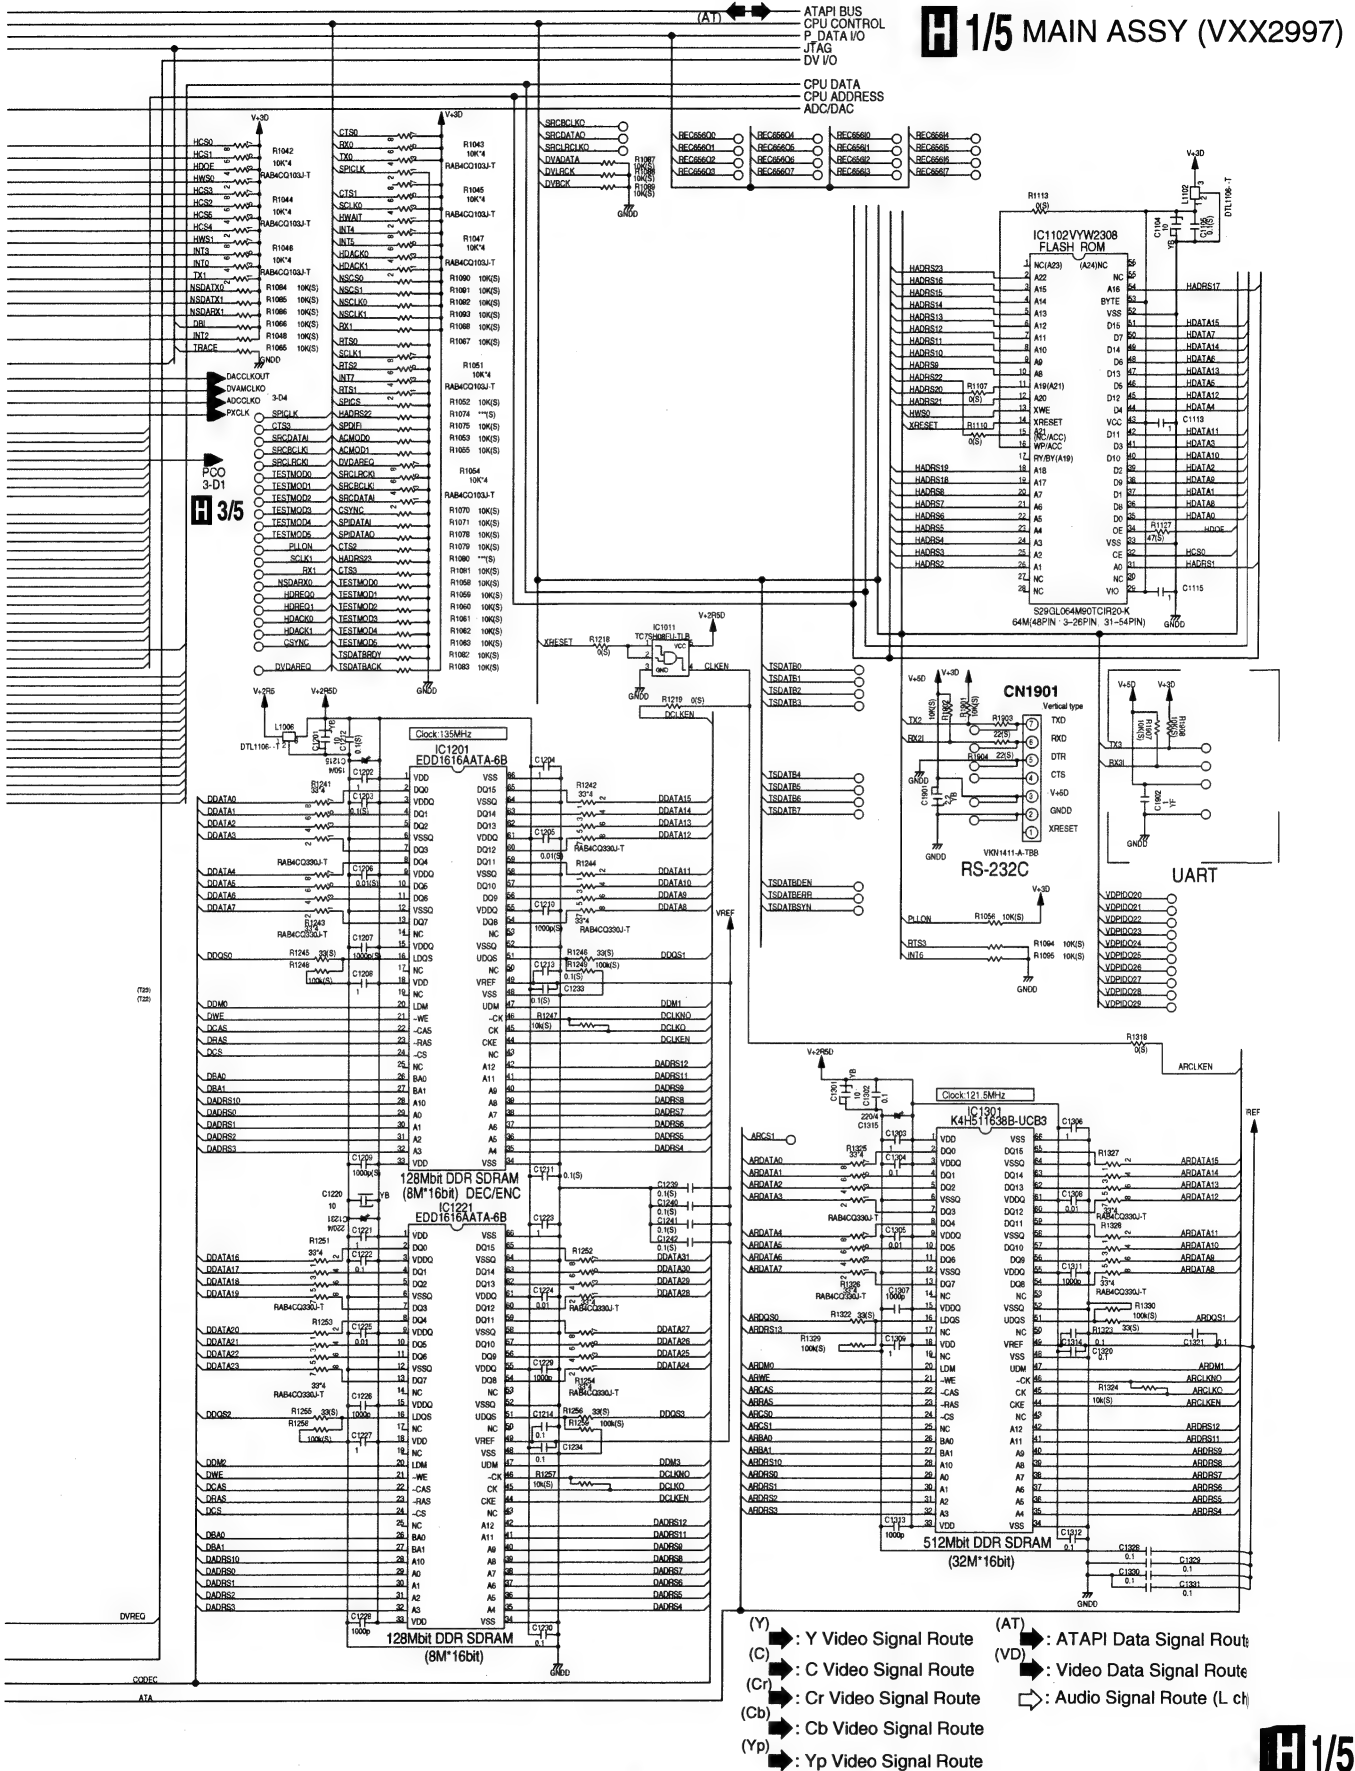

A

B


C

D

E

F

3.10 MAIN ASSY(2/5)

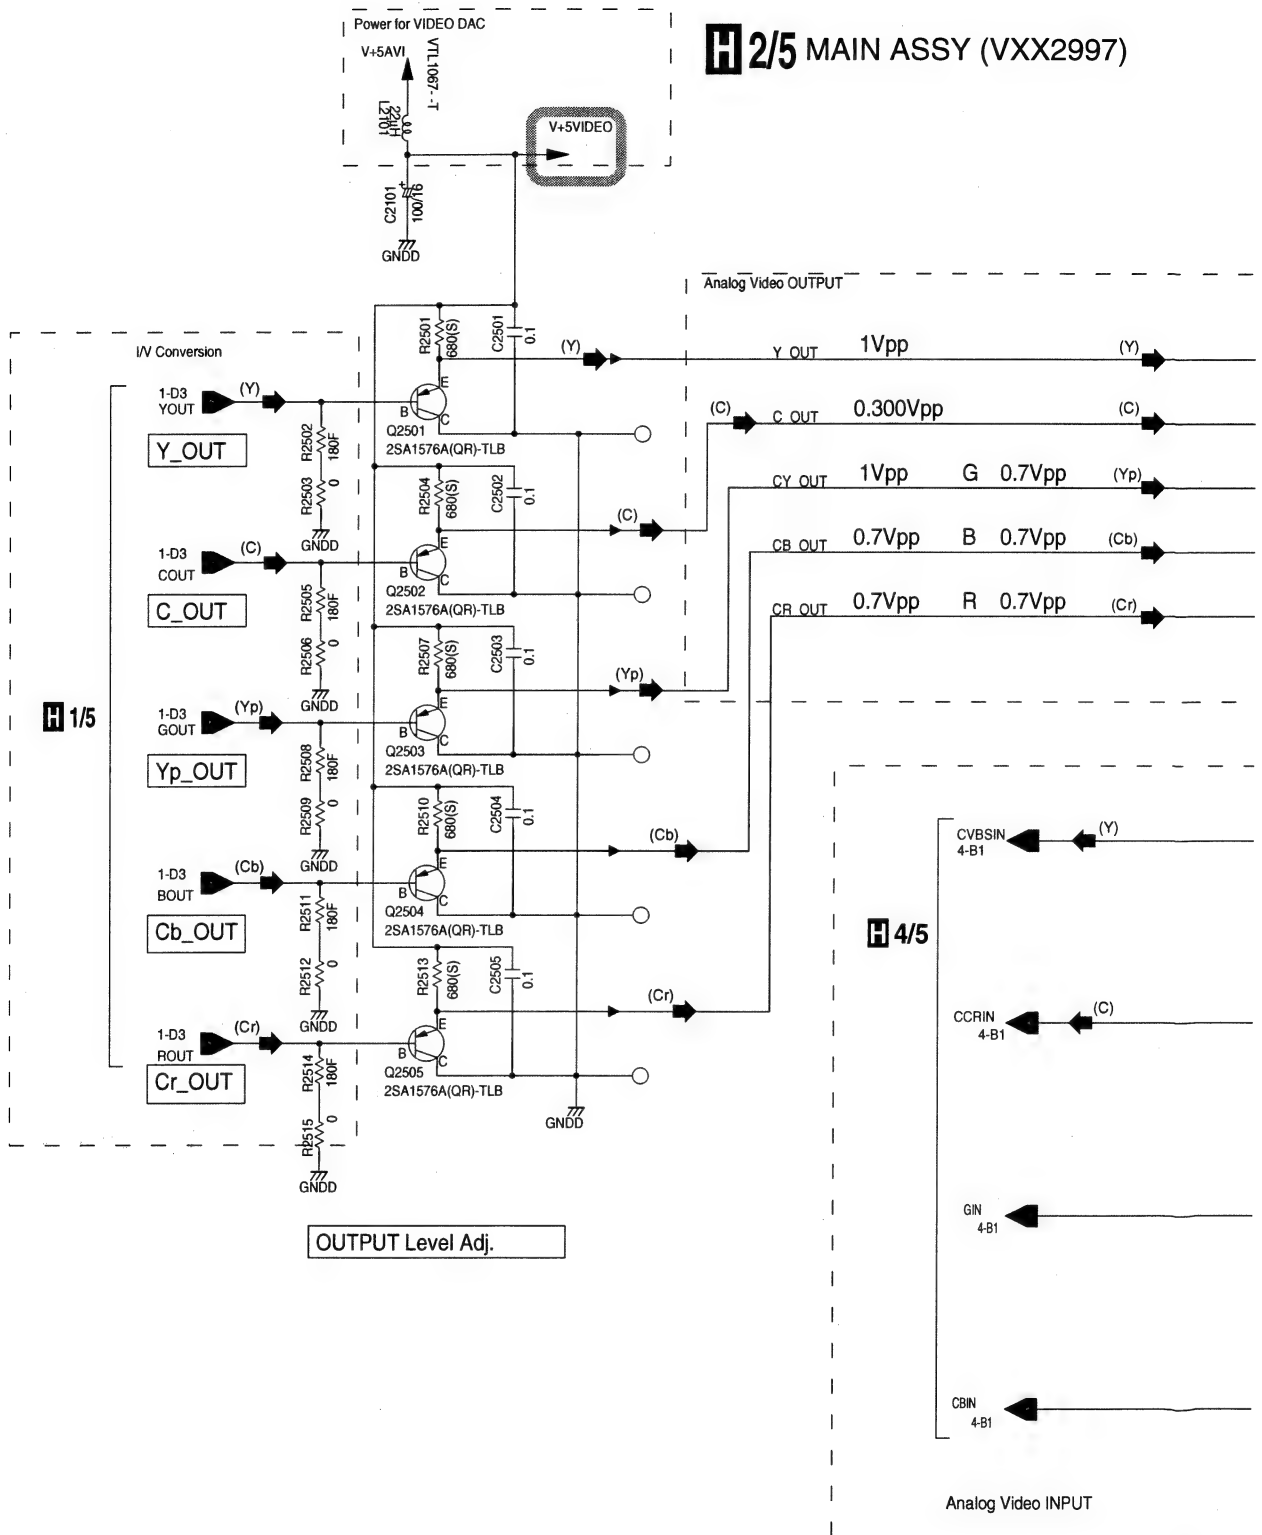




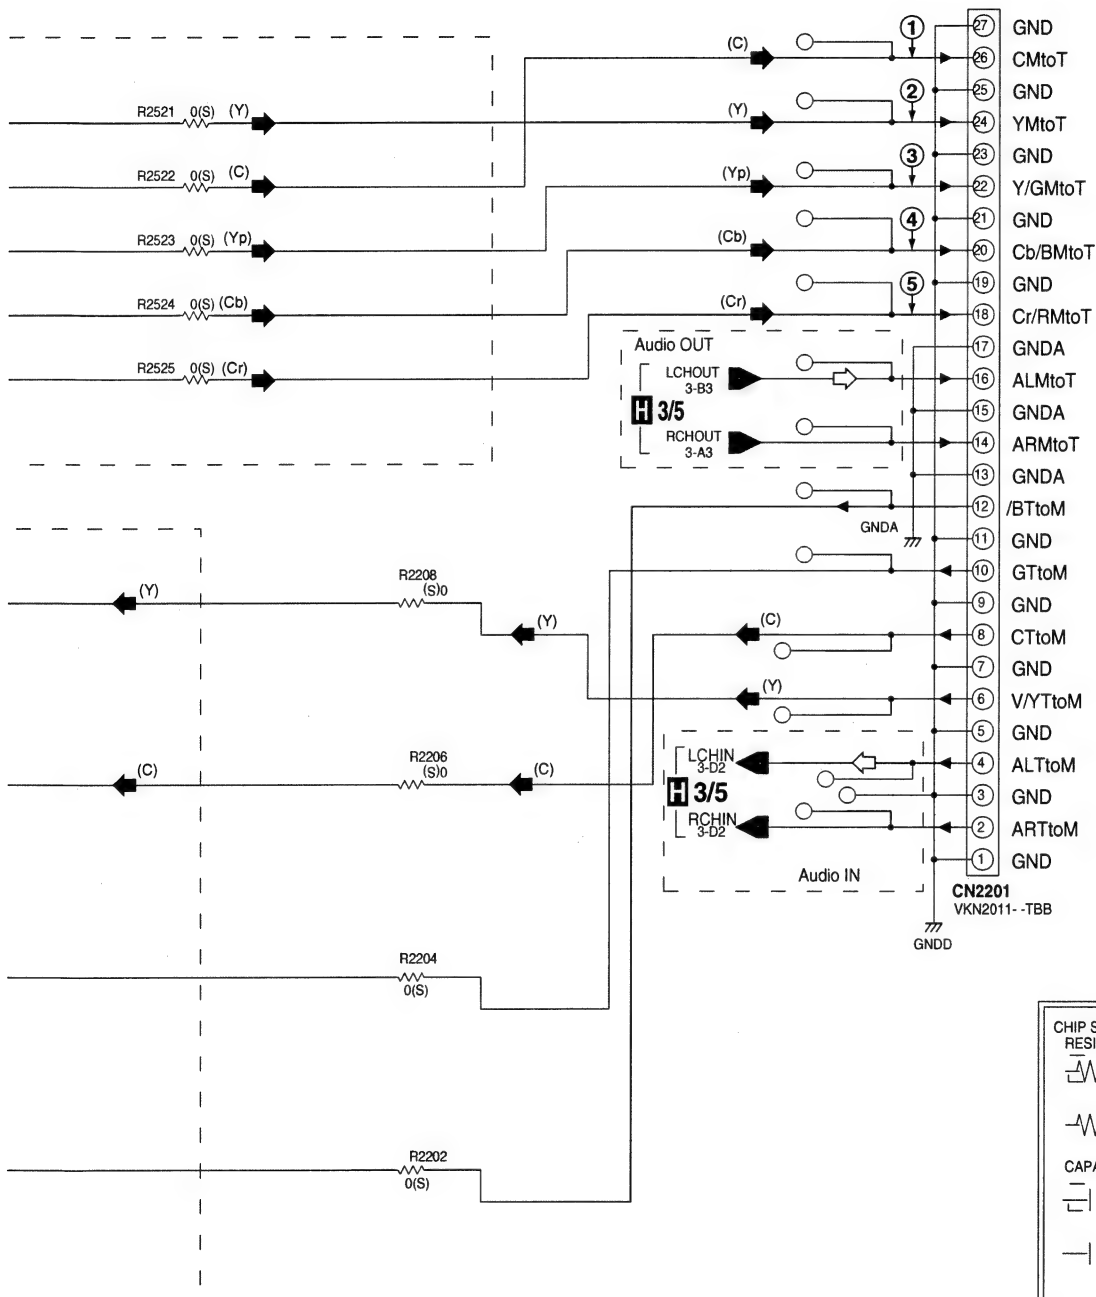
H 2/5 MAIN ASSY (VXX2997)

H 1/5

H 4/5

H 2/5

- (Y) : Y Video Signal Route
 (C) : C Video Signal Route
 (Cr) : Cr Video Signal Route
 (Cb) : Cb Video Signal Route
 (Yp) : Yp Video Signal Route
 : Audio Signal Route (L ch)



H 2/5


H 3/5



H 4/5

A H 5/5 MAIN ASSY (VXX2997)




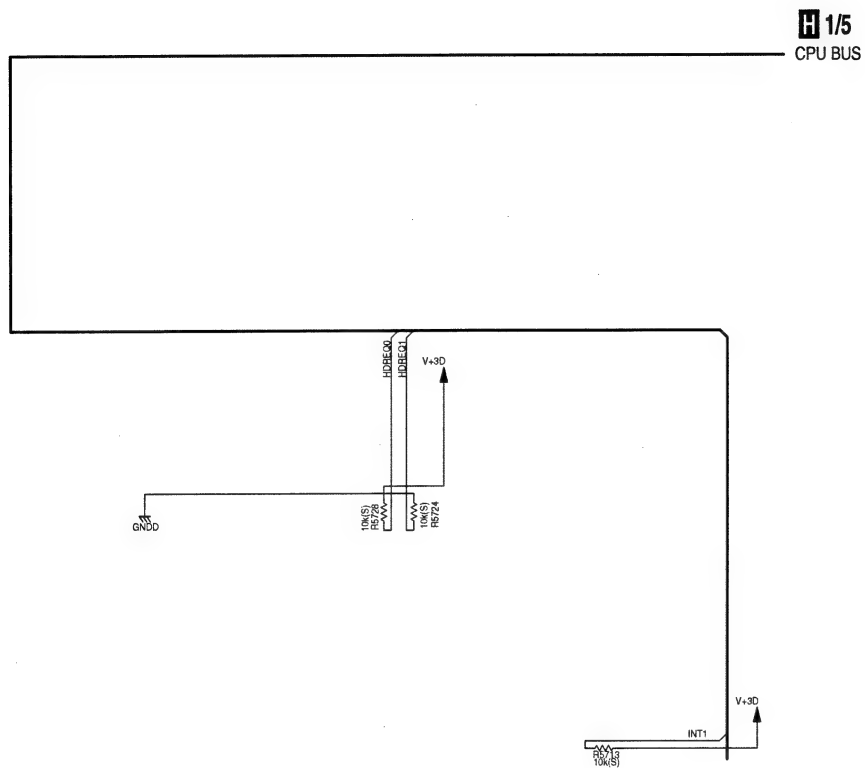


H 1/5
CPU BUS

3.14 SCRBB ASSY

A SCRBB ASSY(VXX3021)

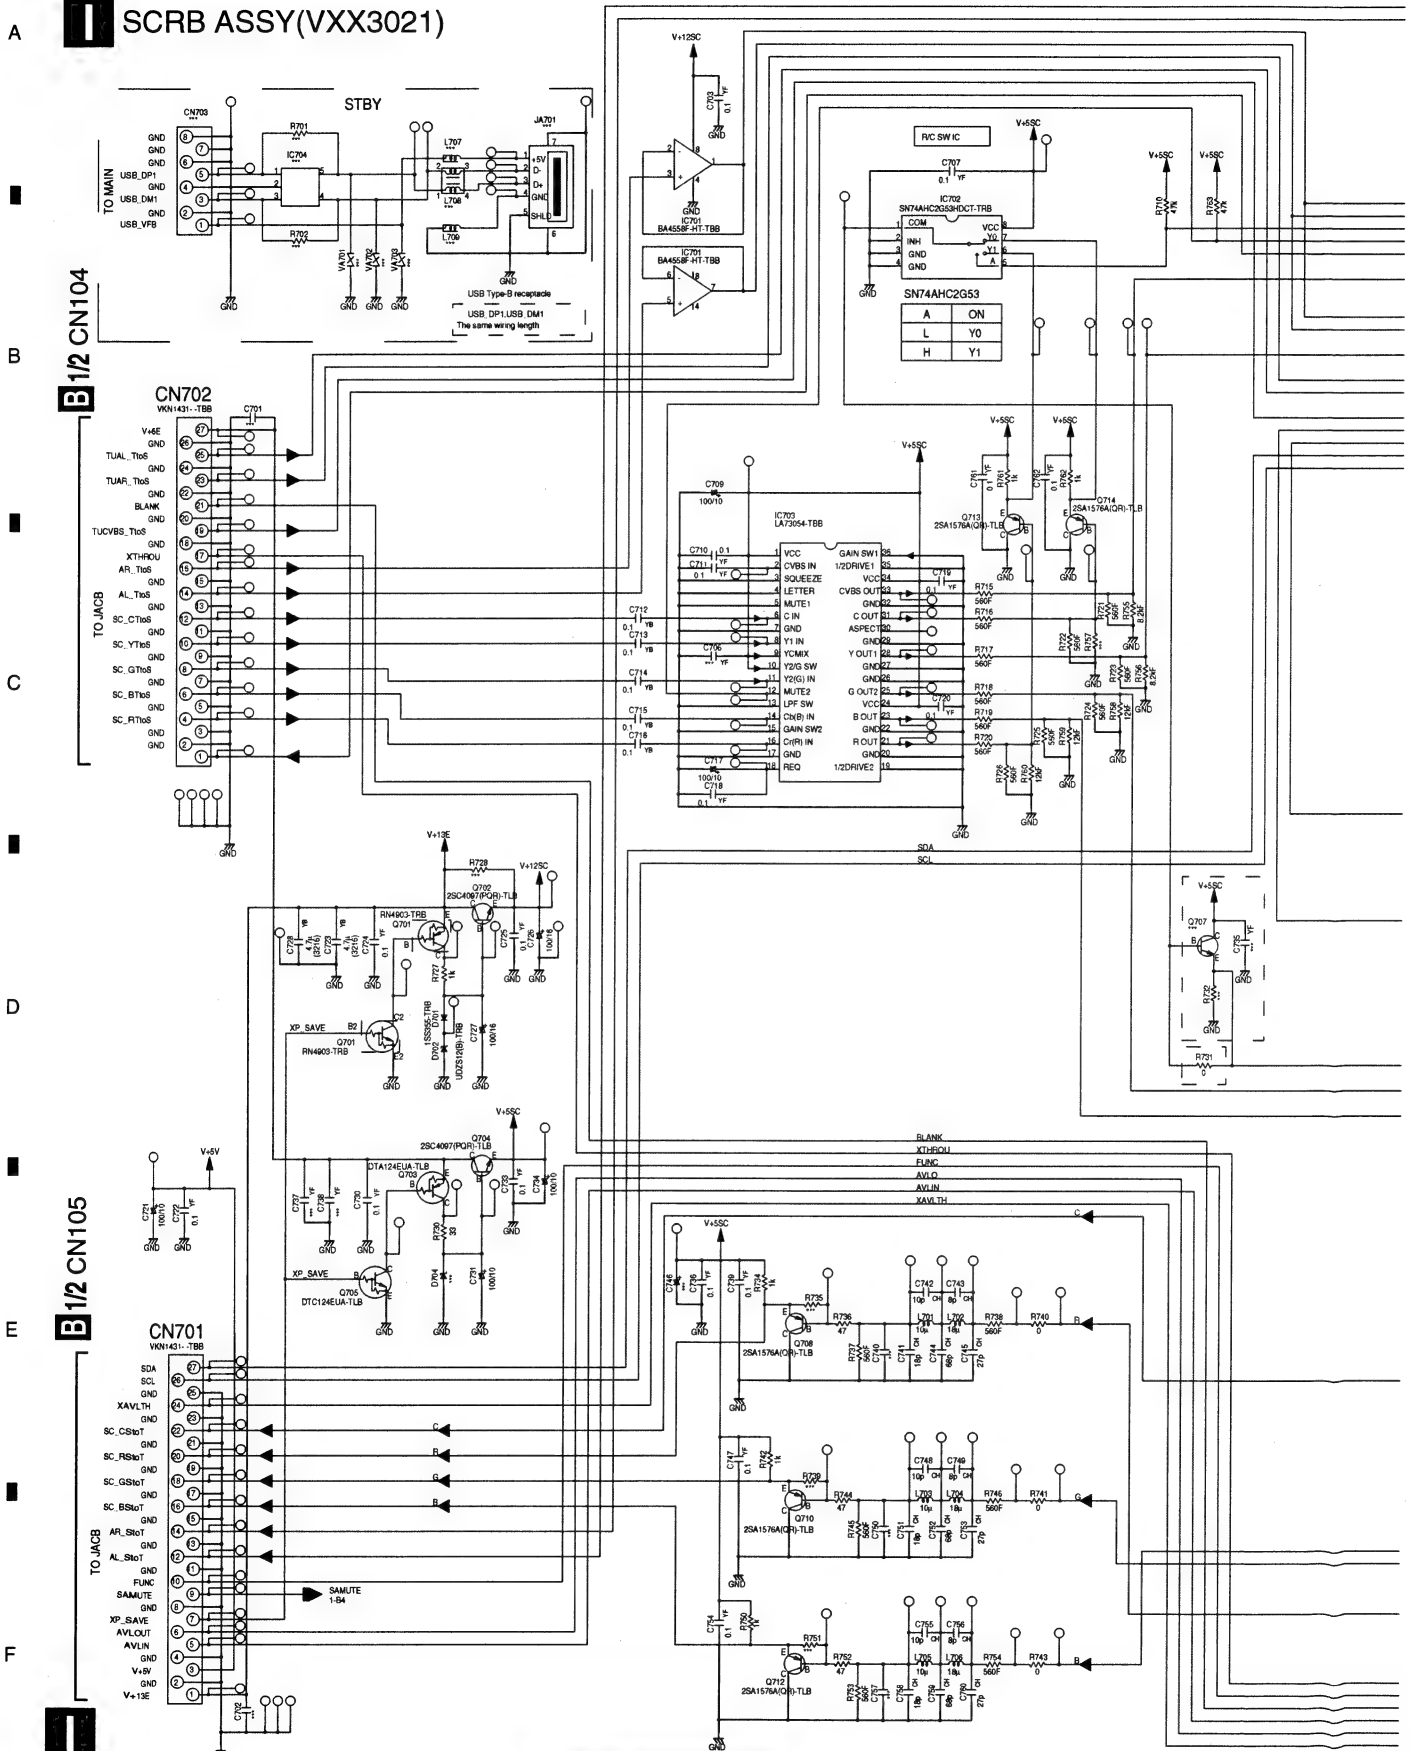


DVR-530H-S

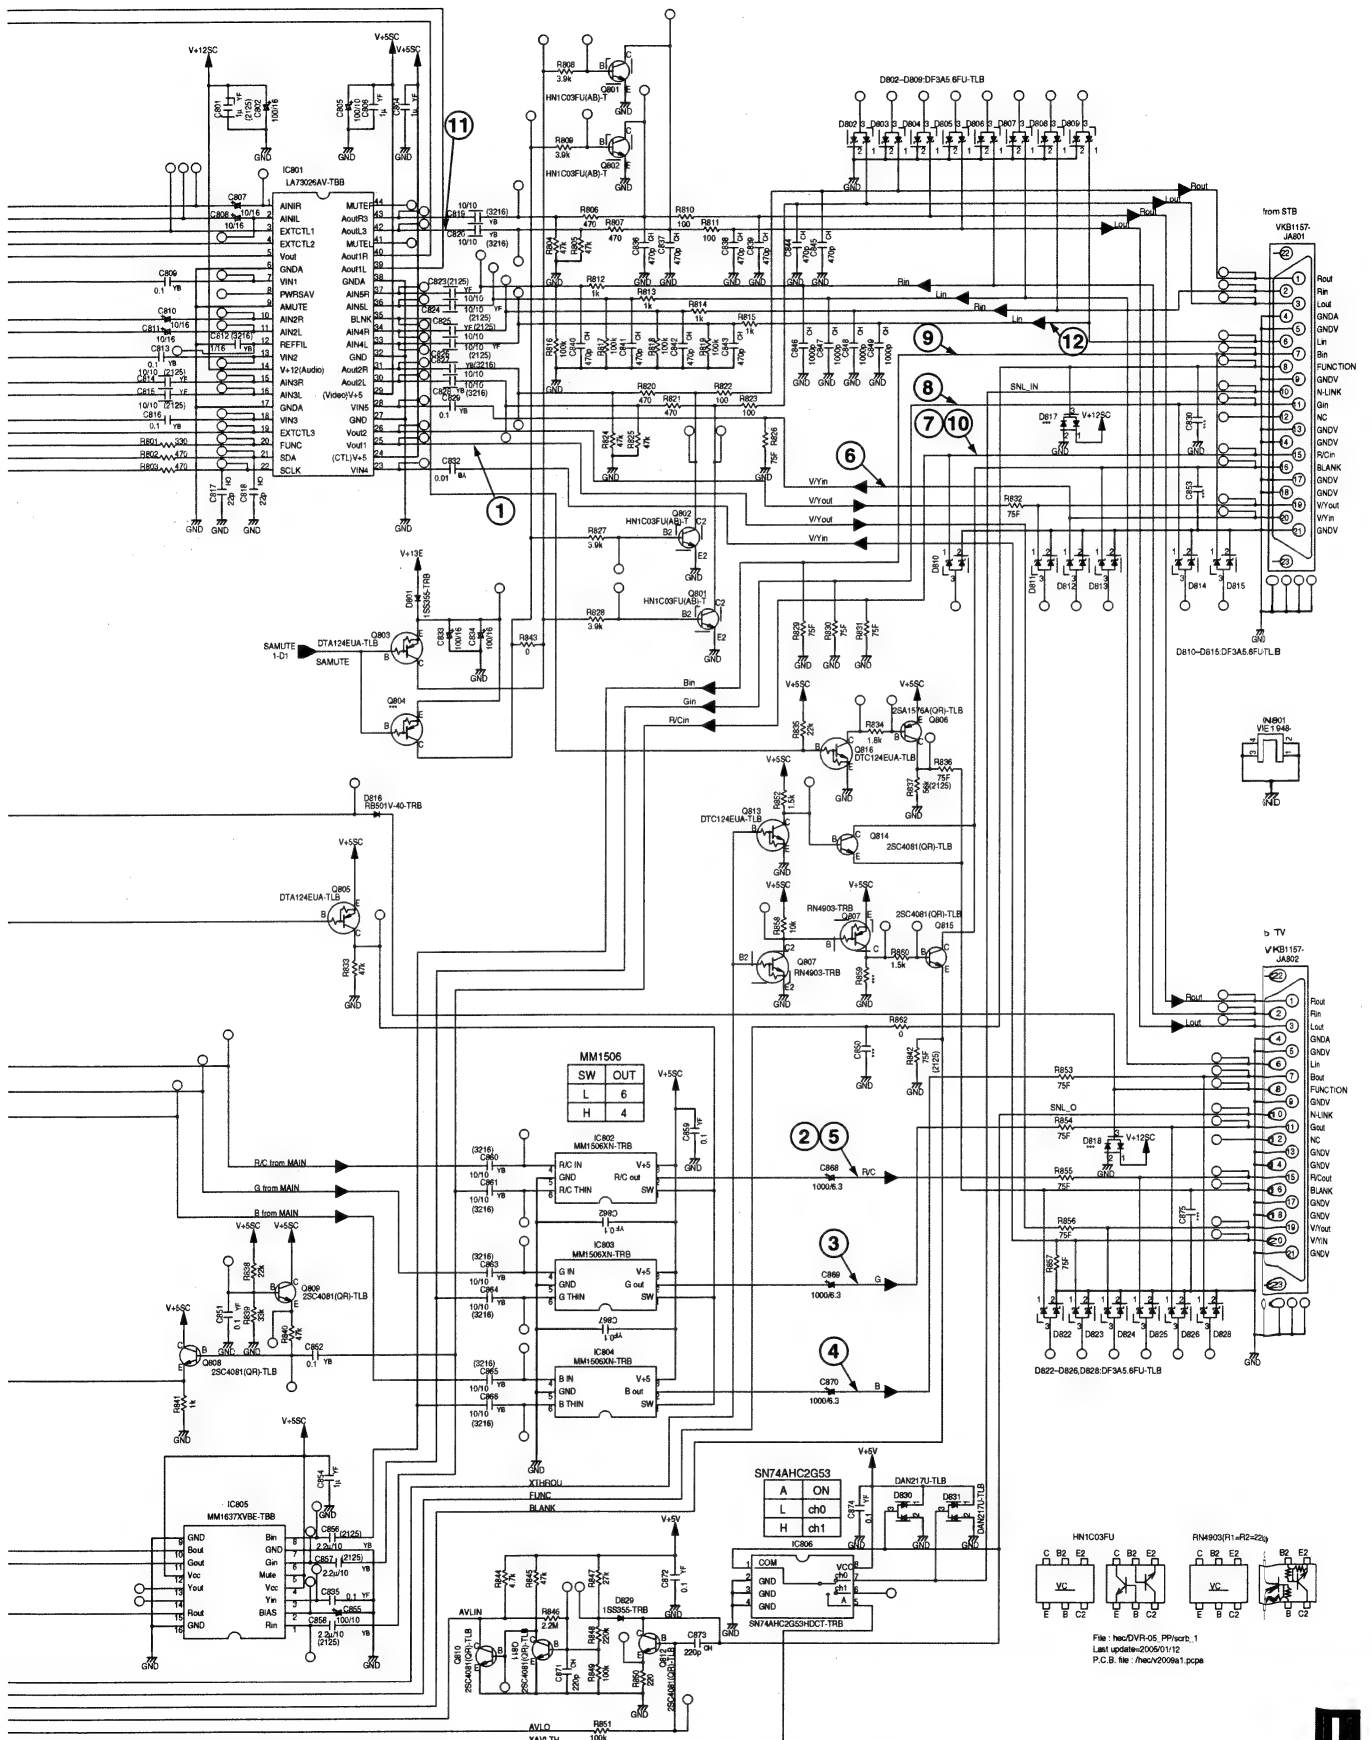

3.15 POWER SUPPLY UNIT


J POWER SUPPLY UNIT (VWR1392)

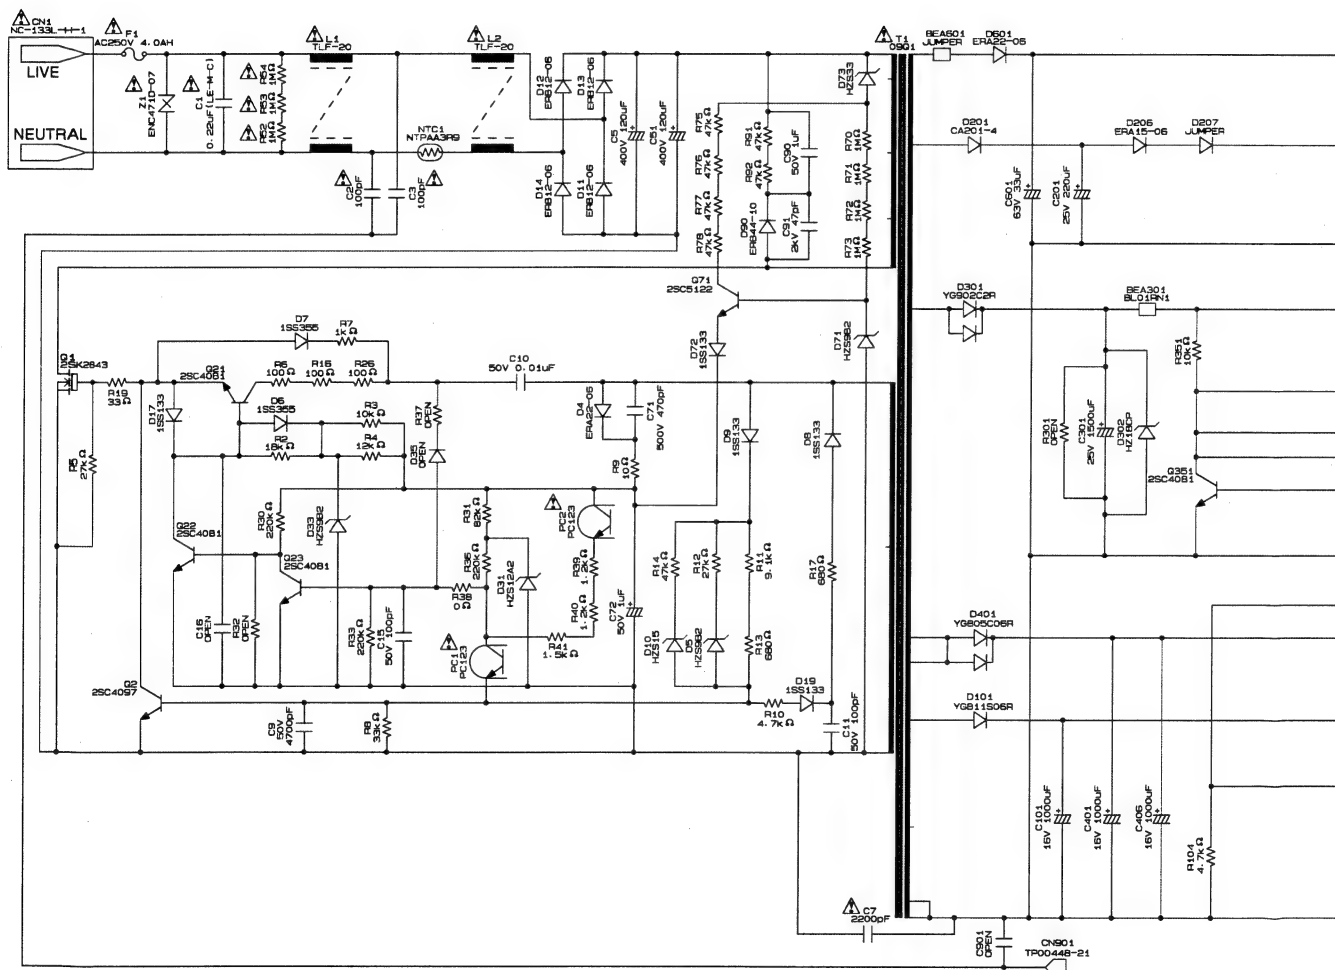

CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE.
REPLACE ONLY WITH SAME TYPE
NO. 491.400PF002 FOR P202
MFD, BY LITTELFUSE INC.

CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE.
REPLACE ONLY WITH SAME TYPE
NO. 491.630PF002 FOR P301
MFD, BY LITTELFUSE INC.

CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE.
REPLACE ONLY WITH SAME TYPE
NO. 49101.6PF002 FOR P401 and
P402 MFD, BY LITTELFUSE INC.

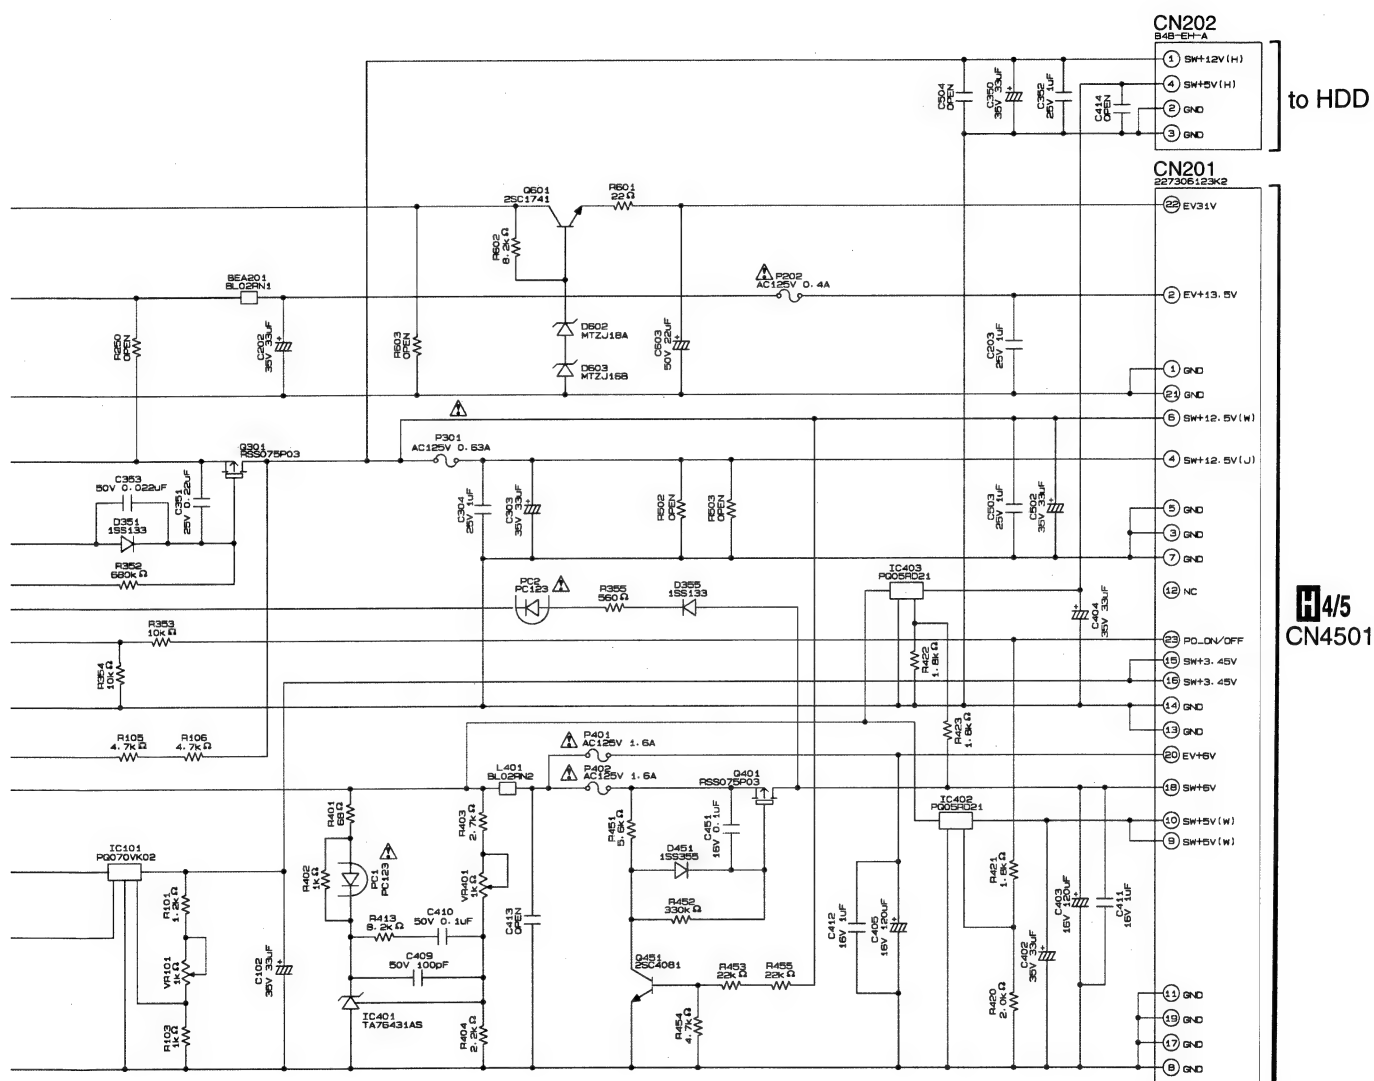

3.16 WAVE FORMS

Note : The encircled numbers denote measuring point in the schematic diagram.

B JACB ASSY

Measurement condition ;

No.1, No.16 to No.20 : 100% Color-bar
 No.2 to No.15 : 100% Color-bar (AXP disc 1-23)
 No.21 : 1kHz, 60% MOD
 No.33 : 1kHz, 0dB, 2Vrms (48kHz/16bit)(AXP disc 1-1)
 No.23 : 1kHz, 0dB, 1.9Vrms


B

C

D

E

F

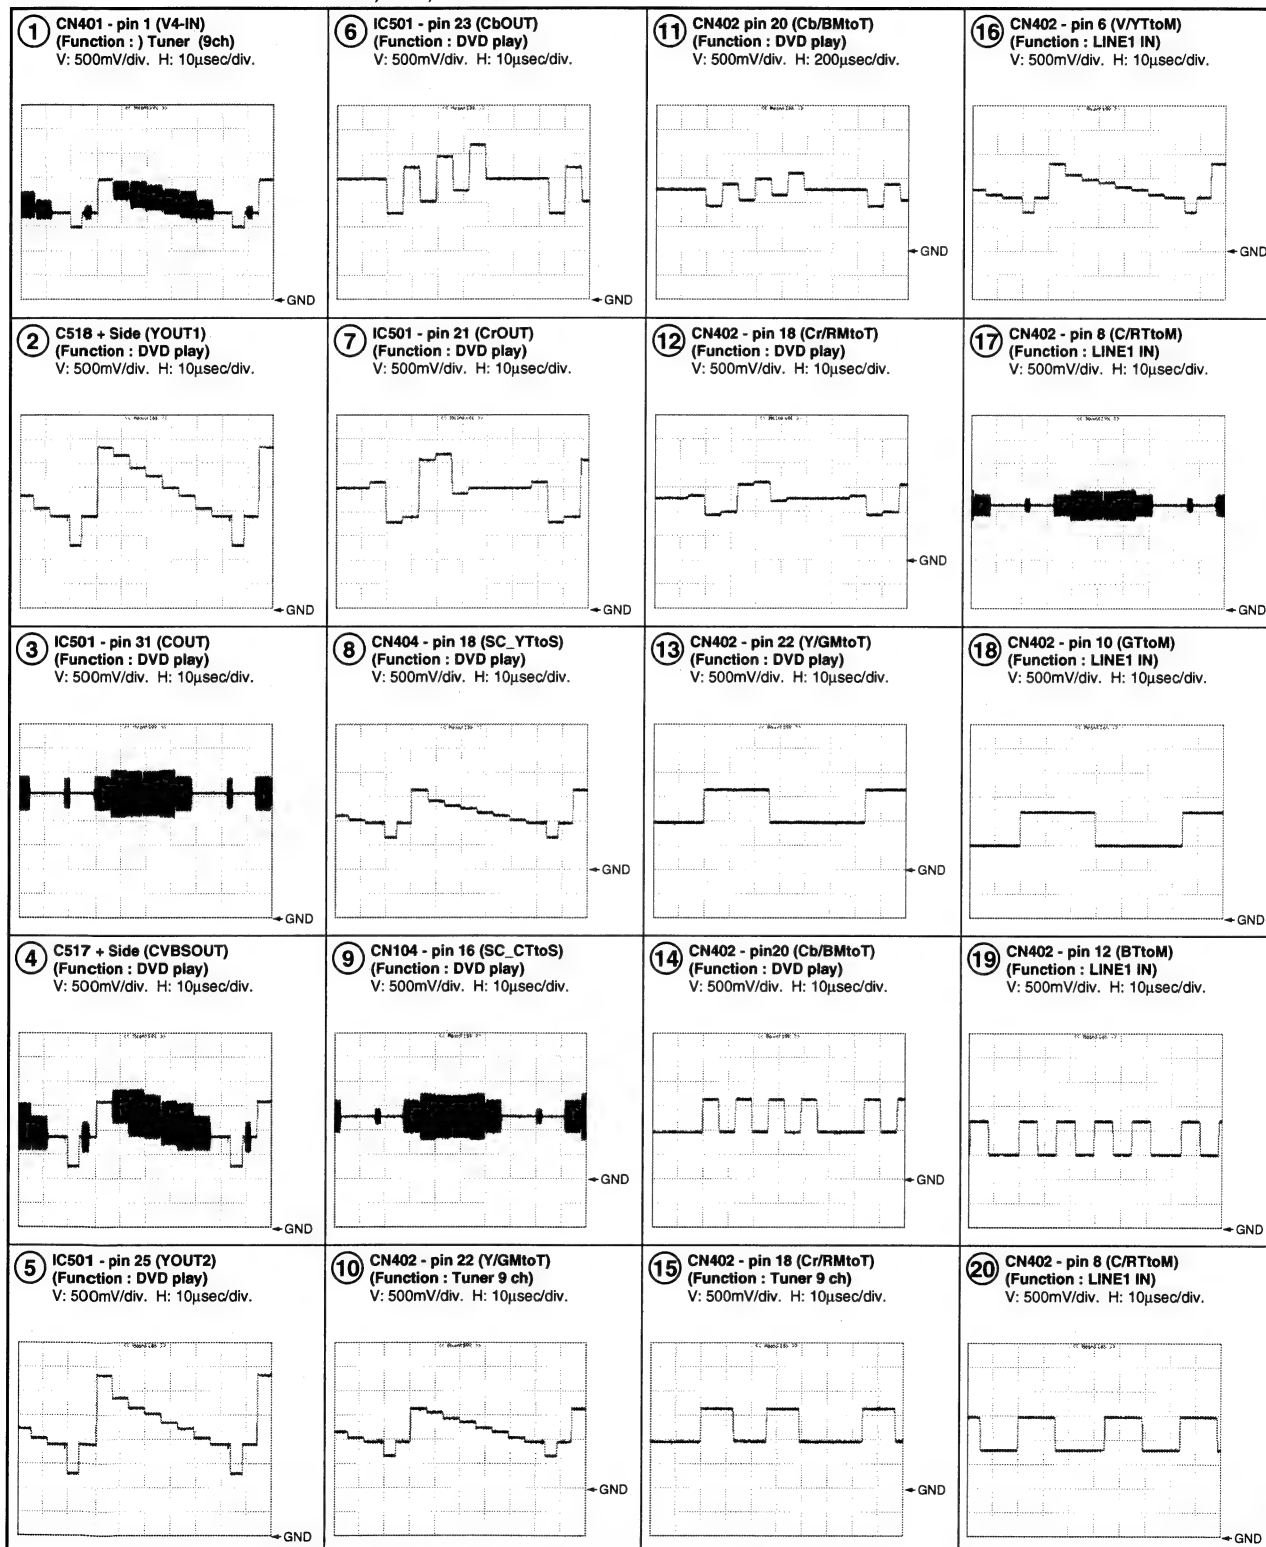

A JACB ASSY

I SCRB ASSY


Measurement condition ;

No.6 to No.10 : 100% Color-bar

No.1 to No.5 : 100% Coloro-bar (AXP disc 1-23)

No.11 : 1kHz, 60% MOD

No.12 : 1kHz, 0dB, 1.9Vrms

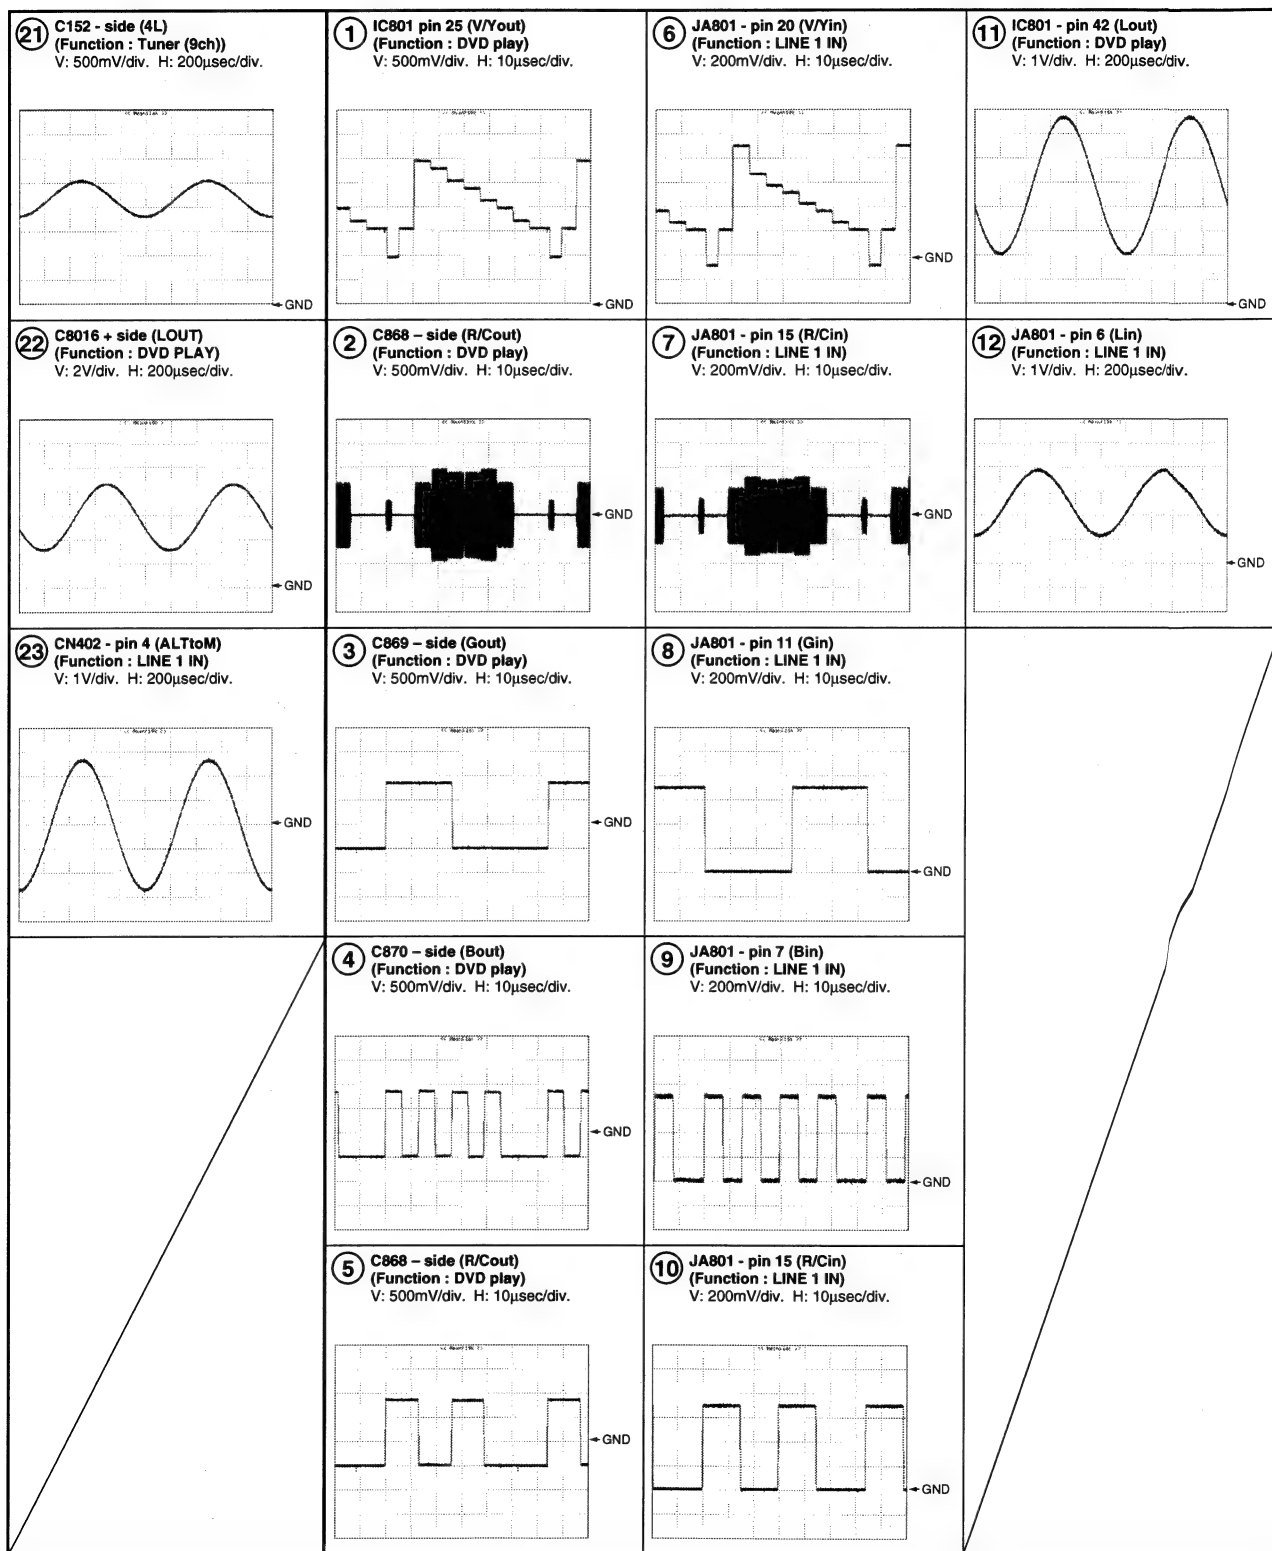

A

H MAIN ASSY

B


C

D


E

F


① CN2201 - pin 26 (CMtoT)
(State : Stopped)
V: 0.5V/div. H: 10μsec/div.

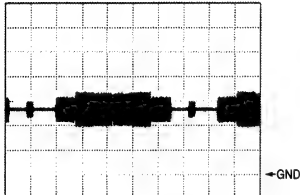


② CN2201 - pin 24 (YMtoT)
(State : Stopped)
V: 0.5V/div. H: 10μsec/div.

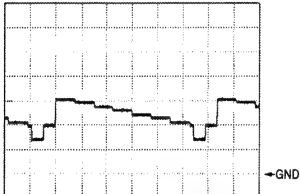


③ CN2201 - pin 22 (YGMtoT)
(State : Stopped)
V: 0.5V/div. H: 10μsec/div.

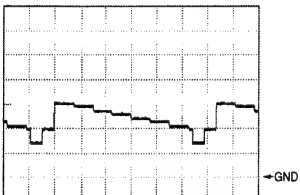


④ CN2201 - pin 20 (Cb/BMtoT)
(State : Stopped)
V: 0.5V/div. H: 10μsec/div.

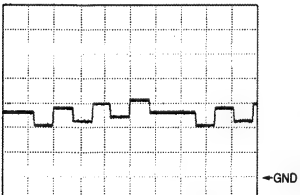


⑤ CN2201 - pin 18 (Cr/RMtoT)
(State : Stopped)
V: 0.5V/div. H: 10μsec/div.

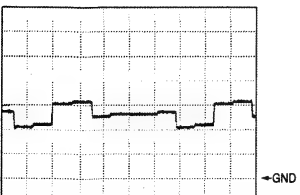


⑥ Foot of R3306 (VCO_VMCLK)
(State : Stopped)
V: 1V/div. H: 10nsec/div.

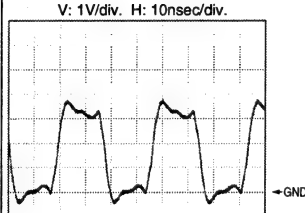


V: 1V/div. H: 20nsec/div.

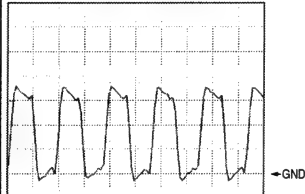


⑦ Foot of R3301 (VCO_AMCLK2)
(State : Stopped)
V: 1V/div. H: 10nsec/div.

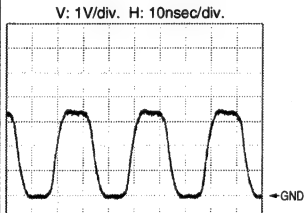

V: 1V/div. H: 20nsec/div.

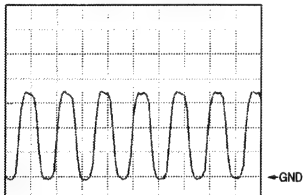


⑨ Foot of R3322 (VCO_AMCLK1)
(State : Stopped)
V: 1V/div. H: 10nsec/div.

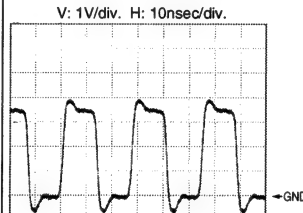


V: 1V/div. H: 20nsec/div.




⑩ Foot of R3305 (VCO_18M)
(State : Stopped)
V: 1V/div. H: 20nsec/div.

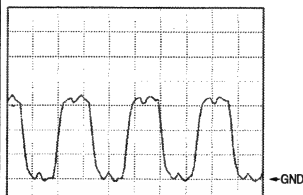


⑪ Foot of R3318 (VCO_33_36M)
(State : Stopped)
V: 1V/div. H: 10nsec/div.

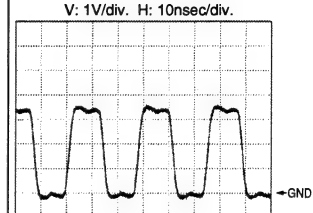


V: 1V/div. H: 20nsec/div.

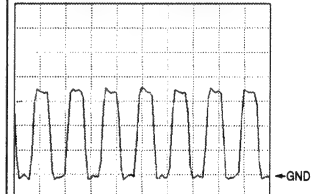


⑫ Foot of R3108 (LCHIN)
(State : Stopped)
V: 1V/div. H: 200μsec/div.

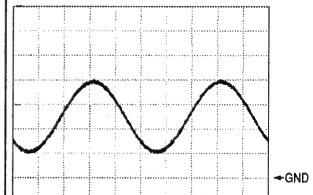


⑬ Foot of R3109 (RCHIN)
(State : Stopped)
V: 1V/div. H: 200μsec/div.

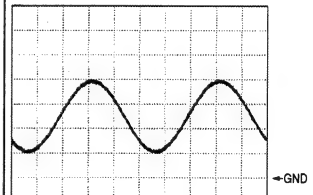

⑭ Foot of R3106 (AD_LRCKI)
(State : Stopped)
V: 1V/div. H: 10μsec/div.

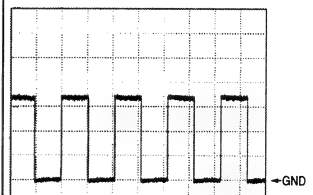

H MAIN ASSY

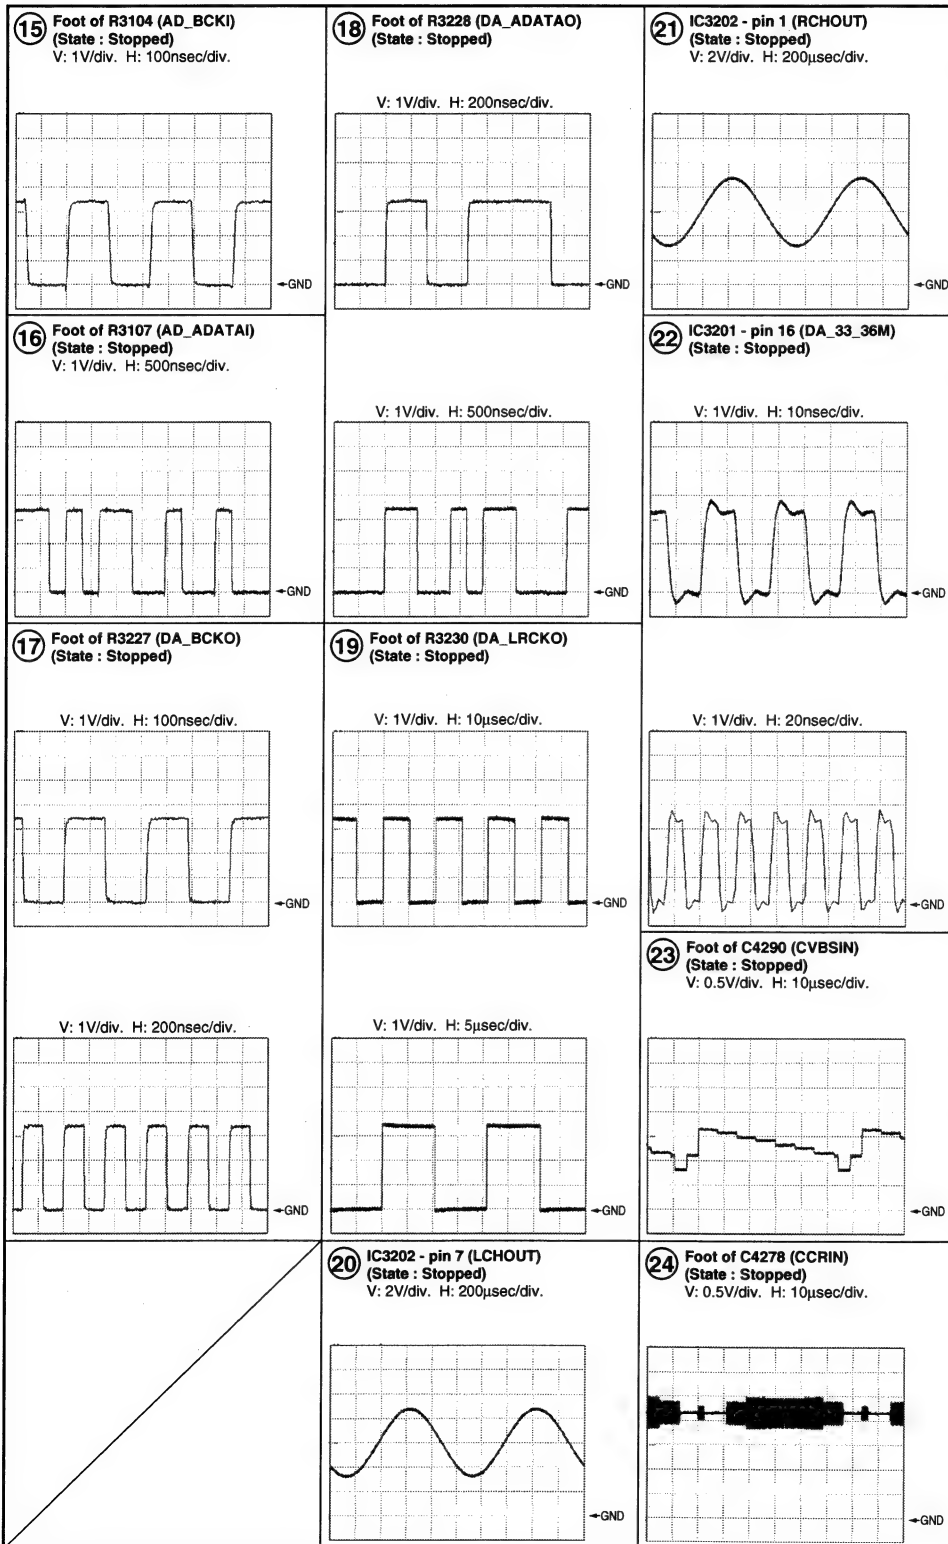
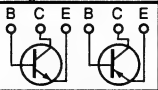

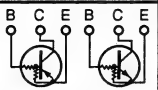

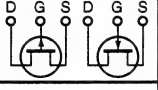

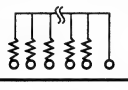




4. PCB CONNECTION DIAGRAM

A


NOTE FOR PCB DIAGRAMS :

1. Part numbers in PCB diagrams match those in the schematic diagrams.
2. A comparison between the main parts of PCB and schematic diagrams is shown below.

Symbol In PCB Diagrams	Symbol In Schematic Diagrams	Part Name
		Transistor
		Transistor with resistor
		Field effect transistor
		Resistor array
		3-terminal regulator

B

3. The parts mounted on this PCB include all necessary parts for several destinations.
For further information for respective destinations, be sure to check with the schematic diagram.
4. View point of PCB diagrams.

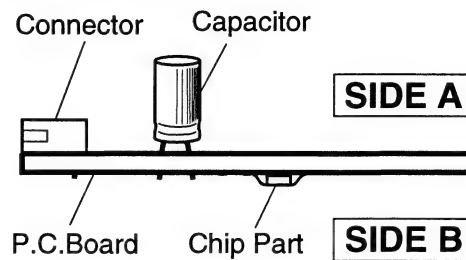

C

D

E

F

4.1 TUNB ASSY


SIDE A

SIDE A

A TUNB ASSY

B CN404

CN301

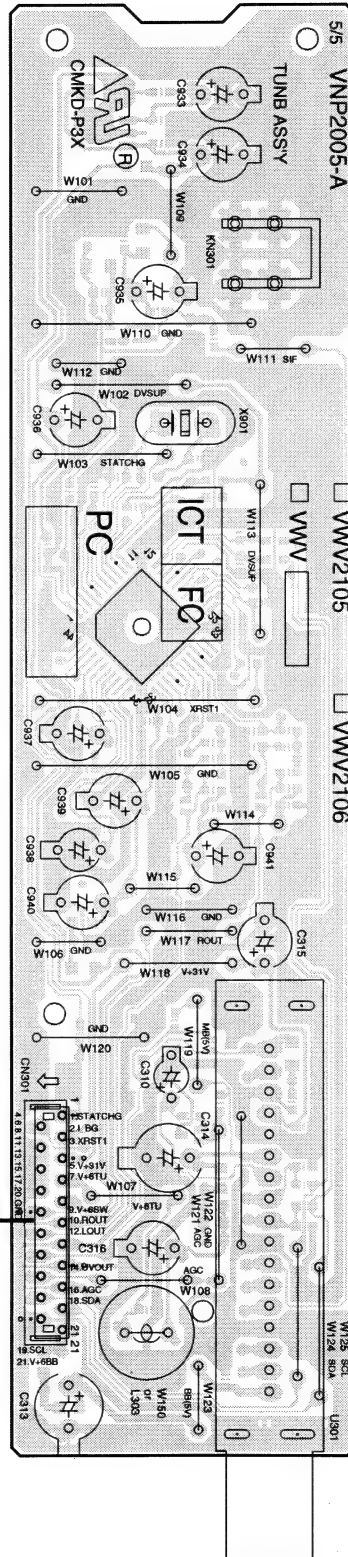


(VNP2005-A)

SIDE B

SIDE B

A TUNB ASSY

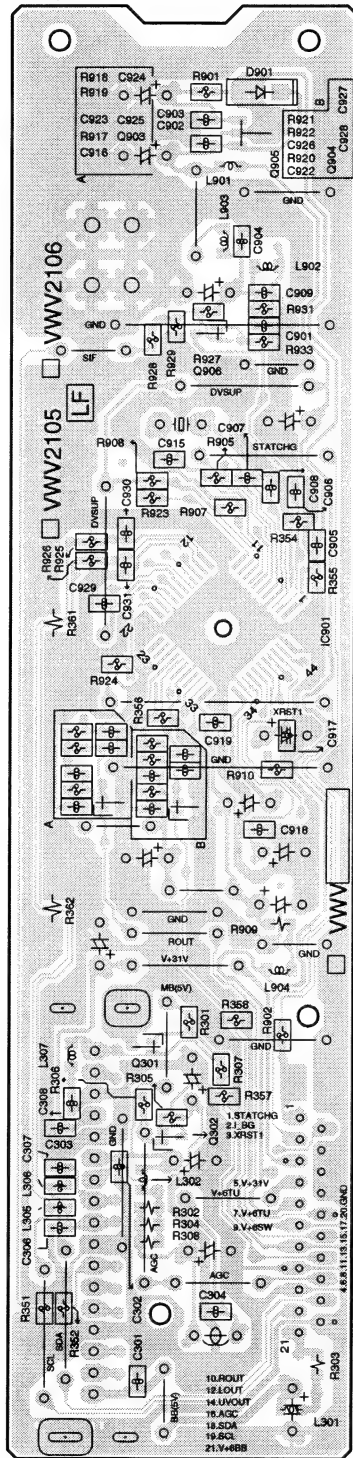

(VNP2005-B)

A

A



5



6



7



8



A



B



C



D



E



F



5



6



7



8



DVR-530H-S

4.2 JACB, FLJB, DVJB and ATAB ASSYS

SIDE A

A


B

C

D

E


F

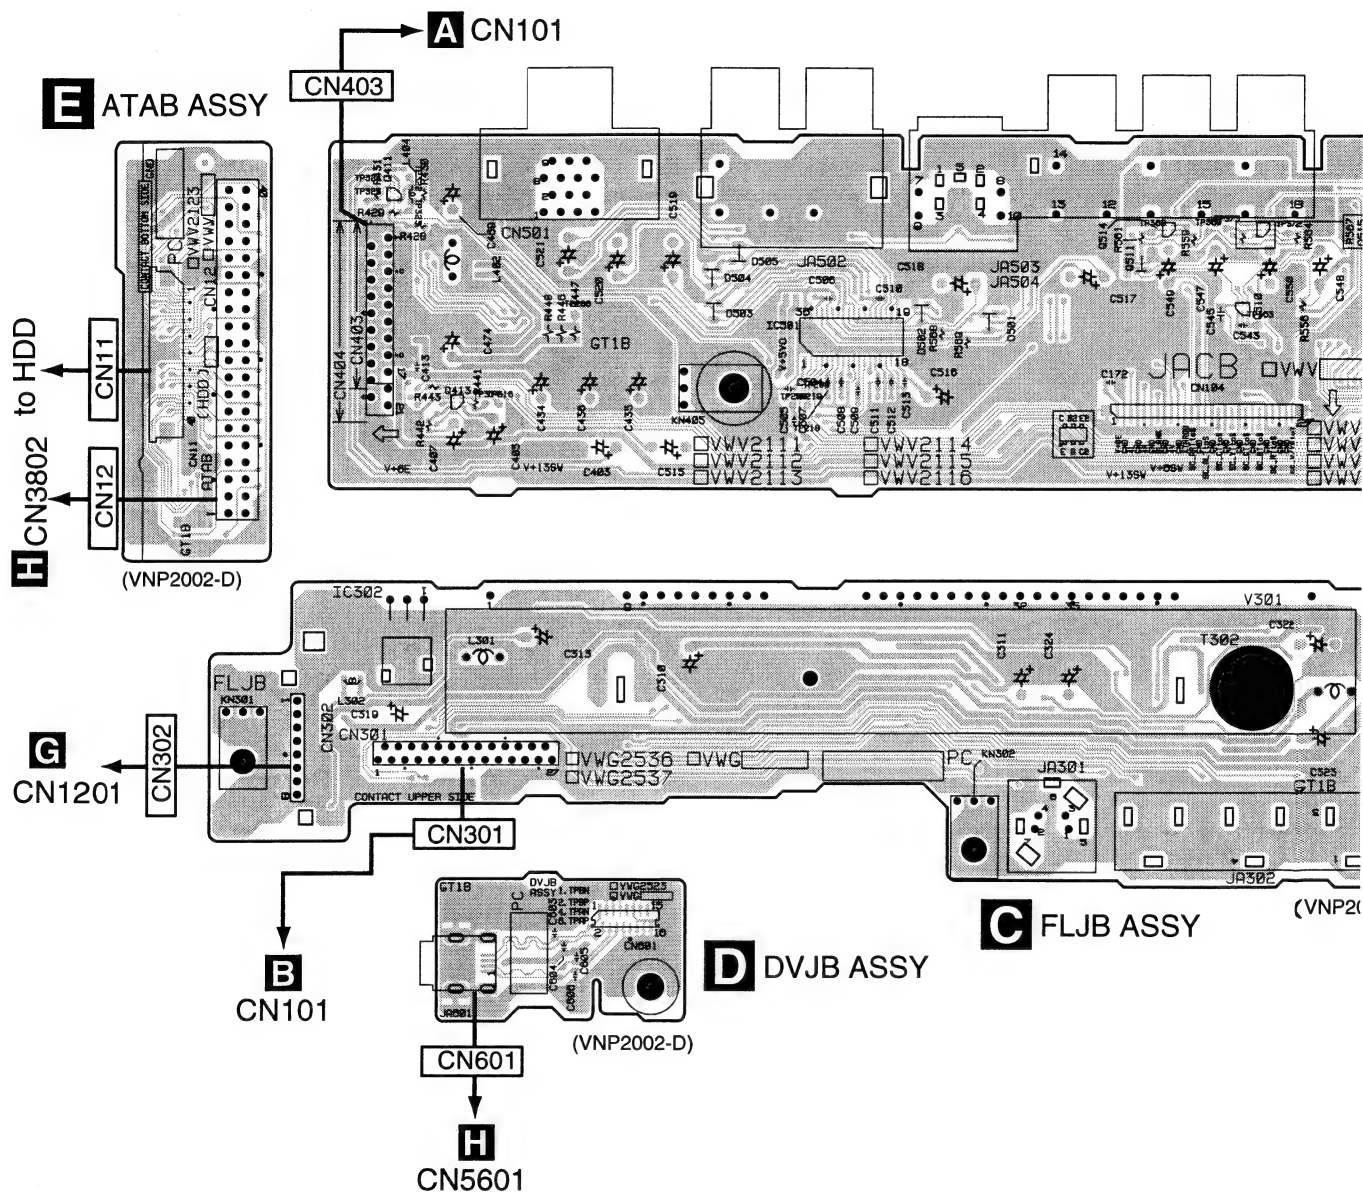

BCDE

SIDE B

B JACB ASSY

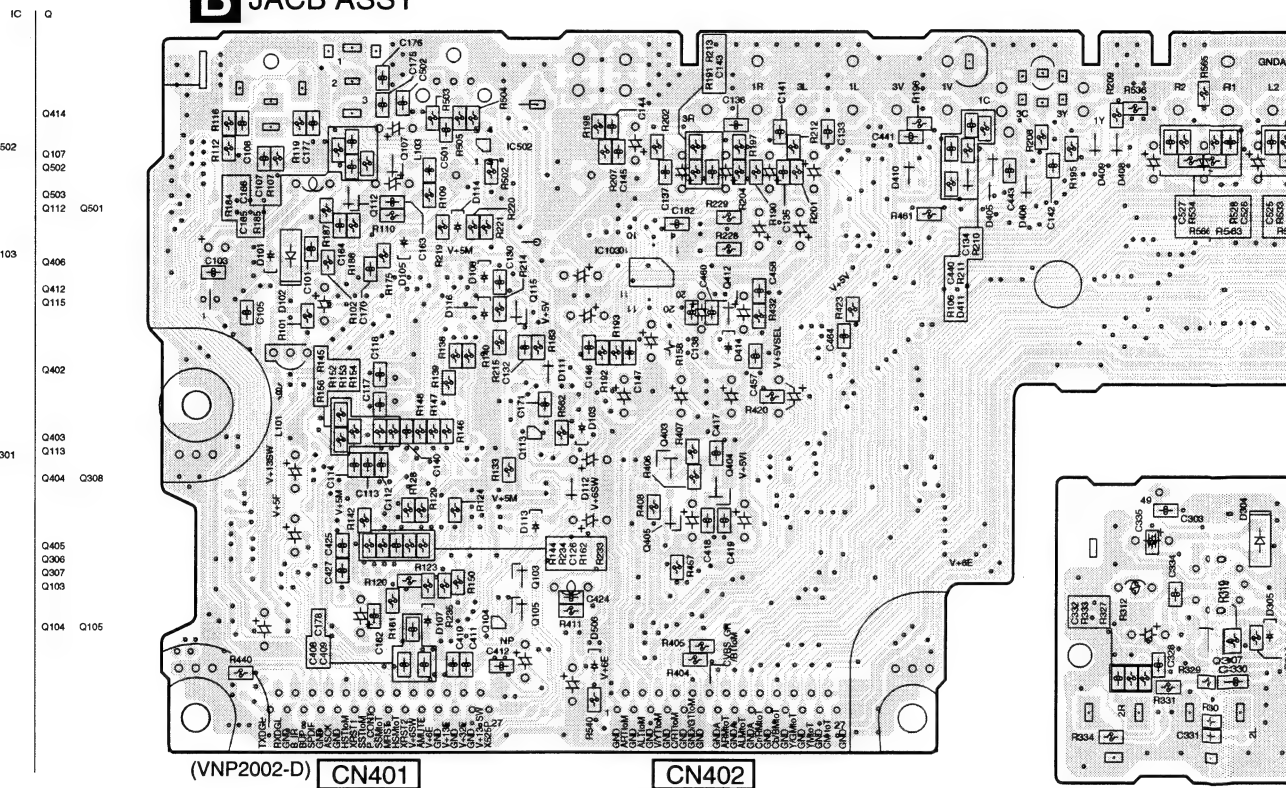

C FLJB ASSY


BC

DVR-530H-S

SIDE B


A

B

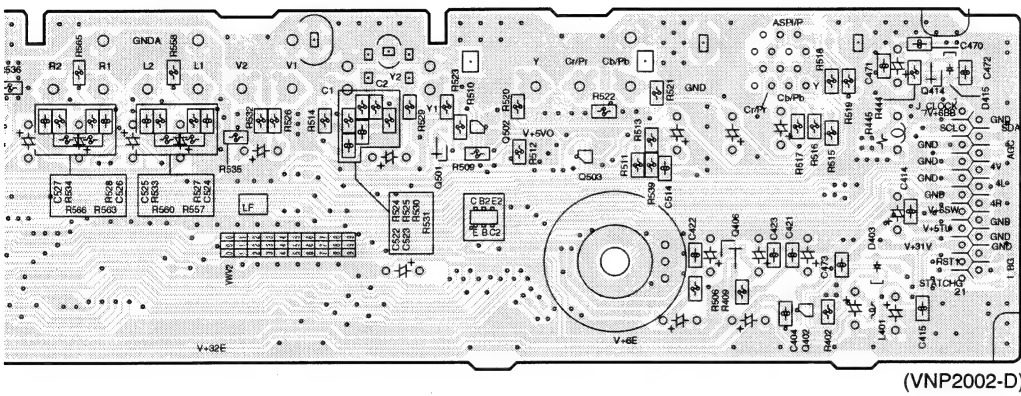
E ATAB ASSY

CN401

CN12

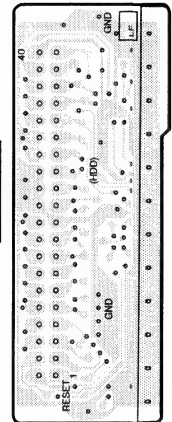


C

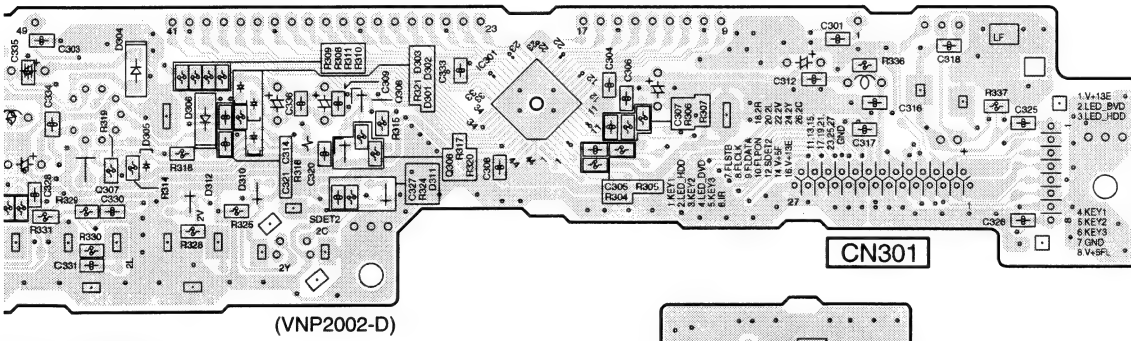

CN301

LJB ASSY

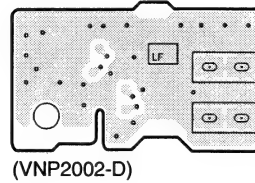**D** DVJB ASSY

D

E

F

B C D E

1 2 3 4

4.3 PSWB and RSWB ASSYS

SIDE A

A

B

C


D

E

F

F PSWB ASSY

CN101

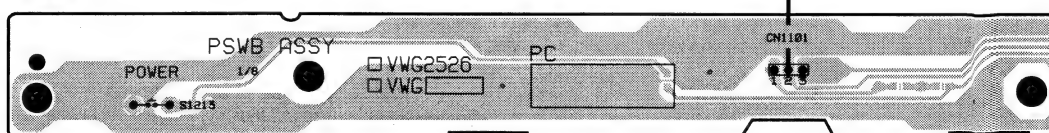

F

56

DVR-530H-S

1

2

3

4

SIDE A

A



B

C

D

E

F

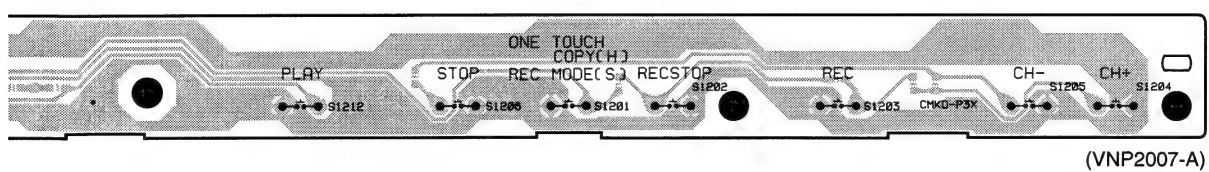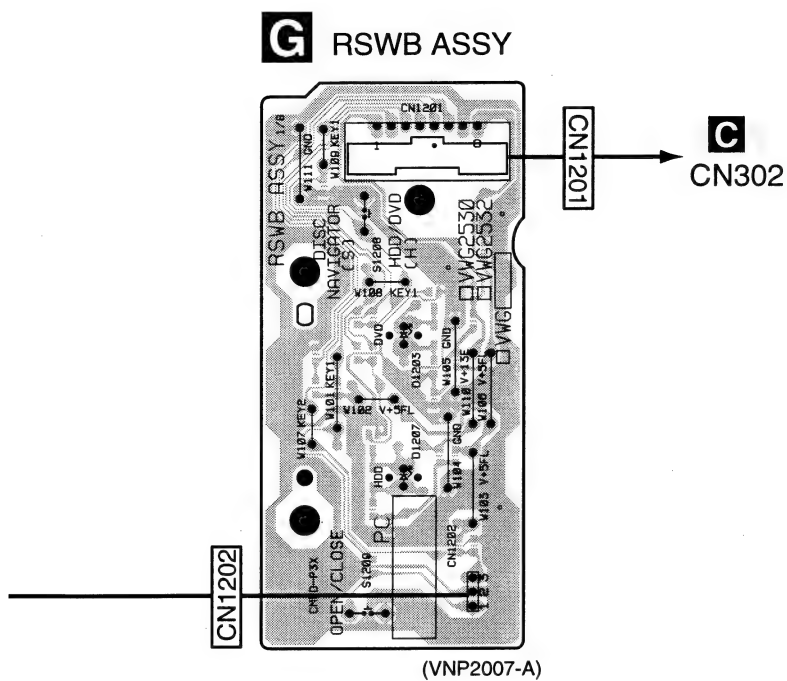

4.4 MAIN ASSY

SIDE A

H MAIN ASSY

J CN201 CN4501

B CN401 CN3001

B CN402 CN2201

CN4502

CN3801

DRIVE ASSY R9R

DRIVE AS

DVR-530H-S

SIDE A

A

B

C


D

—

F

H


61

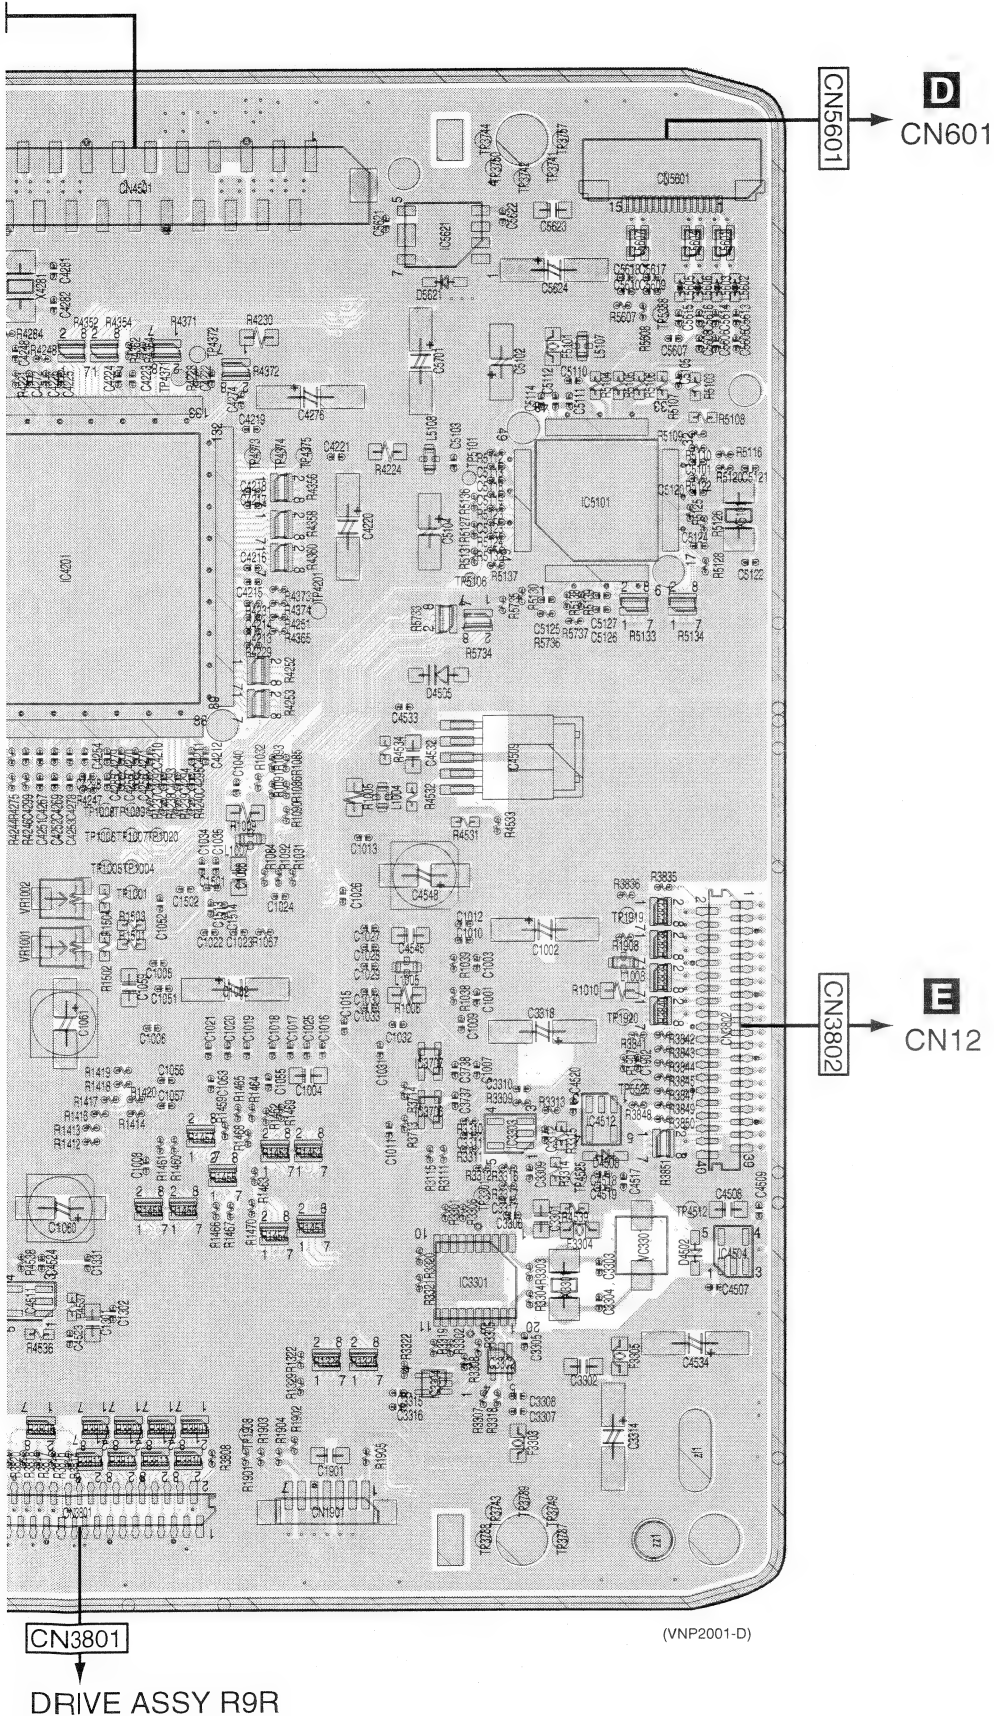

SIDE B

H MAIN ASSY

IC	Q
IC4001	Q3001
IC3401	
IC5631	
IC5701	
IC4571	
IC1101	
IC3001	
IC4506	
IC3002	
IC4503	
IC1102	
Q2505	
Q2506	
Q2504	
Q2503	
Q2501	
IC1221	
IC1001	
IC1201	
IC1011	
IC1301	
IC3201	
IC3202	
Q3201	

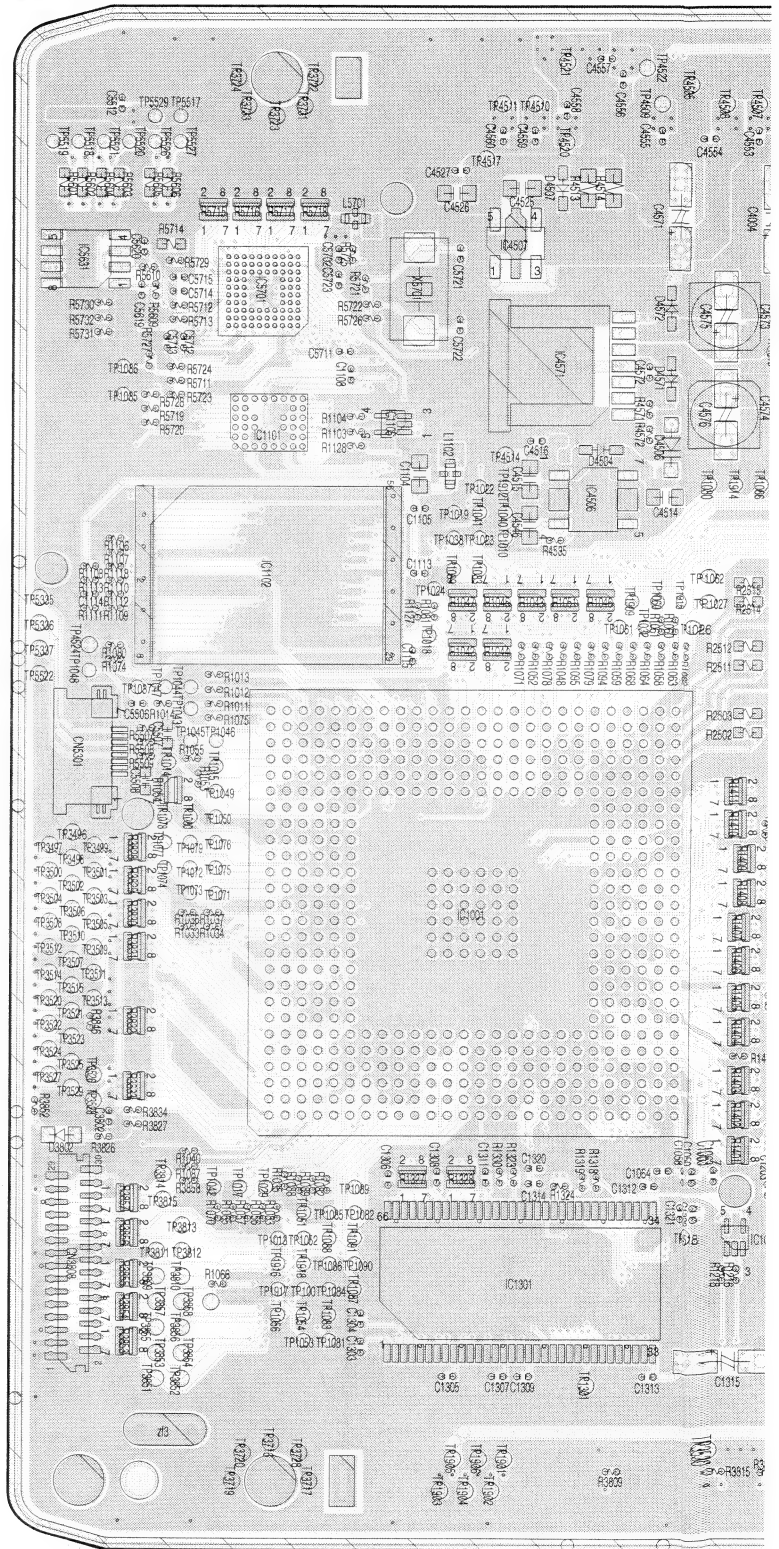

SIDE A

SIDE A




DVR-530H-S

SIDE B

SIDE B

SCRB ASSY

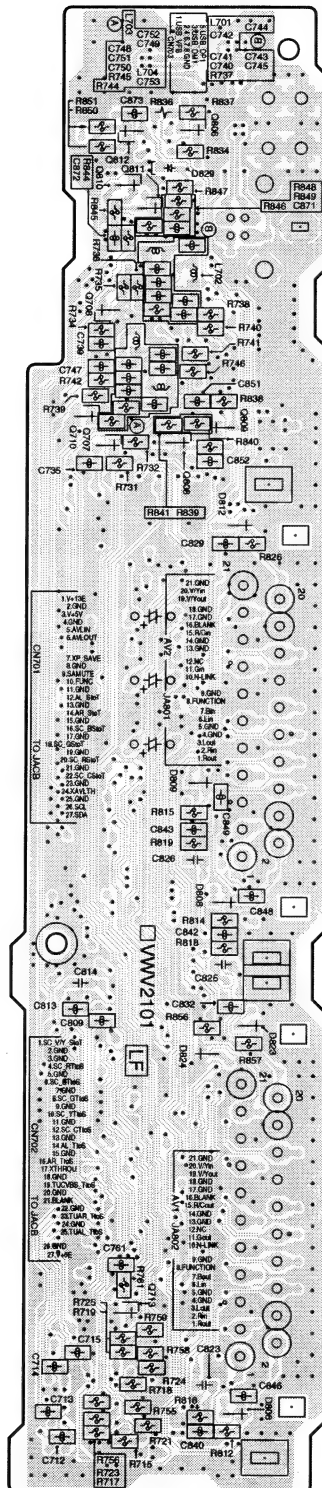

(VNP2009-A)

SIDE A

SIDE A

SIDE B

SIDE B

A


B

C

D

E

F

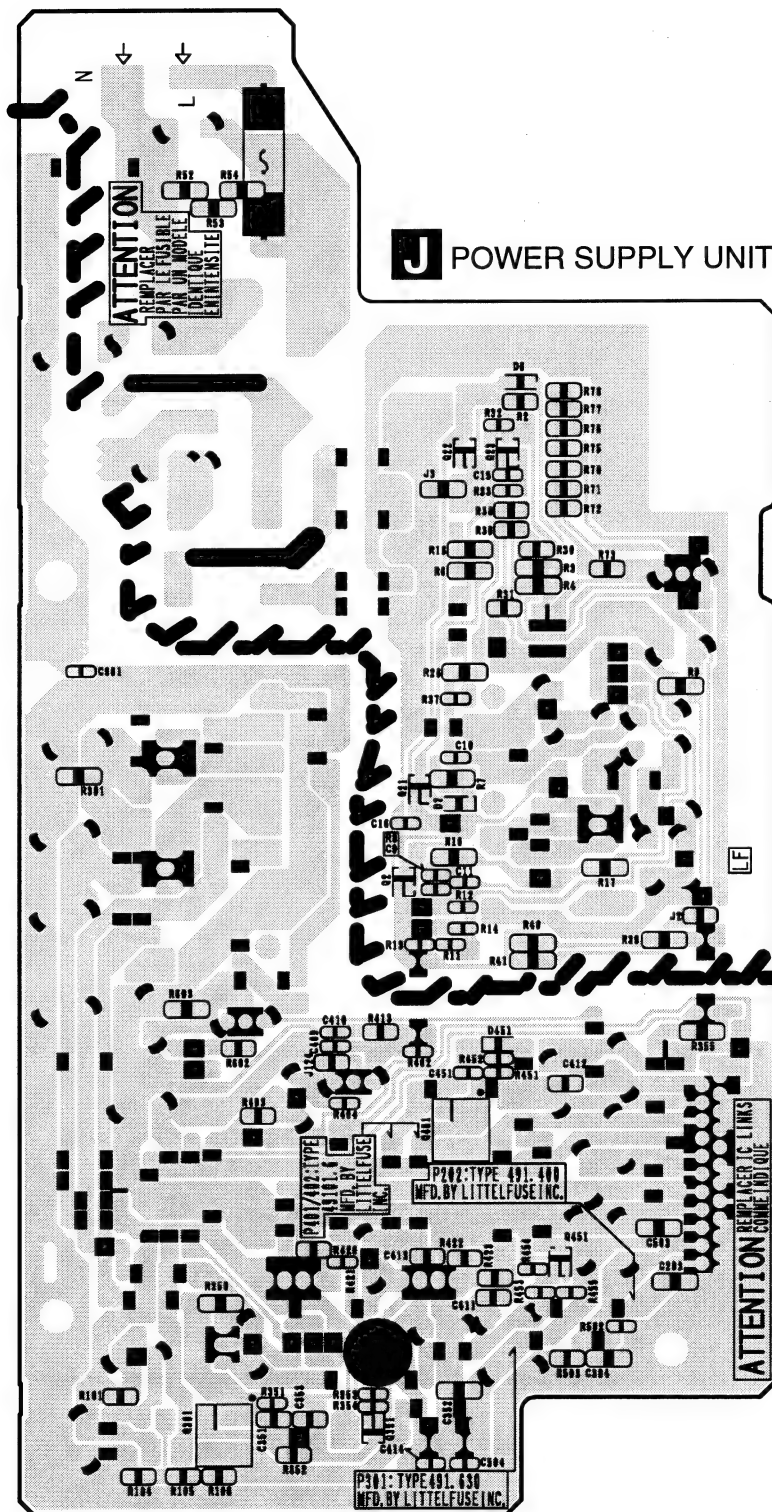

J

J

5. PCB PARTS LIST

NOTES: ● Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.

● The Δ mark found on some component parts indicates the importance of the safety factor of the part.

Therefore, when replacing, be sure to use parts of identical designation.

● When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 Ω \rightarrow 56 $\times 10^1$ \rightarrow 561 RD1/4PU561J

47k Ω \rightarrow 47 $\times 10^3$ \rightarrow 473 RD1/4PU473J

0.5 Ω \rightarrow R50 RN2H[R]50K

1 Ω \rightarrow 1R0 RS1P[R]1R0K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω \rightarrow 562 $\times 10^1$ \rightarrow 5621 RN1/4PC5621F

Mark No. Description Part No.

LIST OF ASSEMBLIES

1..TUNB ASSY (for Service)

VXX3025

1..JAFL ASSY (for Service)

VXX3005

NSP 2..JAFL ASSY

VWM2315

3..DVJB ASSY

VWG2523

3..FLJB ASSY

VWG2536

3..JACB ASSY

VWV2115

3..ATAB ASSY

VWV2123

1..KEYB ASSY (for Service)

VXX3032

NSP 2..KEYB ASSY

VWM2332

3..PSWB ASSY

VWG2526

3..RSWB ASSY

VWG2530

1..MAIN ASSY (for Service)

VXX2997

1..SCRB ASSY (for Service)

VXX3021

Δ 1..POWER SUPPLY UNIT

VWR1392

Mark No. Description Part No.

A TUNB ASSY SEMICONDUCTORS

IC901

MSP3417G

Q301, Q302, Q903, Q904

2SA1576A

Q906

2SC4081

D901

1SR154-400

COILS AND FILTERS

L301, L302, L901

CTF1399

L902

LCYA100J2520

L903, L904

LCYA101J2520

L305, L306

VTL1081

CAPACITORS

C909

CCSRCH101J50

C930, C931

CCSRCH220J50

C906, C908

CCSRCH560J50

C925, C928

CCSRCH561J50

C907, C915

CCSRCJ3R0C50

C937, C939

CEAL100M50

C934-C936, C940, C941

CEAL101M10

C310

CEAL220M6R3

C938

CEAL3R3M50

C313, C314

CEAT102M6R3

C901, C923, C926

CKSRYB103K50

C301, C302

CKSRYB222K50

C924, C927

CKSRYB392K50

C902, C904, C916-C919, C922

CKSRYF104Z25

Mark No. Description Part No.

C303

CKSRYF104Z50

C905, C929

CKSRYF105Z10

RESISTORS

R302, R304

RS1/10S100J

R303, R308

RS1/10S120J

R909

RS1/10S330J

R361, R362

RS1/8S0R0J

Other Resistors

RS1/16S###J

OTHERS

X901 CERAMIC RESONATOR

VSS1189

KN301 WRAPPING TERMINAL

VNE1948

CN301 21P SOCKET

XKP3081

U301 TV TUNER PACK

VXF1060

B JACB ASSY SEMICONDUCTORS

IC103

BD3823FV

IC102

BD4846G

IC401

LA73031V

IC501

LA73054

IC404

MM1501XN

IC101

PMC002A8

Δ Q403

2SA1036K

Q107

2SA1576A

Q102

2SB1238X

Q404, Q406

2SC2411K

Q101, Q108, Q112, Q407, Q409

2SC4081

Q412

2SC4081

Q103, Q105, Q511

DTA124EUA

Q408

DTA143EUA

Q116

DTC114TUA

Q115, Q405

DTC124EUA

Q514, Q515

HN1C03FU

Q113, Q503, Q510

UMD2N

Q402, Q411

UMF21N

Q413

UMF23N

Q104

UMH1N

D102, D118

1SR154-400

D105

1SS352

D103, D107, D108, D114, D116

1SS355

D403, D414, D506, D507, D509

1SS355

D111

DAP202U

D508

UDZS5R1(B)

D404-D412

UMZ6R8N

5

Mark No. Description

COILS AND FILTERS

L401
L403
L101
L102
L103

CAPACITORS

C118, C424
C164-C166
C117
C102
C140

C141, C144, C525, C527
C175
C149, C153, C154, C156, C160
C155, C173, C431
C104, C127

C432
C167
C129
C128
C148, C151, C152, C157-C159

C405, C407
C124, C403, C434, C436, C503
C515, C516
C150, C459, C547
C435

C517-C519
C548
C106
C452, C520, C521
C142, C462

C438-C447, C464, C507-C509
C511, C512
C130
C451
C103, C105, C109-C111, C116

C119, C120, C122, C125, C126
C132, C138, C139, C163
C168-C170, C176, C178
C408-C410, C412, C414
C417-C419, C421-C423, C450

C453, C455-C458, C460, C463
C502, C504-C506, C510
C513, C514, C523
C411, C415
C425, C426

C179, C180, C465
C549, C550 (47/16)

RESISTORS

R445, R448
R158
R413
R195, R196, R208, R435-R437
R520-R522, R529, R530, R532

Other Resistors

OTHERS

X101 (15MHz)
X102 (32.768kHz)

6

Part No.

CTF1399
LAU470J
LCYA100J2520
LTA102J
VTL1081

CCSRCH100D50
CCSRCH101J50
CCSRCH150J50
CCSRCH221J50
CCSRCH331J50

CCSRCH471J50
CCSRCH681J50
CEAL100M50
CEAL101M10
CEAL101M16

CEAL101M6R3
CEAL220M6R3
CEAL221M10
CEAL2R2M50
CEAT100M50

CEAT100M50
CEAT101M10
CEAT101M10
CEAT101M16
CEAT101M6R3

CEAT102M6R3
CEAT221M6R3
CEAT471M16
CEAT471M6R3
CKSRBY103K50

CKSRBY104K16
CKSRBY104K16
CKSRBY105K6R3
CKSRBY474K10
CKSRBYF104Z25

CKSRBYF104Z25
CKSRBYF104Z25
CKSRBYF104Z25
CKSRBYF104Z25
CKSRBYF104Z25

CKSRBYF104Z25
CKSRBYF104Z25
CKSRBYF104Z25
CKSRBYF104Z50
CKSRBYF105Z10

CKSYB106K10
VCH1241

RS1/10S0R0J
RS1/10S330J
RS1/16S7500F
RS1/16S75R0F
RS1/16S75R0F

RS1/16S###J

CSS1666
VSS1197

7

Mark No. Description

JA101 MINI JACK(4P)
CN103 CONNECTOR POST
JA102 JACK

BT101 LITHIUM BATTERY
JA104 JACK
JA504 JACK
JA502 3P PIN JACK
CN102 9P CONNECTOR

CN101, CN104, CN105 27P CONNECTOR
CN401, CN402 CONNECTOR
JA501 OPT. LINK OUT 12MB/S
ST101 BATTERY SOCKET
KN401 SCREW PLATE

KN403-KN405 WRAPPING TERMINAL
CN404 21P PLUG

FLJB ASSY SEMICONDUCTORS

IC301
Q306
Q308
Q307
D305

△ D304, D306
D302
D301
D303
D310-D312

COILS AND FILTERS

L301, L303

TRANSFORMERS

△ T302

CAPACITORS

C331, C332
C324
C313
C322, C323
C319

C301, C303, C321
C320
C304, C308, C312, C316-C318
C325, C326, C334, C335
C333, C336

RESISTORS

R316
Other Resistors

OTHERS

IC302 REMOTE RECEIVER UNIT
V301 FL TUBE
JA302 3PIN JACK(VERTICAL)
JA301 YC CONNECTOR(VERTI)
CN302 8P CONNECTOR

CN301 21P SOCKET
KN301, KN302 SCREW PLATE
0 FL HOLDER (FE)

AKN1073
B2B-PH-K
RKN1004

VEM1034
VKB1192
VKB1193
VKB1222
VKN1413

VKN1431
VKN2008
VKS1001
VKX1019
VNE1948

VNF1084
XKP3070

PT6315
2SA1576A
2SC4081
2SC5712
1SS355

RF101L2S
UDZS13(B)
UDZS15(B)
UDZS2R4(B)
UMZ6R8N

LAU220J

VTT1166

CCSRCH471J50
CEAL100M50
CEAL101M10
CEAL101M16
CEAT101M10

CKSRBY103K50
CKSRBY221K50
CKSRBYF104Z25
CKSRBYF104Z25
CKSRBYF104Z50

RS1/10S22J
RS1/16S###J

RPM7140-H
VAW1085
VKB1189
VKB1190
VKM1001

VKN2014
VNF1084
VNF1130

	5		6
Mark No.	Description	Part No.	
C1320, C1321, C1328-C1331		CKSSYF104Z16	
C2501-C2505, C3004-C3006, C3101		CKSSYF104Z16	
C3104-C3106, C3113, C3202, C3203		CKSSYF104Z16	
C3206, C3209, C3217, C3309, C3312		CKSSYF104Z16	
C3401, C4244, C4249, C4251-C4256		CKSSYF104Z16	
C4261-C4263, C4265, C4291, C4501		CKSSYF104Z16	
C4504-C4507, C4516, C4517		CKSSYF104Z16	
C4523, C4524, C4552-C4562		CKSSYF104Z16	
C5110-C5112, C5114, C5118, C5127		CKSSYF104Z16	
C1001, C1006, C1007, C1011, C1013		VCG1057	
	(1.0 YF)		
C1018, C1027, C1031, C1113, C1115		VCG1057	
C1202, C1204, C1208, C1221, C1223		VCG1057	
C1227, C1303, C1306, C1309, C1902		VCG1057	
C3001, C3102, C3103, C3219		VCG1057	
C3305, C3306, C3316, C3737, C3738		VCG1057	
C3801, C3802, C4202-C4219		VCG1057	
C4221-C4229, C4232, C4239, C4240		VCG1057	
C4248, C4250, C4257-C4260, C4264		VCG1057	
C4266, C4267, C4269-C4274		VCG1057	
C4283, C4284, C4518, C4520		VCG1057	
C4572-C4574, C5101, C5103, C5113		VCG1057	
C5119, C5120, C5123-C5126		VCG1057	
C3310, C4278, C4285, C4288, C4290		VCG1058	
C4533 (1.0 YB)		VCG1058	
C4532 (22/6.3)		VCG1061	
C1215 (150/4)		VCH1246	
C4548, C4575, C4576 (47/4)		VCH1253	
RESISTORS			
R5133, R5134		RAB4CQ0R0J	
R1042-R1047, R1051, R1054		RAB4CQ103J	
R4241, R4242		RAB4CQ103J	
R3853-R3857, R4252, R4253, R4352		RAB4CQ220J	
R4354, R4356, R4358, R4360		RAB4CQ220J	
R3801-R3806, R3828-R3833		RAB4CQ223J	
R1241-R1244, R1251-R1254		RAB4CQ330J	
R1325-R1328, R3810-R3813, R3824		RAB4CQ330J	
R3837-R3840, R3851		RAB4CQ330J	
R1401-R1411, R1451-R1454		RAB4CQ560J	
R1455-R1458		RAB4CQ820J	
R3208, R3223		RN1/16SC56R0D	
R3314, R3315, R4536, R4537		RN1/16SE1003D	
R3207, R3226		RN1/16SE1502D	
R5103		RN1/16SE5101D	
R3209, R3224		RN1/16SE8201D	
R5108		RN1/16SE9101D	
R3003, R3101, R3201, R3205, R3206		RS1/10S0R0J	
R3402, R4224, R4230, R4232		RS1/10S0R0J	
R4513, R4514, R4522		RS1/10S0R0J	
R3110, R4532		RS1/16S1001F	
R4202, R4206, R4531		RS1/16S1101F	
R2502, R2505, R2508, R2511, R2514		RS1/16S1800F	
R4201, R4204		RS1/16S2201F	
R4203, R4210		RS1/16S2701F	
R1501, R1503		RS1/16S3901F	
R4534		RS1/16S5600F	
R5104-R5107		RS1/16S56R0D	
Other Resistors		RS1/16S###J	

7		8
Mark No.	Description	Part No.
OTHERS		
CN4502	CONNECTOR	AKM1290
CN1901	7P CONNECTOR	VKN1411
CN3801, CN3802	FFC CONNECTOR	VKN1794
CN3808	30P CONNECTOR	VKN1892
CN5601	CONNECTOR	VKN2010
CN2201, CN3001	CONNECTOR	VKN2011
CN4501	CONNECTOR	VKN2012
X3401	CERAMIC (16MHz)	CSS1616
X3301	CRYSTAL (27.000MHz)	VSS1204
X4281	CRYSTAL (27.000MHz)	VSS1205
X5101	CRYSTAL (24.576MHz)	VSS1206
I SCRB ASSY		
SEMICONDUCTORS		
IC701		BA4558F-HT
IC801		LA73026AV
IC703		LA73054
IC802-IC804		MM1506XN
IC805		MM1637XVB
IC702, IC806		SN74AHC2G
Q708, Q710, Q712-Q714, Q806		2SA1576A
Q808-Q812, Q814, Q815		2SC4081
Q702, Q704		2SC4097
Q703, Q803, Q805		DTA124EUA
Q705, Q813, Q816		DTC124EUA
Q801, Q802		HN1C03FU
Q701, Q807		RN4903
D701, D801, D829		1SS355
D830, D831		DAN217U
D802-D815, D822-D826, D828		DF3A5.6FU
D816		RB501V-40
D702		UDZS12(B)
COILS AND FILTERS		
L701, L703, L705		LCYA100J25
L702, L704, L706		LCYA180J25
CAPACITORS		
C742, C748, C755		CCSRCH10M
C846-C849		CCSRCH10M
C741, C751, C758		CCSRCH18M
C817, C818		CCSRCH22M
C871, C873		CCSRCH22M
C745, C753, C760		CCSRCH27M
C836-C845		CCSRCH47M
C744, C752, C759		CCSRCH68M
C743, C749, C756		CCSRCH8M
C868-C870		CEAT102M6
C807, C808, C810, C811		CEVW100M
C709, C717, C721, C731, C734		CEVW101M
C805, C855		CEVW101M
C726, C727, C802, C833, C834		CEVW101M
C856-C858		CKSQYB225
C801		CKSQYF105
C814, C815, C823-C826		CKSQYF106
C832		CKSRYB103
C712-C716, C809, C813, C816		CKSRYB104
C829, C852		CKSRYB104
C703, C707, C710, C711		CKSRYF10

	1	2
	Mark No.	Description
A		C718-C720, C722, C724, C725 C730, C733, C736, C739, C747 C754, C761, C762, C835, C851 C859, C862, C867, C872, C874
		CKSRYF104Z25 CKSRYF104Z25 CKSRYF104Z25 CKSRYF104Z25
		C804, C806, C854 C812 C819, C820, C827, C828 C860, C861, C863-C866 C723, C728
		CKSRYF105Z10 CKSYB105K16 CKSYB106K10 CKSYB106K10 CKSYB475K16

RESISTORS

B	R836, R842 R758-R760 R715-R726, R737, R738 R745, R746, R753, R754 R826, R829-R832, R853-R857	RS1/10S75R0F RS1/16S1202F RS1/16S5600F RS1/16S5600F RS1/16S75R0F
	R755, R756 Other Resistors	RS1/16S8201F RS1/16S###J

OTHERS

	JA801, JA802 CONNECTOR CN701, CN702 27P CONNECTOR KN801 SCREW PLATE	VKB1157 VKN1431 VNE1948
--	---	-------------------------------

J POWER SUPPLY UNIT

OTHERS

C	△IC202 PROTECTOR (400mA) △IC301 PROTECTOR (630mA) △IC401, IC402 PROTECTOR (1.6A)	AEK7054 AEK7061 AEK7066

6. ADJUSTMENT
There is no information to be shown in this chapter.

7. GENERAL INFORMATION

7.1 DIAGNOSIS

◆ Jigs and Tools to be used

Remote control unit for serving (GGF1381)
 DVD Recorder Data Disc (GGV1239) (When repairing until June 2005, use the Disc GGV1179.).
 Download disc
 Test disc (GGV1025)
 DVD-RW (Commercial goods)

◆ Service Mode List

1. Setting type

Item	When to perform
7.1.1 Model setting	• When replacing MAIN ASSY or JACB ASSY.
7.1.2 CPRM ID number and data	• When "CPRM ERROR" is displayed on the display screen. • After the MAIN ASSY, DRIVE ASSY or HDD replaced.
7.1.3 Firmware downloading method	• After model setting (After replacing MAIN ASSY, DRIVE ASSY, JACB ASSY). • After the HDD is replaced. • When NG is displayed for the version information in Service mode.
7.1.4 Video Adjustment for Specific Area	• When a flicker appears on the tuner display like a horizontal or vertical out-of-sync symptom
7.1.5 (4) OSD Filter Setting	• When a character flicker appears on the OSD depending on the monitor.

2. Diagnosis type


7.1.5 Service Mode First screen : Version, Simple diagnosis of the RF level, Simple error rate measurement, HDD information. Second screen : ATA/ATAPI debug screen, LD degradation judgement Fourth screen : VR-recording-related error loss Fifth screen : VR-playback-related error loss	• When confirming version information • When confirming the state of DRIVE Assy.
7.1.6 DV Service Mode	When any failures occurs while a DV device connected
7.1.7 EPG Service Mode	When EPG data cannot be or can be only partially obtained.
7.1.8 Aging Mode	When a claimed symptom is difficult to reproduce.
7.1.9 HDD Check Mode	When checking the quality of HDD.

◆ Necessary procedure List when replacing Assys

Following is the surely necessary procedures and the product state after changing when replacing next ASSYs.

Replaced ASSY	Necessary setting	State after replacing	
		User setting	HDD contents
MAIN ASSY JACB ASSY	1. Model setting 2. CPRM setting 3. Firmware download	×	○
DRIVE ASSY	1. CPRM setting 2. Firmware download	○	○
HDD	1. CPRM setting 2. Firmware download	○	×

◆ SERVICE MODE MAP

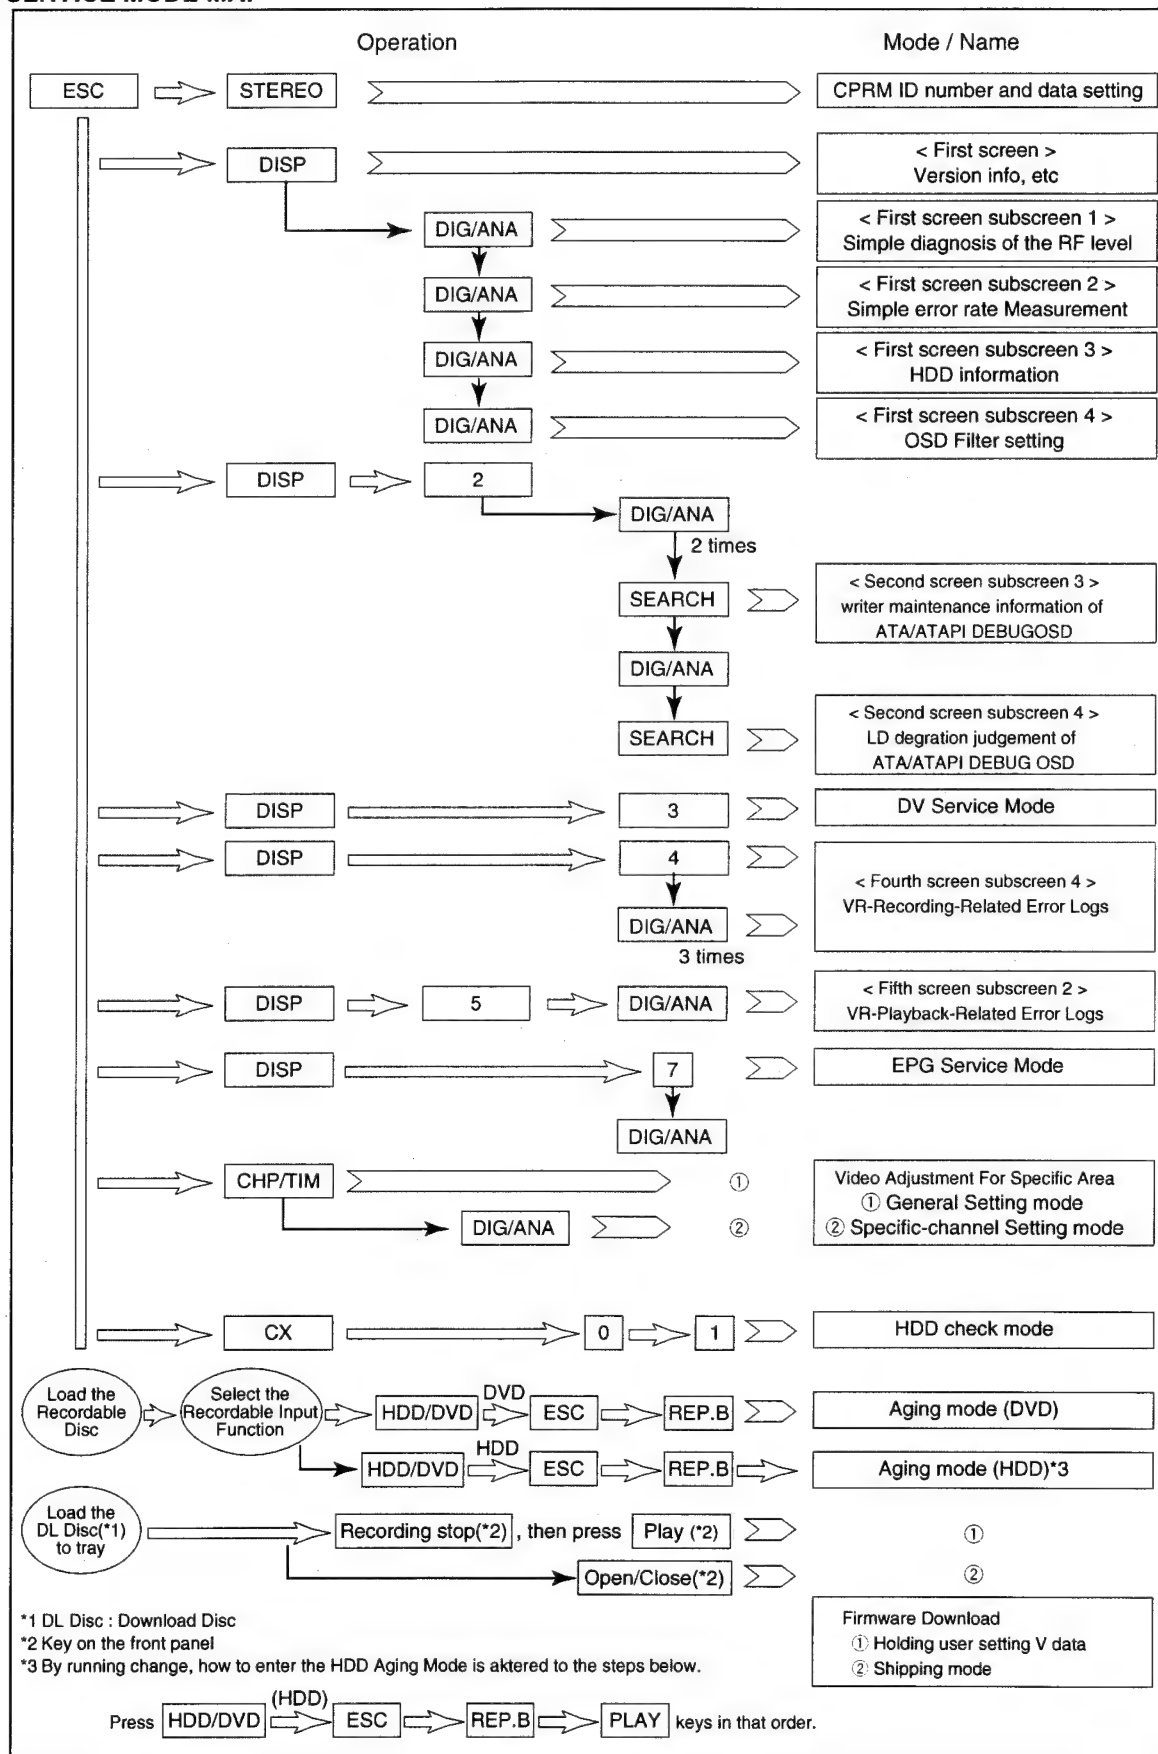

7.1.1 MODEL TYPE SETTING

[Purposes]

When the MAIN Assy and/or TUJB Assy that are(is) commonly used with another model are(is) replaced, they(it) must recognize the model of this unit.

Items to be set: The model number, destination, and region No. must be set.

[Tool to be used]



Remote control unit for servicing
(GGF1381)

[Notes]

- Once the setting has been made, it can never be changed. Be sure to make the setting correctly.
- As this setting resets the Assy(s) in question to the factory-préset status, it is recommended that you obtain the customer's consent beforehand.

[Procedures]

- ① After power on, the following screen is displayed on TV monitor. Press four digits properly (for example "2201") by using the remote control unit for service, according to the screen information.
- ② Disconnect then reconnect the AC power cord of the unit. Be careful not to impart vibration to the unit immediately after the AC power cord is disconnected.
- ③ Reset the recorder to all its factory settings.
(Make sure that the recorder is on. Press and hold ■ (STOP) key and press ⏻ (STANDBY/ON) key on the front panel.)
The recorder turns off with all settings reset.
- ④ Press [ESC] then [DISP] keys by using the remote control unit for servicing, and then confirm each Model Name (for example "DVR-530H/WY").

[Recorder's Model Setting]

Input the number using the remote for Service.

> ---

Input No.	Model	**	Destination
[22** : DVR-530H]		[01 : /WY]	
[23** : DVR-630H]		[02 : /WV]	
[24** : DVR-433H]		[03 : /WY/RE]	
		[04 : /WY/GR]	
		[05 : /WY/SP]	

```

DVR-530H/WY   VERSION : 3.**
SYSCON  : RELEASE_166
Rev      : 1.10357.2.43
TUNERCON : 835.000      OK
DRIVE    : DVD-RW DVR-R09R  OK
          1.52          OK
          DLDL000946WL      OK

HDD      : WDC WD1600BB-xxGUCx 160
DEVICE   : PRISM2-ES2
REGION   : 2
C        : *****
FLASH    : 64M
IRCON(*) : 1.01          OK
TFD(*)   : EPG EU LIB      OK
    
```

(*) : Except DVR-433H model

- ⑤ End

7.1.2 CPRM ID NUMBER AND DATA SETTING

[Purposes]

For the DVD recorder, it is necessary with the recoding/playback of DVD-RW disc to set an individual number (ID number) and ID data to each recorder. If the number and data are not set correctly with the following procedure, cannot work with residual quantity 0:00 or operations in the future may not be guaranteed with RW disc. You will find the ID number to be set on the ID label on the rear panel.


The Input is Necessary When:

- "CPRM ERR" is displayed on the FL display immediately after the power is turned on or in Stop mode.
- When the MAIN ASSY, DRIVE ASSY or the HDD is exchanged.

[Tools to be used]



Remote control unit supplied
with the unit (VXX2969)



Remote control unit for servicing
(GGF1381)



DVD Recorder Data Disc
(GGV1239) (*1)

[Notes]


Important: If no ID label is found on the rear panel, write down the specified ID number by checking it according to "How to confirm the ID number" shown below.

- Input the ID number while the unit is in Stop mode.
- After the data are read from the ID data disc (GGV1239), the disc will automatically be unloaded.

(*1) DDV1239 will be released on July 2005.

Until new disk (GGV1239) will be released, use GGV1179.

Input Flow of the ID No. and ID data when exchanging HDD, MAIN Assy or Drive Assy

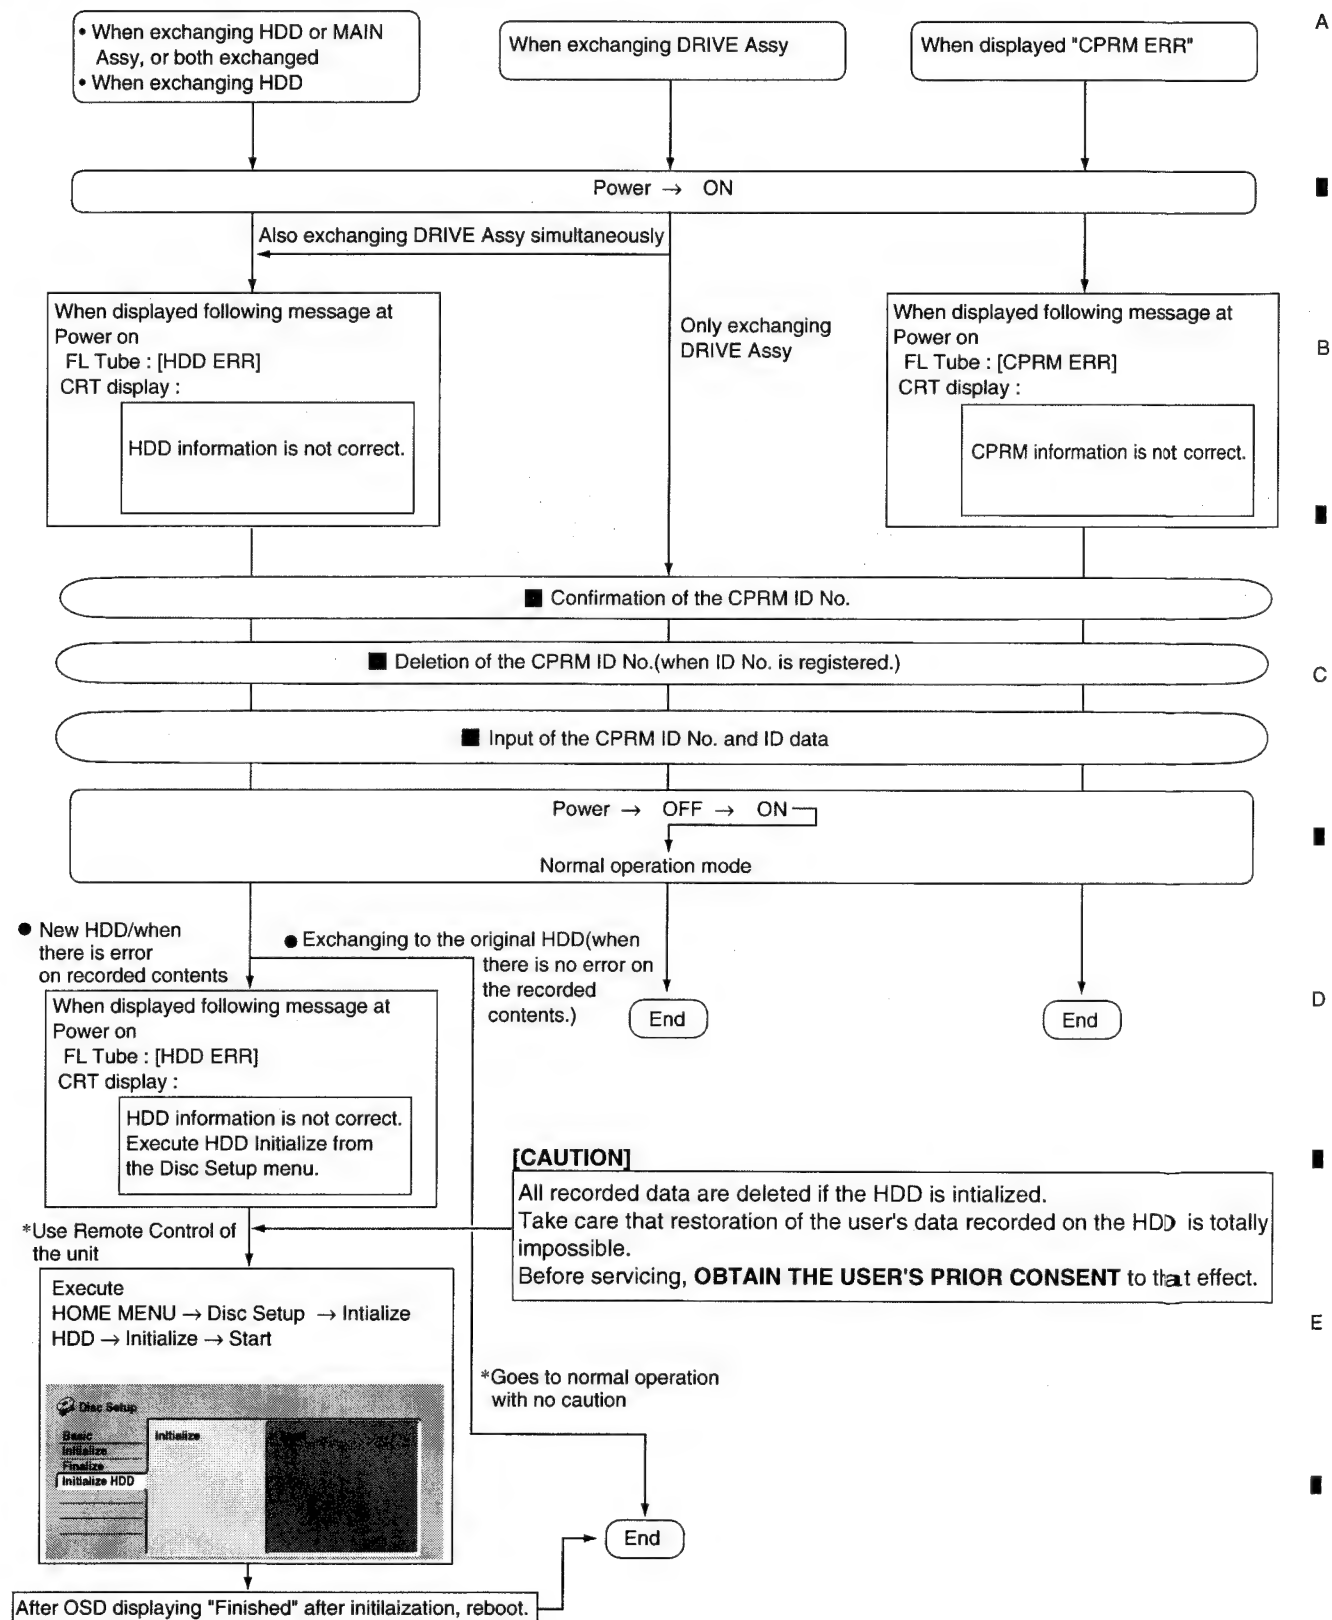

How to Input the ID Number and ID Data

A

- ① To enter the input mode, press **ESC**+**STEREO** keys sequentially in a status with no ID number set, such as after FLASH-ROM downloading.



- ② As number input is enabled when the unit enters the input mode, input the 9-digit ID number. (The entered number is also displayed on the FL display.)

B

②

[Recorder's ID Number Setting]
ID Number ?
>-----
<CLEAR> Exit

Input ID Number !



- ③ After inputting the number, press **SEARCH** keys to register the ID number.

C

③

[Recorder's ID Number Setting]
ID Number ?
> 0 0 0 0 0 0 0 0 1 OK ?
<PLAY> Compare Mode
<SEARCH> Enter

Input ID Number !



- ④ When the ID number has been registered, the unit enters the ID data input mode. (The FL display indicates "INSERT ID.") In this condition, place the ID data disc on the tray and close the tray using the CLOSE key "■/▲" on the player.

E

④

[Recorder's ID Data Setting]

<CLEAR> Exit

Insert The ID Data Disc !



- ⑤ While the data are being read, the message shown in the figure at left is displayed on the screen. (The FL display indicates "LOAD ID.")

[Recorder's ID Data Setting]

⑤

Loading The ID Data Disc !



- ⑥ When the ID data have been read, the data are written to the FLASH-ROM. (The FL display indicates "WRITE ID.")

[Recorder's ID Data Setting]

⑥

Wait Rom Writing !



- ⑦ When the ID data have been written to the FLASH-ROM, the message "Rom Write OK" is displayed on the screen. (The FL display indicates "ID OK.")

- ⑧ After confirming this message, press **CLEAR** key to exit the input mode.

[Recorder's ID Data Setting]

⑦

Rom Write OK !

⑧

<CLEAR> Exit

F

[How to Confirm the ID Number]

- ① Press **[ESC]** + **[STEREO]** keys sequentially with an ID number already set, and the unit enters the ID number confirmation mode.
- ② The set ID number is displayed on the screen (and on the FL display), permitting you to confirm it.
- ③ To exit this mode, press **[CLEAR]** key.

② → [Recorder's ID Number Setting]
ID Number ?
[0 0 0 0 0 0 0 1]
Compare
> *****

③ → <CLEAR> Exit
<STEREO> ID Data Setting Mode
Input ID Number !

[How to Clear the ID Number]

- ① Press **[ESC]** + **[STEREO]** keys sequentially with an ID number already set, and the unit enters the ID number confirmation mode.
- ② Input the same number as the ID number you have set.

② → [Recorder's ID Number Setting]
ID Number ?
[0 0 0 0 0 0 0 1]
Compare
> *****

<CLEAR> Exit
<STEREO> ID Data Setting Mode
Input ID Number !

- ③ After inputting the number, press **[STOP]** key.
Only when the entered number matches the set ID number, the ID number is cleared and the unit exits this mode.
If the numbers do not match, you must return to step ②.
(**[STOP]** key is not accepted until 9 digits are entered.)

③ → [Recorder's ID Number Setting]
ID Number ?
[0 0 0 0 0 0 0 1]
Compare
> 0 0 0 0 0 0 0 1 OK ?

<PLAY> Enter
<STOP> Memory Clear
<STEREO> ID Data Setting Mode
Input ID Number !

7.1.3 FIRMWARE DOWNLOADING METHOD

[Purposes]

1. When the main board is replaced, the firmware versions for the system control computer, drive, IR microcomputer and the TUFL microcomputer do not match, and operations of the unit may be destabilized.
To match the versions for the above four, firmware downloading is necessary in the following two cases:
 - ① After the model setting
 - ② When NG is displayed on the first screen (version information, etc.) of Service mode
 - ③ After changing MAIN Assy, JACB Assy or Drive Assy
 - ④ After changing HDD (downloading the EPG Library (program code) to HDD)

[Notes]


When downloading is disabled, at ON time, usually "HDD data is not correct" is displayed on screen and "HDD ERR" on the FL. The EPG program is not booted up.

2. Rewriting the firmware to the latest version may ameliorate the symptoms claimed by the customer.

There are the following two methods for downloading: disc download and serial download

1. DISC DOWNLOAD

[Tools to be used]



Remote control unit
for servicing
(GGF1381)



Download DISC

[Notes]

Be sure NOT to turn off the unit during downloading.
If the unit is turned off during downloading, the SYSCON, TUNERCON and DRIVE programs may not be properly rewritten, in which case the unit may not be able to initialize itself normally when turned on again.

[Procedure]

- ① Open a disc tray by pressing the "OPEN/CLOSE" button.
- ② Put the download disc on the tray. Press a "Record Stop" button while pressing a "PLAY" button on the frontpanel.
 - * The disc tray closes automatically and the disc is loaded.
 - * The disc tray opens automatically after loading.

FL display

LOAD



DOWNLOAD-1



DISC DWLD

- ③ Take out the Download Disc.



DOWNLOAD-2



DOWNLOAD-3



DOWNLOAD-4



DOWNLOAD-5

- * After download is completed, the power turns off, and turns on and a disc tray closes automatically.
- * It takes for about 7-8 minutes until download is completed.

- ④ Press and hold a "ESC" button, then press "DISP" button on the remote control unit for servicing.
- ⑤ Confirm a firmware release version.
- ⑥ Press "ESC" button on the remote control unit for servicing in order to exit the test mode.

[Tips]

(1) If the power is not correctly turned on or when the power is shut off during downloading, proceed as follows before performing download again:

- In a case where downloading was incorrectly terminated while "DOWNLOAD-1" was displayed on the FL display:
The EPG Library (program code) will not be downloaded to HDD correctly. (*)
Download from the disc again.
When it is unable to download, or not operating correctly, replace the HDD.
- In a case where downloading was incorrectly terminated while "DOWNLOAD-2" was displayed on the FL display:
The SYSCON program will not function correctly.
If the program cannot be downloaded from the disc or through serial communication, replace the FLASH ROM (IC1102 : MAIN ASSY).
- In a case where downloading was incorrectly terminated while "DOWNLOAD-3" was displayed on the FL display:
The DRIVE program will not function correctly.
If the program cannot be downloaded from the disc or through serial communication, replace the DRIVE Assy.
- In a case where downloading was incorrectly terminated while "DOWNLOAD-4" was displayed on the FL display:
The program for the tuner microcomputer will not function correctly.
If the program cannot be downloaded from the disc or through serial communication, replace the TUNERCON microcomputer (IC101 : JACB ASSY).
- In a case where downloading was incorrectly terminated while "DOWNLOAD-5" was displayed on the FL display:
The program for the IR microcomputer will not function correctly. (*)
If the program cannot be downloaded from the disc or through serial communication, replace the IRCON microcomputer (IC3401 : MAIN ASSY).

(2) The setting way to shipping mode (Reference)

At ② lines of the [Procedures], press "OPEN/CLOSE" button while pressing REC STOP button.

(*) : Except DVR-433H model

2. SERIAL DOWNLOAD

[Purposes]

1. When the main board is replaced, the firmware versions for the system control computer, drive, and the TUFL microcomputer do not match, and operations of the unit may be destabilized. In such a case, the versions for the above three must be matched.
2. This method is used when disc downloading fails.


• In the serial download, the stored code are not downloaded to HDD. After serial downloading, be sure to do disc download.

[Tools to be used]

- * PC with serial port
- * RS-232C straight cable
- * RS-232C I/F jig (GGF1348)
- * 7P FFC (VDA1681)
- * Download program (UFU.exe)
- * Firmware



[Connection]

Connect as follows:



[Procedures]

- ① Connect the 232C I/F jigs above way.
- ② Turn on the PC and start the "UFU.exe".
- ③ Select the Firmware file. ("sz0" file)
- ④ Turn the DVD recorder on and start the download program.
"Target Device is connected" is appeared on the screen.
- ⑤ Select the Communication Speed (Baud Rate)
 - a) Base Speed 38,400
 - b) Data Send Speed 115,200
- ⑥ START
 - Even if you click "START" button, sometimes "Communication Error" may come out one to twice, and download may fail. In this case, please click "START" again.
 - Other factors can be considered if download fails 3 times or more.
 - And it takes about an hour for updating the firmware.

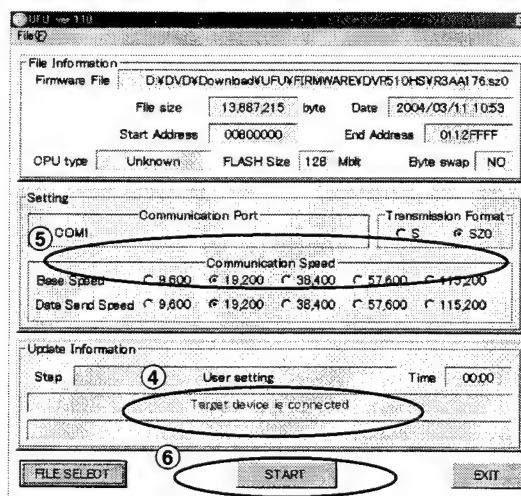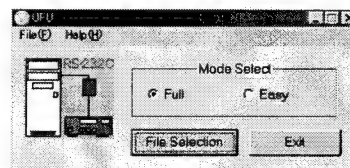

7.1.4 VIDEO ADJUSTMENT FOR SPECIFIC AREA


[Purposes]

Depending on the area, if a flicker may appear in a picture received by the tuner, it can be corrected or reduced with this setting.

[Tools to be used]



Remote control unit supplied with the unit (VXX2969)



Remote control unit for servicing (GGF1381)

1. Specific-Channel Setting mode

In this mode, specific settings can be made for up to 12 channels.

For channels that do not have specific settings, the settings of General Setting mode are applied.

[How to enter this mode]

- ① Select a channel or line input (L1-L3) on which a specific setting is to be made.
- ② Press the **[ESC]** then **[CHP/TIM]** keys on the remote control unit for servicing. "General Setting mode" is displayed.
- ③ Press the **[DIG/ANA]** key in General Setting mode. Specific-Channel Setting mode is entered.

[How to exit]

Press the **[ESC]** key on the remote control unit for servicing to return the Normal mode.


[Note]

Setting is in effect only during recording/playback stop.

[Setting examples]

The setting examples in Specific-Channel Setting mode are shown below.

For details on each setting item, see "Table 1: Key operations in Specific-Area Setting mode."

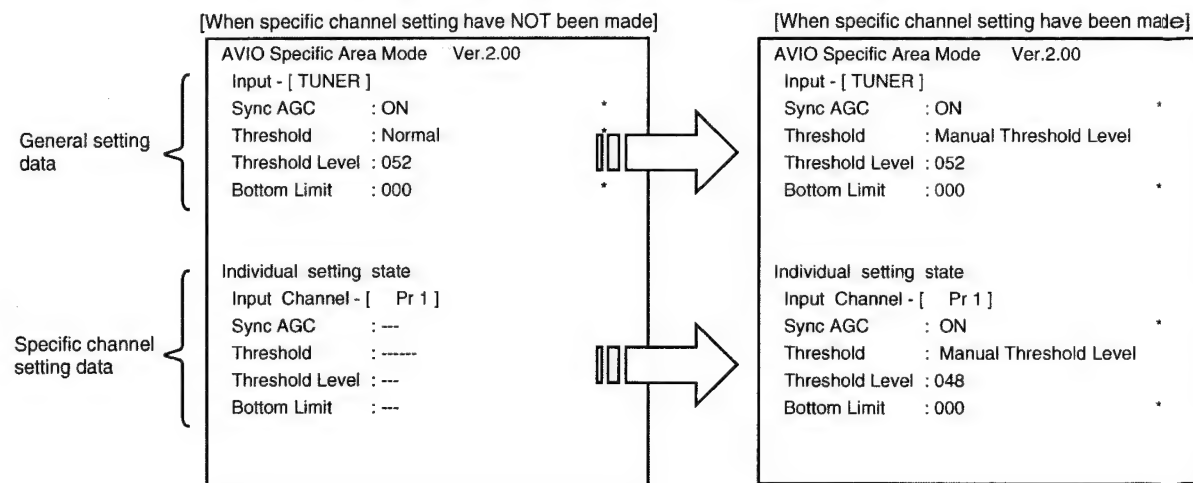

[Tips]

- If a channel that does not have specific settings is displayed, the setting figures are displayed as hyphens (- -).
- If the setting figures are not displayed as hyphens, those settings have been specifically set even if they are identical to the default settings or those of General Setting mode.
- The setting indicated with an asterisk (*) is the default.
- The channels to be indicated for "Input Channel" are as shown below:
 Line inputs: L1-L3, DV (DV is not valid for specific-area settings.)
 Tuner channels: Channels received by the tuner (channels to be set in Specific-Channel Setting mode, etc.)

[Tips]

- Indication when the maximum number (12) of channels have individual settings
If a channel that does not have specific settings is currently selected, the indication will be as shown below, and individual data items cannot be set for that channel. To set individual data items for the currently selected channel, you must clear any specific-channel settings for one or more channels.

AVIO Specific Area Mode Ver.200
Input - [TUNER]
Sync AGC : ON *
Threshold : Manual Threshold Level
Threshold Level : 052
Bottom Limit : 000 *

Individual setting state

Sorry !
You can store only 12 channels
for Specific Area mode.

2. General Setting mode**[How to enter this mode]**

- To shift from Specific-Channel Setting mode:
Each time the **[DIG/ANA]** key is pressed, Specific-Channel Setting mode and General Setting mode are alternately selected.
- To shift from Normal mode (recording/playback stop):
Press the **[ESC]** then **[CHP/TIM]** keys.

[How to exit] Press the **[ESC]** key to return the normal mode.

[Setting examples]

Show setting example on the General Setting mode screen to the following.
Regarding setting of actual each item, refer to table 1 (key operations in specific-area setting mode).

[General Setting mode screen]

AVIO Specific Area Mode Ver 2.00
Input - [TUNER]
Sync AGC : ON *
Threshold : Normal *
Threshold Level :
Bottom Limit : 000 *

*: Setting is the default.

[Display in General Setting mode when the channel currently displayed has specific settings]

AVIO Specific Area Mode Ver 2.00
Input - [TUNER]
Sync AGC : ON *
Threshold : Normal *
Threshold Level :
Bottom Limit : 000 *

This channel is set up
individually.

[Tips]

- General Setting mode can be entered only during recording/playback stop.
- The currently selected input mode (TUNER or LINE) is displayed for "Input."
- If L1, L2, L3, or DV is selected for input, general settings for the line input can be made (DV is not valid for specific-area settings), and if TUNER is selected, general settings for the tuner input can be made.

Table 1: key operations in specific-Area setting mode (1/2)

Key operations in Specific Area Setting mode of the remote control units are shown in the table below
(the keys are of the remote control unit for servicing unless otherwise stated):

Key	Operation	Switching (*: Default)	Remarks	Used in Specific-Channel Setting mode	Used in General Setting mode
[DIG/ANA]	Switches General setting mode and Specific setting mode.	—	—	○	○
[INPUT SELECT], [CHANNEL +/-] (Remote control unit supplied with this unit)	Switches inputs or channels.	—	—	○	○
[SIDE A], [SIDE B]	Sets SyncAGC.	ON(*) / OFF	ON : The sync level is set to an appropriate value. OFF : Cancel the Sync AGC.	○	○
[Rev x3], [x3 Fwd]	Sets Threshold.	(*)Normal Bottom + Alfa Manual Threshold Level V Manual Threshold Level		○	○
[Rev CHAPTER SKIP] [CHAPTER SKIP Fwd]	Sets Threshold Level.	According to the selected Threshold type, the value can be changed in the range shown below:	—	○	○
		• Bottom + Alfa 0 - 255 (Default : 87)		○	○
		• Manual Threshold Level 0 - 255 (Default : 173)		○	○
		• V Manual Threshold Level 0 - 255 (Default : 173)		○	○

Table 1: key operations in specific-Area setting mode (2/2)

Key	Operation	Switching (*: Default)	Remarks	Used in Specific-Channel Setting mode	Used in General Setting mode
[<< STILL STEP], [STILL STEP >>]	Sets Bottom Limit.	0 - 255 (Default: 0)	-	○	○
[PLAY]	All channels that have specific setting data will be canceled, and the specific data will be initialized.	-	The General Setting data will not be changed.	○	×
[CLEAR]	Specific-Channel Setting mode: If the currently selected channel has its specific setting, that setting will be canceled. (By canceling the specific setting for that channel, the number of remaining channels that can have specific settings will be increased by one.) General Setting mode: Settings of General Setting mode are initialized.	-	Specific-Channel Setting mode: All specific data are initialized. The General Setting data will not be changed. General Setting mode: All general setting data are reset to default. The specific setting data will not be changed (will be retained).	○	○
[PAUSE]	The specific-channel-setting data for the currently selected channel are reset to default.	-	The General Setting data will not be changed (will be retained).	○	×
[ESC]	To quit VDEC Setting mode for a specific area and clear the on-screen display.	-	-	○	○

Notes:

- Each key listed in Table 1 above is active only while the tuner is completely stopped.
- The setting values will not be reset to default even if resetting to the state at the time of shipment is performed.

Overview and purposes

To be used to check the status of the product and to collect the information for failure diagnosis.

The following information to be used for servicing is displayed:

[1] First screen : Version, HDD information, etc.

[2] Second screen : ATA/ATAPI debug screen (Writer information)

[4] Fourth screen : VR-recording-related error logs

[5] Fifth screen : VR-playback-related error logs

Each screen has sublevel screens.

[Note]


After entering any Service mode screen, to shift to another Service mode screen, first quit that Service mode screen then enter another Service mode screen.

1. Version information, etc. (First screen)


[Purposes]

To check the versions of the system control computer, TUNER microcomputer, and firmware for the drive, simple measurement of the RF level for the U/V tuner, results of the simple error rate measurement, HDD information, and OSD Filter setting

[Tools to be used]

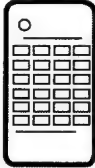

Remote control unit for servicing (GGF1381)



Aluminum-coated test disc (GGV1025)

[How to enter]

While the GUI screen is not displayed, press the **[ESC]** then **[DISP]** keys.

How to enter and change subscreens of the first screen: While the first screen is displayed, press the **[DIG/ANA]** key repeatedly until your desired subscreen is displayed. The subscreens change

[How to quit]

Press the **[ESC]** key.

[Description]

(1) First screen

① DVR-530H/WY ② → VERSION : 3.**
 ③ SYSCON : RELEASE_166
 Rev : 1.10357.2.43
 ④ TUNERCON : 835.000 OK
 ⑤ DRIVE : DVD-RW DVR-R09R OK
 1.52 OK
 DKT0000233JP OK
 ⑥ HDD : WDC WD1600BB-xxGUCx 160
 ⑦ DEVICE : PRISM2-ES2
 ⑧ REGION : 2
 ⑨ C : *****
 ⑩ FLASH : 64M
 ⑪ IRCON (*) : 1.01 OK
 ⑫ TFD (*) : EPG EU LIB OK

- ① Model name/destination
 ② Version of the recorder software
 ③ Revision No. of the system-control computer software
 ④ Version No. of the tuner microcomputer
 Result of the combination ckeck with system u-com
 ⑤ Information on the built-in drive
 (Model name, version No., model type, serial No.)
 ⑥ Data of the built-in HDD, capacity of the HDD
 ⑦ Version No. of PRISM
 ⑧ Region No.
 ⑨ CPRM information (CPRM key No.)
 ⑩ FLASH ROM information
 ⑪ EPG dictionary information, Version
 ⑫ HDD stored code information
 HDD stored data (EPG Library)
 Category of stored data
 EU EPG model : EPG EU LIB

(*) : Except DVR-433H model

OK : Appropriate version compared with that of the firmware of the system control computer
OK+ : The version of the TUNER microcomputer is advanced.
 Measures to be taken: Download the firmware.
NG : The type of the TUNER microcomputer is not appropriate.
 Measures to be taken:
 • Download the firmware.
NG- : The version of the TUNER microcomputer is older.
 Measures to be taken:
 • Download the firmware.

OK : The appropriate drive is mounted.
NG : An inappropriate drive is mounted.
 Measures to be taken: Replace with an appropriate DRIVE Assy.

OK : Appropriate version compared with that of the firmware of the system control computer
OK+ : The version of the drive microcomputer is advanced.
 Measures to be taken: Download the firmware.
NG- : The version of the drive microcomputer is older.
 Measures to be taken: Download the firmware.


OK : The serial No. for the drive has been registered.
NG : The serial No. for the drive has not been registered.
 Measures to be taken: Replace with an appropriate DRIVE Assy.

OK : Appropriate version of the IRCON
NG+ : The version of the drive IR blaster computer is advanced.
 Measures to be taken: Download the firmware.
NG- : The version of the IR blaster microcomputer is older.
 Measures to be taken: Download the firmware.

OK : Normal readout is finished.
Not Found : Disable to read
 Measures to be taken: ① CPRM Input
 ② Download the firmware.

• Details on HDD data are described below:

HDD : WDC10234564 # 160



If any abnormality exists in HDD connection, the indications shown in Table 1 below are displayed.

Table 1: HDD recognition status represented by the HDD data display

HDD identification conditions	Example of HDD data to be displayed	Remarks
Failure in physical identification of HDD (no connection, defective HDD, interface error)	Blank space	<ul style="list-style-type: none"> • Check the connection to the ATA connector. • Replace the ATA flexible cable and connector. • Replace the HDD. • Replace the resistor in the ATA communication line.
Physical identification of HDD possible, but not identified (CPRM ID is not input.)	WDC 10234564 # 160	• Input the CPRM ID.
Physical identification of HDD possible, HDD identified, but failure in logical formatting	WDC 10234564 ! 160	"!" represents an HDD-recognition error. • Initialize the HDD (see page 82), or erase all titles.
Physical identification of HDD possible, HDD identified, and correct logical formatting (HDD correctly identified)	WDC 10234564 160	

If an error indication in the HDD data does not disappear even after the above measures were taken, refer to another sheet of "HDD Service Mode."

(2) Simple diagnosis of the RF level (Subscreen 1)

[Purposes] To check the RF signal of the U/V tuner by checking the input frequency difference and AGC voltage in this debug mode

[How to enter] While the User Setting display is displayed, press the **[ESC]**, **[DISP]**, then **[DIG/ANA]** keys, in that order.

[How to quit] Press the **[ESC]** key.

[Description]

```

DVR-530H/WY      VERSION : 3.**
SYSCON  : RELEASE_***
Rev      :1.*****
TUNERCON : 835.000      OK
DRIVE    : DVD-RW DVR-R09R  OK
          1.52          OK
          DKT0000233JP      OK

HDD      : WDC WD1600BB-xxGUCx 160
DEVICE   : PRISM2-ES2
REGION   : 2
C        : *****

Input CH   : ** ch
Freq Diff : Low 1
AGC Volt   : **** mV
  
```

Subscreen 1

Input channel
Input frequency difference
AGC voltage

1) AFT voltage (Freg Diff)

How much tuning is off is monitored, as shown below:

Input Frequency	Display	
Faraway	High 7	
High (within 200kHz)	High 1~5	
Just Tune	Center	
Low	within 200kHz	Low 1~5
	over 200kHz	Low 7

2) AGC voltage (AGC Volt)

The gain controlled by the tuner is monitored to infer the input electric field intensity.
(The accuracy of inference differs depending on the product.)

	Field Intensity	AGC VOL
Intense field area (Clear image)	70 dB μ or more	3100 mV or less
Less intense field area (Noise may be generated.)	50 dB μ or more 70 dB μ or less	3100 - 4400mV
Weak field area (Much noise. EPG/VPS/PDC sometimes cannot be obtained.)	30 dB μ or more 50 dB μ or less	4400 mV or more (It is unable to discriminate under the weak field area.)
Very weak field area (Image damaged. EPG/VPS/PDC cannot be obtained.)	30 dB μ or less	4400 mV or more (It is unable to discriminate.)

Tips:

For good reception, the field intensity must be 50 dB μ or more (AGC Volt 4400 mV or less).
For accurate measurement, use a field intensity meter.

(3) Simple Error Rate Measurement (Subscreen 2)

- [How to enter]**
- While the User Operation screen is displayed, press the **[ESC]** then **[DISP]** keys, then the **[DIG/ANA]** key twice, in that order.
 - While subscreen 1 of the first screen is displayed, press the **[DIG/ANA]** key.

[How to quit] Press the **[ESC]** key.

[Measurement procedures]

- Display subscreen 2.
- Load the Test disc (GGV1025).
- Judge the results of the error rate measurement by referring to Table 1 on page 89.

ERR RATE : *.*e-*

Subscreen 2

[Tips]

During VR mode playback, the average value of the past 10 VOBUs is displayed. During DVD-Video or Video mode playback, the average value of the past 256 sectors is displayed.
During VR mode playback, the speed ratio of the drive (/: normal, no indication: double speed) is also displayed.

Table 1: Thresholds when determining OK or Error

Disc type	Recording mode	Finalized or not finalized	Reference value
DVD-VIDEO	—	—	8.0×10^{-4}
DVD-R	Video mode	Finalized	1.0×10^{-3}
		Not finalized	1.0×10^{-3}
DVD-RW	Video mode	Finalized	1.0×10^{-3}
		Not finalized	1.0×10^{-3}

(4) HDD information (Subscreen 3)

- [How to enter]**
- While the User Operation screen is displayed, press the **[ESC]** then **[DISP]** keys, then the **[DIG/ANA]** key three times, in that order.
 - While subscreen 2 of the first screen is displayed, press the **[DIG/ANA]** key.

[How to quit] Press the **[ESC]** key.

[Mode description]

HDD Info
Life Time: 87599h 09m 05s

← Cumulative HDD-on time

Subscreen 3

[Tips]

• **How the data on cumulative HDD-on time are processed in memory**

Storage place:
FLASH ROM

Timing of referring to the data on cumulative HDD-on time:

When the power is turned on, fails, the FLASH ROM is referred to.

Timing of updating the data on cumulative HDD-on time:

While the HDD is on, the data on cumulative HDD-on time in the RAM is updated every 3 seconds, and every time updating is executed the data are stored in the Backup SRAM. When the power is turned off, the data are stored in the FLASH ROM.

• **How to clear the data on cumulative HDD-on time**

FLASH ROM:

When the HDD Identification Setting is performed, the data on cumulative HDD-on time are automatically cleared. The HDD Identification Setting is automatically performed when the CPRM setting is performed on the CPRM setting screen (to display the CPRM setting screen, press the **[ESC]** then the **[STEREO]** keys).

- Notes:**
- The data on cumulative HDD-on time are not cleared when resetting to factory-preset values is performed.
 - The data on cumulative HDD-on time are not cleared when the system-control computer software is downloaded.


(5) OSD FILTER SETTING (SUB screen 4)

A

[Purpose]

Depending on the monitor used, the character flicker on the OSD may stand out.
If a system, such as character flicker, appears on the monitor, select the filter response.

[Tools to be used]



Remote control unit for servicing
(GGF1381)

B

[How to enter]

- While the User Operation screen is displayed, press the **ESC** then **DISP** keys, then the **DIG/ANA** key four times, in that order.
- While subscreen 3 of the first screen is displayed, press the **DIG/ANA** key.

[How to quit]

Press the **ESC** key.

C

[Setting procedures]

- Display subscreen 4.
- Select the setting from the key operation table.

OSD Filter Setting

OSD FILTER : ON

Subscreen 4

[Tips]

- If a setting data is changed, that is immediately reflected, and the data are written to nonvolatile memory (IC1102 : FLASH).
- The download for shipping mode see the data to default (ON).

D

[(Table 2) Key operation of OSD Filter setting]

Key	Operation	Setting data (* : default)	Remarks
[Rev x 3] [x 3 Fwd]	Select ON / OFF setting of OSD Filter	ON(*) / OFF	[Rev x3] : Set the OSD Blightness Filter OFF [x3 Fwd] : Set the OSD Blightness Filter ON
[ESC]	Turn off the OSD and quit from the function. (Appears the tuner screen.)	—	—

E

F

2. ATA/ATAPI Debug Screen (Second screen)

[Purposes]

To be used as a rough guide to judge whether the pickup unit is all right or not

- Dirt on the pickup lens
- Degradation of the laser diodes for reading CDs and reading/writing to/from DVDs

[Tools to be used]



Remote control unit for servicing (GGF1381)



Aluminum-coated test disc (GGV1025)

[How to enter]

- While the User Operation display is displayed, press the **[ESC]**, **[DISP]**, then **[2]** keys, in that order.
- While any subscreen of the second screen is displayed, press the **[DIG/ANA]** key repeatedly. The subscreens change cyclically.

[How to quit] Press the **[ESC]** key.

(1) Writer maintenance information of ATA/ATAPI DEBUG OSD (Subscreen 3)

[How to enter] • While the User Operation screen is displayed, press the **[ESC]**, **[DISP]** then **[2]** keys, then the **[DIG/ANA]** key twice, in that order.

[How to quit] Press the **[ESC]** key.

[Procedures] Update the display by pressing the **[SEARCH]** key while subscreen 3 is displayed.

ATA/ATAPI	Writer Maintenance Info
① Power ON	00 00 00 0000 00000000
0102:56	01 00 00 0000 00000000
DVD	02 00 00 0000 00000000
② R0053:48	03 00 00 0000 00000000
③ W0022:16	04 00 00 0000 00000000
CD	05 00 00 0000 00000000
④ R0034:04	06 00 00 0000 00000000
⑤ W0000:00	07 00 00 0000 00000000
	00-00

Error log for the Writer
(Not for Service)

- ① Power-on time/cumulative power-on time
- ② Duration of emission of the laser diode (LD) for DVD-R/DVD while reading
- ③ Duration of emission of the LD for DVD-W/DVD while writing
- ④ Duration of emission of the LD for CD-R/CD while reading
- ⑤ Duration of emission of the LD for CD-W/CD while writing
(This function is not used for this model.)

- ② If the total hours of duration of emission of the laser diode (LD) for DVDs while reading ② and that of emission of the LD for DVDs while writing ③ exceed 4,700 hours, the LDs may be degraded. Perform an LD degradation judgment, using subscreen 4.

[Tips]

MTTF hours for each LD (R9R Drive Assy [total hours of reading and writing])

DVD: 4,700 hours

CD: 11,000 hours

The ATA/ATAPI Writer Maintenance Info is obtained each time the power is turned on. Thereafter, the data on the subscreen is updated each time the **[SEARCH]** key is pressed (the updating command is sent) while this subscreen is displayed. Care must be taken when updating this subscreen, because an undesired command is inserted if it is executed while recording, etc.

(2) LD degradation judgment of ATA/ATAPI DEBUG OSD (Subscreen 4)

[How to enter] • While the User Operation screen is displayed, press the **[ESC]** **[DISP]** then **[2]** keys, then the **[DIG/ANA]** key three times, in that order.

[How to quit] Press the **[ESC]** key.

[Notes]

- For correct measurement of items ① to ④ indicated in the display below, leave the unit at room temperature (25°C) for a while before turning it on, and do not load a disc.
- For RF measurement (item ⑤), it is recommended to use the Test disc (GGV1025). As the RF level differs depending on the characteristics of the pickup from product to product, it cannot be used for judging degradation of the LD. Use the RF level as a rough guide to know the difference between before and after lens cleaning.

[Procedures] To update the value for each item, press the **[SEARCH]** key while subscreen 4 is displayed. For details on each item and the conditions of updating the values, see Table 2 below.

ATA/ATAPI - LD Degrade			
①	CD	:0070 104%	OK
②	DVD	:0068 96%	OK
③	TMP	:00A3 41 °C	
④	ADJ	:0067 26 °C	
⑤	RF	:3D70	
⑥	TLT	:FFD5	

Table 2: Description of each item and conditions for updating data

No.	Item	Description	Conditions for updating by pressing the SEARCH key
①	CD	Degradation judgment of LD for CD. Regarded as NG when the value is 120% or higher (same standard as for the PC drive)	No disc inserted in the disc tray
②	DVD	Degradation judgment of LD for DVD. Regarded as NG when the value is 120% or higher (same standard as for the PC drive)	No disc inserted in the disc tray
③	TMP	Current temperature inside the Writer	No disc inserted in the disc tray
④	ADJ	Temperature (approx. 25°C) inside the Writer during adjustment	No disc inserted in the disc tray
⑤	RF	RF level (16-bit data, proportional calculation performed using the actual RF level value with 2.5 V = 0xFFFF as the maximum value, displayed in 4-digit hexadecimal)	During playback of disc medium (GGV1025)
⑥	TLT	Writer adjustment data for straight (non-HDD) model (FFFF is displayed when the writer is not adjusted.)	No condition

If the results of degradation of the LDs for CDs and DVDs are both NG, replace the drive.

3. VR-Recording-Related Error Logs (Fourth screen)

[Purposes]

To roughly determine in which category shown below a symptom that is difficult to reproduce belongs.
For details on the categories of error logs displayed, see "Table 1: Description of VR-recording-related errors."

- Errors related to the MPEG Encoder
- Errors related to the drive system
- Errors related to copying
- Errors related to others
- Errors related to the HDD

[Tool to be used]



Remote control unit for servicing
(GGF1381)

[How to enter]

- While the User Operation display is displayed, press the **[ESC]**, **[DISP]**, then **[4]** keys, in that order.
- While any subscreen of the fourth screen is displayed, press the **[DIG/ANA]** key repeatedly.
The subscreens change cyclically.


[How to quit]

Press the **[ESC]** key.

[Description of each subscreen]


(1) VR-Recording-Related Error Logs (Subscreen 1)

- Errors related to recording are displayed on the lines "Rec Err.," as shown below.
For details on errors, see "Table 1: Description of VR-recording-related errors."

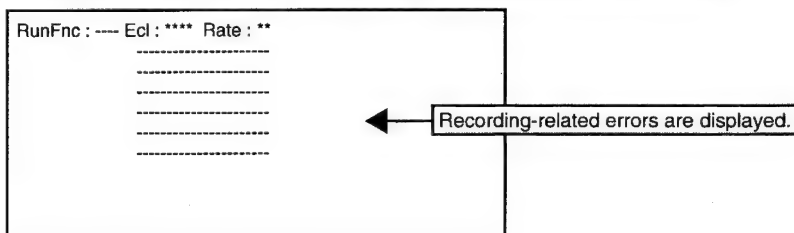

(2) Subscreen 2 and 3 (These subscreens are not for service use.)

(3) VR-Recording-Related Error Logs (Subscreen 4)

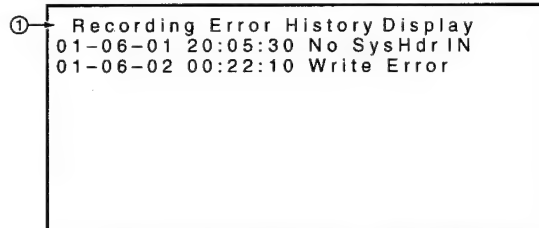

- ① There are two error-log screens, on which up to 9 logs per screen are displayed.
(generation time [year-month-day, hour:minute:second], error data in simplified description)

[Tips]

- The two error-log screens can be switched by pressing the **[SPEED+]** or **[SPEED-]** key.
- For details on error messages, see Table 1 "Description of VR-recording-related errors".


(4) Subscreen 5 to 11 (These subscreens are not for service use.)

4. VR-Playback-Related Error Logs (Fifth screen)

[Purposes]

It can be inferred that an operation that caused an error in the drive was performed or that a failure occurred in the drive if any of the error logs shown in "Table 2: Description of VR-playback-related errors" is recorded on this screen.

[Tool to be used]



Remote control unit for servicing
(GGF1381)

[How to enter]

- While the User Operation display is displayed, press the **[ESC]**, **[DISP]**, then **[5]** keys, in that order.
- While any subscreen of the fifth screen is displayed, press the **[DIG/ANA]** key repeatedly. The subscreens change cyclically.

[How to quit] Press the **[ESC]** key.

[Description of each subscreen]

(1) **Subscreen 1** (This subscreen is not for service use.)

(2) VR-Playback Error Logs (Subscreen 2)

- For details on error messages, see Table 2 "Description of VR-playback-related errors".
- If a VR-playback-related error is generated, a problem in data reading from the disc may be suspected. (The possibility of a problem on the drive side is high.)

```

① G:01-01 00m00s#-- --e-- 00000000
   h m s Message h m s Err
② G001: 000000 Tr:Nullbik
   L002: 001230 Tr:SchLate
   L002: 004103 Tp:VobDif+
   L002: 004104 Tp:VobDof-
  
```

- ① Data on location of the display (Display only in disc playback with the VR mode)
Original(G)/play list (L), title No., chapter No. [X:XX-XX],
time of the display (min, sec, frame) [XXmXXsXX],
busy mark of the virtual mechanical-control computer [#],
error rate of the transfer data [X.XeXX],
playback logical address (ID) [XXXXXXXXXX]
- ② Error message log
Original(G)/play list (L), title No., time of generation (min, sec) [XXX:XXXX],
playback-related error log for the last 13 errors [XX:XXXXXXXX]

Table 1: Description of VR-recording-related errors

Any error message marked with * is displayed "RecErr : -----" on the Subscreen 1 of the fourth screen.

● **Error related to MPEG Encoder**

Error Message	Description
AVEnc Hang	AVEncoder failed
IN Encode *	Changes cannot be made in the process of encoding
No SysHdr IN	System packet is not input periodically
Stm Start NG	Failure to start encoding (reasons not clear)
Stream NG	Inappropriate input stream data
Strm Start NG	Timeout waiting for system packet input at the beginning

● **Error related to Drive system**

In a case of an error in the drive system, scratches or dirt on a disc, or a problem of the drive itself (dirty pickup) may be suspected.

Error Message	Description
Bdr Cls NG	Close Border failed
Bdr Opn NG	Open Border failed
BUF Overflow	Overflow of the Stream Buffer
CLS Rzon Fail	Video Mode Close Rzone failure
Drive Hang	The Drive is hung up.
Drv Err	General error of the drive
Drv Hard Err	Abnormality in the drive hardware or firmware
Drv TimeOut	Timeout waiting for drive operation
Fail Repair	Repair failed
Format NG	Format failed
May Be V mode	Although TMP_VMGI is not written, it may be Video Mode disc.
Mech No Res	No response from the mechanical-control computer
MKB Invalid	MKB reading error
NWA Exhaust	NWA surpassed and impossible to use
OPC NG	OPC failed
PCA Full	PCA has been used up.
Read Err	Reading failed, ECC failed, etc.
ReadOnly DISC *	Because some data are invalid, data cannot be written
RMA Full	RMA has been used up.
Rzn Cls NG	Close RZone failed
Rzn Rpr NG	Repair RZone failed
Rzn Rsv NG	Reserve RZone failed
TMP-VMG WrErr	Video Mode TMP VMGI Write Error
VTSL_B Wr Err	Video Mode VTSL BUP Write Error
VTSL_B2 Wr Err	Video Mode VTSL BUP Write Error (After Layer Change)
VTSL Wr Err	Video Mode VTSL Write Error
VTSL2 Wr Err	Video Mode VTSL Write Error (After Layer Change)
Write Err	The Drive failed to write and could not be recovered.

● **Error related to Dubbing**

Error Message	Description
H2D CP SomeNG	Other NG HDD →DVD copy
Mem get NG	Video Mode Copy Memory has not ensured.
Strm TransfNG	Video Mode Copy Stream Transfer NG
Tracon Trn NG	Video Mode Copy Tracon tranfer has not been completed.
VC Cell Max	Maximum number for Video Mode copy Cells exceeded
VC CopyCancel	Video Mode Copy Copy Cancel

● Error related to Dubbing (continued)

Error Message	Description
VC FlushC NG	Video Mode Copy Flush Cache NG
VC HDD C Err	Inappropriate Video Mode Copy HDD content
VC HDD Inf NG	No information on Video Mode Copy HDD
VCHDD Info NG	Obtaining Video Mode Copy HDD Cell information failed
VC Idling NG	Video Mode Copy idling NG
VC Pck Anl NG	Analyzing Video Mode Copy Pack failed
VC Transf Stp	Video Mode Copy Transfer Stop
VC TSO BLK NG	Video Mode Copy TSO Block transfer has not been completed.
VC VOBu SizeE	Video Mode Copy VOBu Size NG
V Rsv RzoneNG	Video Mode Copy Reserve Rzone failed
V2H APP FL NG	VR → HDD APP FLG is OFF
V2H Aud Ch NG	VR →HDD Audio Channel NG
V2H Aud Md NG	VR →HDD Audio Mode NG
V2H Aud Strm N	VR →HDD Audio Stream number NG
V2H SRC Prot	VR →HDD copy prohibited material
V2H Unknown	VR →HDD other NG
V2H VOBu TMNG	VR →HDD Play back time of each VOBu is different
V2H V Reso NG	VR →HDD Video resolution NG

● Other Errors

Error Message	Description
Abort *	Cancellation
Already open	Extension file is already opened.
BK BATT Down	Backup RAM data has been erased.
BK FSYS Dirty	Backup RAM data has not been written on the File Sys.
BUG	Some bugs
BusReset Done	Bus Reset has been executed.
Cell Close NG	Cell Close NG
CPRM IC NG	Inappropriate CPRM IC
Dir Depth Err	Tree of Directory is too deep.
Disc Full	No further data can be written because the disc is full.
DRAM CLR Err	Video Mode DRAM (Stream Buffer) Clear failure
DRAM NG	Abnormality in access to the Work DRAM
Drive Destroy	The drive has crashed.
EncModul Hang	Encoder routine is hung up.
F Alrdy Exst	Extension file is already exist.
File cancel	Extension file is canceled.
FileNot Exist	Extension file is not exist.
Format Excec	Formatting has been executed.
Invalid Disc *	The disc cannot be recognized.
Invalid Param *	Invalid parameter
Invalid P VMG	Information of +VR is NG.
Invalid TMVMG	Invalid TMP_VMG content
Invalid UDF *	Invalid UDF content
Invalid VMG *	Invalid VMG content
Invalid VTSI	VTSI information of +VR is unusual.
Irr Action *	Incorrect action
MKB REVOKED	Error in gaining data
Limit Over *	Standard maximum limit exceeded
No More Info *	No more space in the internal work-management area
No Permission *	No permission to write to the disc
No Video	No video input (not locked)
Now Busy *	In the process of the emergency processing
NV Pck DMA Er	Inappropriate NaviPack DMA
NV Pck MK Err	Error in creating NaviPack
Ourob Strm NG	Inappropriate stream data to the Ouroboros input
Over Heat	Abnormal temperature
PARAM NO ACCP	Recording parameter is not matched.

5 6 7 8

● Other Errors (continued)

Error Message	Description
Process Over	Process is overfull.
Protect Src *	Source to be recorded is copy-protected.
Rec Pause *	No operation permitted during recording pause
Relocation Do	VR-recording data was relocated
Repair Excec	Repairing has been executed.
Something *	Undetermined error
SRAM NG	Abnormality in access to the backup work SRAM
Status NG *	Abnormality in change of statuses
SW PVR	Switch to +VR playback process
SW Vpb mode *	Switching to video playback routine is required.
SW Vrec mode *	Switching to video recording routine is required.
Unmatch Stamp *	Impossible to modify because of nonmatching time stamp
VBR-SRAM NG	Abnormality in VBR SRAM
V Categ ID NG	Inappropriate Category ID
V Cate Inf NG	Inappropriate Category information
V Ext MAX Ovr	Count Max exceeded
V ExtToo Big	The extension file is too large.
V Ext TY NG	Type NG
Virgin DISC	Virgin Disc
VOBU Info NG	Inappropriate VOB information
WaterMark Det	Watermark detected
WM Cracked	WM Cracked

● Error related to HDD

Error Message	Description
Do nothing	Do nothing for demand.
ESFSYS CORUPT	easyfsys error
ESFSYS INIT	easyfsys initializing
HDD Buff High	High-level process executed for the HDD Buffer
HDD DEF DONE	HDD deflag finished
HDD DEF ERR	HDD deflag error
HDD Destroy	HDD is not recognized on the bus.
HDD INFO BAD	Incorrect HDD Management Data
HDD Initialize	HDD initialized
HDD IRRG POFF	Abnormal power off
HDD MBR NG	Inconsistent MBR data
HDDReset Done	HDD Reset executed
HDD ROMSUM NG	Rom-code check sum NG
HDD SIG NG	Inconsistent HDD Management Data Magic
HDD SMART NG	Inappropriate HDD SMART
HDD Trans Err	DMA error in HDD copy transfer
HDD unauthor	Inconsistent HDD serial No.
HDD Zero WR	MBR was witten
Task No Activ	Task has not been activated.
TT Rec Over	Title recording time full

● No Error

Error Message	Description
Non Err *	Normal

Abbreviations:

ECC = 4 byte Code for Error Correction
UDF = Universal Disc Format
PCA = Power Calibration Area
OPC = Optical Power Control
NWA = Next Writable Address

VMG = Video Manager
RMA = Recording Management Area
MKB = Media Key Block
TMP_VMG1 = Temporary Video Manager Information
Border = from Lead-in to Lead-out

Table 2: Description of VR-playback-related errors

A	Error Message		Description	
	Av : B/CTOvr		AV1: Buffer-clear timeout	
	Av : SpmTOvr		AV1: Timeout for a step command	
	Av : StrmOvr		AV1: Timeout for waiting for stream ready	
	Av : TpmTOvr		AV1: Timeout for TP mode change	
	CC_OS_ERR		Closed caption task: OS error	
	ERR_RCV!		TPP task: Detects hang-up of AV decoder and starts recovery	
	Mn : Av1Hang		Main task: Detects hang-up of AV decoder and starts recovery	
	Rv : LnkFail		Reverse playback task: Starts compensation by detecting link failure	
	Rv : LnkTOvr		Reverse playback task: Timeout for waiting for link	
B	Rv : OpITOvr		Reverse playback task: Timeout for waiting for I-picture of the open GOP immediately after starting decoding	
	Rv : OpnTOvr		Reverse playback task: Timeout for waiting for B-picture of the open GOP immediately after starting decoding	
	Tr : OrderEr		Transfer task: Inconsistent order	
	Rv : R2FTOvr		Reverse playback task: Starts retrial after detecting timeout from reverse pause to forward pause	
	Rv : TopVbEr		Reverse playback task: Forced termination because of a possible error of the top data during reverse normal playback	
	Rv : 1stTOvr		Reverse playback task: Timeout for waiting for interruption to the top VOBU immediately after starting decoding	
	Tp : midNULL		TPP task: The management information pointer designated was NULL.	
	Tp : RStepEr		TPP task: Although the reverse step had failed, the operation was forcibly terminated because the top cell was located.	
	Tp : ScanNg		TPP task: Failure to set the TPP memory when scanning was canceled.	
	Tp : tppErr		TPP task: Inconsistency occurred.	
C	Tp : VobDif+		TPP task: The decoder STC advances by 1 VOBU hour.	
	Tp : VobDif-		TPP task: The STC of the management information advances	
	Tr : NaviErr		Transfer task: Inconsistency between NAVI (navigator) of management data and actual NAVI	
	Tr : NullBlk		Transfer task: NULL at the top block (Detecting NG stream made at the DVR-1000 series and starting protection process.)	
	Rv : OrderEr		Reverse playback task: Inconsistent order	
	Tr : ReadErr		Transfer task: ATA read error	
	Tr : SchLate		Transfer task: ATA search late	
	Tr : SemTOvr		Transfer task: Timeout for gaining semaphore (no synchronization with the display)	

Abbreviations:

STC = System Time Clock

VOBU = Video Object Unit

GOP = Group Of Picture

B-picture = Bidirectionally predictive-picture

I-picture = Intra-picture

P-picture = Predictive-picture

TP mode change = AV1 term (Trick Play mode change)

7.1.6 DV SERVICE MODE

1. DV debug

[Purpose]

To check whether communication between a DV device and the unit is normal when a DV device is connected

[Tools to be used]



Remote control unit for servicing
(GGF1381)

- DV device
- DV cable

[How to enter] Press the **[ESC]**, **[DISP]** then **[3]** keys, in that order.

[How to quit] Press the **[ESC]** key.

[Mode description]

- ① **(DV/1394) Init:OK AV:02 DV:01**
- ② **[Recorder] GUID:00E0360004A00001**
- ③ **[DV] GUID:0080880303480E96**
- ④ **VN:VICTOR MN:GR-D50K**
- ⑤ **TM:C3 TS:75 CT:32 WP:01 PS:FF OS:00**
- ⑥ **CA:A000002020 CV:FF MD:VTR**
- ⑦ **[DVdecode:Yes] LineSys:525-60**
- ⑧ **TC:00h20m35s02f RD:02/02/05 RT:10h34m50s**
- ⑨ **ASPECT:4:3 CGMS:000000 APSTB:00 DEC:525-60**
- ⑩ **SF:32KHz QU:12bit AMODE:4) Stereo**

Boldface alphanumerics : Fixed indications
Nonboldface alphanumerics : Variable indications

No.	Item	Description	Remarks
①	Init	Whether the initialization of 1394 LINK and DV order inside PRISM2 has been completed (OK) or not (NG)	
	AV	Number of AV devices recognizing connection	Identification number of AV devices including D-VHS, etc other than DV devices.
	DV	Number of DV devices recognizing connection	If the number does not become 01 even if a DV device is connected, identification of that device fails.
②	GUID	GUID set in ConfigROM of the unit	GUID : Global Unique ID (Specific ID for DV devices)

No.	Item	Description	Remarks
③	GUID	GUID set in ConfigROM of the DV device connected	Data are displayed only if one DV device is identified.
④	VN	Vendor name set in ConfigROM of the connected DV device	Data are displayed only if one DV device is identified. (Depending on the device, the vendor name may not be set in ConfigROM.)
	MN	Model name set in ConfigROM of the connected DV device	Data are displayed only if one DV device is identified. (Depending on the device, the model name may not be set in ConfigROM.)
⑤	TM	Transport Mode data obtained from the DV device	Data are displayed only if one DV device is identified.
	TS	Transport State data obtained from the DV device	
	CT	Cassette Type data obtained from the DV device	
	WP	Write-protection data obtained from the DV device	
	PS	Power-state data obtained from the DV device	
	OS	Output signal mode data obtained from the DV device	
⑥	CA	Connect AV data obtained from the DV device	Data are displayed only if one DV device is identified.
	CV	Camera/Vtr mode data obtained from the DV device	
	MD	DV device mode	Camera or VTR is displayed only if one DV device is identified.
⑦	[DVdecode:XXX]	Whether Yes (in the process of requesting DV input) or No is indicated in XXX	Normally, Yes is indicated only when CH is set to DV.
	LineSys	Input Line System setting	
⑧	TC	Time-code data of the DVdecode Stream, or response data of the Time Code command	Stream time-code data are obtained when the DV signal is inputted. Otherwise, time-code data are obtained through an AV/C command.
	RD	Rec Date of DVdecode Stream	
	RT	Rec Time of DVdecode Stream	
⑨	ASPECT	Aspect Ratio of DVdecode Stream	*CGMS (Copy Generation Management System): The two-digit codes added to broadcast programs represent the following: 00: Copy freely, 10: Once copy, 11: Never copy
	CGMS	CGMS of DVdecode Stream (from left to right, CGMS data of bits 5-4: Audio ch 2, bits 3-2: Audio ch 1, and bits 1-0: Video)	
	APSTB	APS trigger bit of DVdecode stream	
	DEC	With/without DVdecode stream input	
⑩	SF	Sampling Frequency of DVdecode Stream	If SF is 44 kHz, it is considered that 44.1-kHz audio is input, and sound is muted on the unit.
	QU	QUANTIZATION of DVdecode Stream	
	AMODE	AUDIO MODE of DVdecode Stream	

2. Simple Diagnosis of DV

Symptoms		Location in the Debug Screen	Items to be Checked, and Conditions	Possible causes
No operation for DV input	1	DV ①	Check the init indication: OK: Initialization of 1394 LINK and DV decoder inside PRISM2 appropriately completed NG: Initialization of 1394 LINK and DV decoder inside PRISM2 has not been completed properly.	Defective IC1001(PRISM 2) / IC5101(1394PHY), improper connection between IC1001 / IC5101 defective soldering, etc.
	2	DV ①	Check the number of DV devices when one DV device is connected to the recorder: 01 : The connected DV device is correctly identified. Other than 01 : The connected DV device is not correctly identified.	Defective DV terminals, improper connection of the DV-terminal board, defective IC5101(1394PHY), defective cables, an IEEE 1394 device other than the DV
No picture nor sound for DV input	1	DV ⑨	Check of DV decoding when the recorder channel is set to DV: Yes: The recorder is in the process of a DV input operation No: The recorder is not executing a DV input operation	Defective IC1001(PRISM2), defective soldering, defective power supply, etc.
	2	DV ⑪	Check DEC: 525-60: An NTSC DV signal is input from the DV device. 625-50: A PAL DV signal is input from the DV device. No: No DV signal is input from the DV device.	Defective DV terminals, improper connection of the DV-terminal board, defective IC, defective source device Note: As to a model having the Input Line System setting, if the setting and the actual input signal system do not match, no picture appears.
DV input recording impossible	1	DV ⑪	Check CGMS:	Recording cannot be performed for a copy-protected source.
No sound for DV input	1	DV ⑫	Check SF: 32 khz: An audio signal with 32-kHz sampling frequency is being input. 48 khz: An audio signal with 48-kHz sampling frequency is being input. 44 khz: An audio signal with 44.1-kHz sampling frequency is being input.	An audio signal with 44.1-kHz sampling frequency is muted.


7.1.7 EPG SERVICE MODE (Except DVR-433H model)

[Purposes]

Reasons for the following malfunctions can be inferred by checking the conditions for obtaining the past EPG data:

- ① EPG data cannot be obtained.
- ② Some EPG data obtained are missing.

[Tool to be used]



Remote control unit for servicing
(GGF1381)

[How to enter] • Press the **[ESC]**, **[DISP]**, **[+10]** then **[7]** keys, in that order.

[How to quit] Press the **[ESC]** key.

[Description of the mode]

1. Summary screen

```

0          1          2          3          4
01234567890123456789012345678901234567
00 (EPG EURO)
01 Next Data Download Time : 14:00
02 Duration : 01h30m
03
04
05
06
07 EPG Data Receive Err Summary
08 Date Start End MD CH RcvPkt TotalErr
09 03/31 13:00 13:30 DL 03 001853 000000
10 03/31 09:00 11:00 DL 03 001192 000000
11 03/31 08:00 08:05 HS -- 000645 000000
12 03/31 00:00 00:00 000000 000000
13 03/31 00:00 00:00 000000 000000
14 03/31 00:00 00:00 000000 000000
  
```

Lines 01-02	The next download starting time for the EPG data is displayed. Next Data Download Time: Starting time Duration: Duration required for acquiring the EPG data	
Lines 09-14	The 6 latest error logs when EPG data were received are displayed, with the latest one at the top.	
	Date	: Month/day when reception started
	Start	: Time when reception started
	End	: Time when reception ended
	MD	: Method for acquiring the EPG data (HS: Host scanning process, DL: Downloading process of the EPG data)
	CH	: Data-receiving channel
	RcvPkt	: Total number of received packages. A number 999,999 or greater is displayed as "999999."
	Total Err	: Total errors during reception. The sum of Hamming Err, Trans Err and InvLine Err numbers indicated on the Detail screen. A number 999,999 or greater is displayed as "999999."

[Tips] In a case where only "HS" is displayed in the MD column of the logs, the host channel has not been found. It is necessary to check the country and postal-code settings in the user settings.

2. Detail screen

[How to enter] Press the **[DIG/ANA]** key while the Summary screen is displayed. Up to 6 detail screens (1 to 6) are displayed, one each time the **[DIG/ANA]** key is pressed. Each detail screen 1 to 6 corresponds with the EPG reception error logs from the top on the Summary screen.

[How to quit] Press the **[ESC]** key.

[Description of the Detail screens]

```

0          1          2          3          4
01234567890123456789012345678901234567
00 (EPG EURO)
01 EPG Data Receive Err Details - 1
02
03 Date : 03/31
04 Start Time : 13:00  END Time : 13:30
05 Host CH : 03      P-ON Kind : Download
06
07 Data Receive Part  Total Err : 000000
08 Pkt Rcv Num : 001853  Pkt Snd Num : 001853
09 Inv Line Err : 000000
10 Slice Cont : Auto EQ : OFF LV : -h
11 Temporary Buffer Information
12 Pool Num : 000000  Max Store : 000000
13 Discard Pkt : 000000  Use Num : 000000
14

```

Line	Display item	Description	Remarks
Line 01	EPG Data Receive Err Details-X	The rightmost figure represents the number of the current detail screen. This number corresponds to the order of the EPG reception error log from the top.	
Lines 03-05, Reception conditions	Date Start Time END Time Host CH P-ON Kind	: Month/day when reception started : Time when reception started : Time when reception ended : Data-receiving channel : Methods for acquiring the EPG data (host scanning and downloading)	Only during initialization, host scanning is automatically executed to find the host broadcast.
Lines 07-10, details on errors during reception	Total Err	: Total numbers of errors during reception. The total number of Hamming Err, Trans Err and InvLine Err indicated on the Detail screen. A number 999,999 or greater is displayed as "999999."	Total Errors: If the total number of errors reaches two digits or greater, it is likely that EPG data acquisition failed. Display subscreen 1 of the first screen and check the electric field intensity from the AGC level.
	Pkt Rcv Num Pkt Snd Num	: Total number of received packages. A number 999,999 or greater is displayed as "999999." : Total number of packages that were sent to the application program among all the received packages. A number 999,999 or greater is displayed as "999999."	If the total number of received packages is 0, it is likely that the country and postal-code settings are wrong.
	InvLine Err	: Total number of errors that were generated by receiving data from invalid lines. A number 999,999 or greater is displayed as "999999."	
	Slice Cont	: Slice level control Auto-Tu Con, Manual - Syscon.	
	EQ	: Equalizer setting (ON, OFF)	
	LV	: Slice level (10-30 hex) (Only when the slice Cont is Manual.)	

Note: The data on lines 12-14 are for software development, not for service use.

7.1.8 AGING MODE

[Purposes]

If symptoms regarding recording/playback of discs and/or the HDD that your customer claimed are difficult to reproduce, they can be reproduced with a long-time test in Aging mode.

[Tools to be used]



Remote control unit
for servicing
(GGF1381)



Remote control unit
supplied with the unit
(VXX2969)



Commercially available,
recordable DVD-R and
DVD-RW discs

[Notes]

- When aging for the DVD-RW and HDD is executed, all recorded data on them will be erased.
- Commands from the remote control unit are accepted during Aging mode.
- If Aging mode is quit using the ESC key, indications on the FL display will return to normal display.
- Cancel timer settings before entering Aging mode.
- Set the recording rate beforehand. It cannot be changed during Aging mode.

[How to enter]

- ① Press the **[DVD]** key to switch to DVD.
- ② Load a recordable disc.
- ③ Select the input function of a recordable source.
- ④ After disc detection is performed, press the **[ESC]** then **[REP.B]** keys on the remote control unit for servicing to enter Aging mode.

[How to quit]

Press the **[ESC]** key on the remote control unit for servicing to quit Aging mode and return to Normal mode.

Notes:

- If during recording: Recording is stopped.
- If during playback: Playback is paused.
- If during initialization: The unit stops after initialization is finished. (aging for RW only)
- If the tray is being opened/closed: The unit stops after the tray is opened/closed. (aging for RW only)

[Description of operation]

Aging for the DVD-RW/DVD-R

Aging for the DVD-RW

During Aging mode, the following operations are repeated in the order shown below.

- ① The tray opens.
- ② The tray closes.
- ③ Initialization
- ④ Recording for 60 minutes
- ⑤ Playback for 45 minutes

③ Initialization is performed according to the setting specified in "DVD-RW automatic initialization" (accessed by selecting "Unit Setting" then "Option").

During Aging, the number of loops is indicated on the FL display, as shown below.
[AGING 0001]

If an error is generated, the aging operation stops.

Note: Indications on the FL display are retained, and this information is also retained as an OSD.

Aging for the DVD-R

During Aging mode, the following operations are repeated in the order shown below.

- ① The tray opens.
- ② The tray closes.
- ③ Recording for 1 minute
- ④ Recording pause for 6 minutes
- ⑤ Recording stops.
- ⑥ Playback for 1 minute
- ⑦ Playback pause for 6 minutes
- ⑧ Playback stops.

Note: A continuous test of the above operations is possible for approximately 23 hours.

After ② the tray closes, disc detection is performed, and if 99 titles have already been registered, the unit stops there. The number of loops is retained and indicated on the FL display. An error indication is retained as an OSD.

During Aging, the number of loops is indicated on the FL display, as shown below.
[AGING 0001]

If an error is generated, the aging operation stops.

Note: Indications on the FL display are retained, and this information is also retained as an OSD.

Note:

Recording time depends on the recording rate set. For example, if the recording rate is MN32, only up to 60 titles can be registered. Check the setting for recording rate before performing aging.

[Aging for the HDD]

- [How to enter]**
- ① Press the **[HDD]** key to switch to HDD.
 - ② Press the **[ESC]** key then the **[REP.B]** key on the remote control unit for servicing to enter Aging mode.

- [How to quit]** Press the **[ESC]** key on the remote control unit for servicing to quit Aging mode and return to Normal mode.
- Notes:**
- If during recording: Recording is stopped.
 - If during playback: Playback is paused.
 - If during erasure of all memory data from the HDD, the unit stops after all memory data have been erased.

[Description of operation]

During Aging mode, the following operations are repeated in the order shown below.

- ① Erasure of all the memory data from the HDD
- ② Recording for 60 minutes
- ③ Playback for 60 minutes

[Tips]

During Aging, the number of loops is indicated on the FL display, as shown below.
[AGING 0001]

If an error is generated, the aging operation stops.

Note:

Indications on the FL display are retained, and this information is also retained as an OSD.

7.1.9 HDD CHECK MODE

How to diagnose failure of the hard disc drive (HDD)

Purpose:

With use of the HDD-diagnostic program contained in the product itself, physical errors on the HDD can be diagnosed. Use this program to diagnose whether or not the HDD is in failure when one of the symptoms indicated below is recognized, or when a failure in the HDD is suspected.

Symptoms of failure in HDD:


- (1) HDD Error
- (2) Failure in HDD recording or playback
- (3) HDD not recognized

Tool to be used:

Remote control unit for servicing (GGF1381)

1. Flow of HDD diagnosis

(1) Flowchart of HDD diagnosis

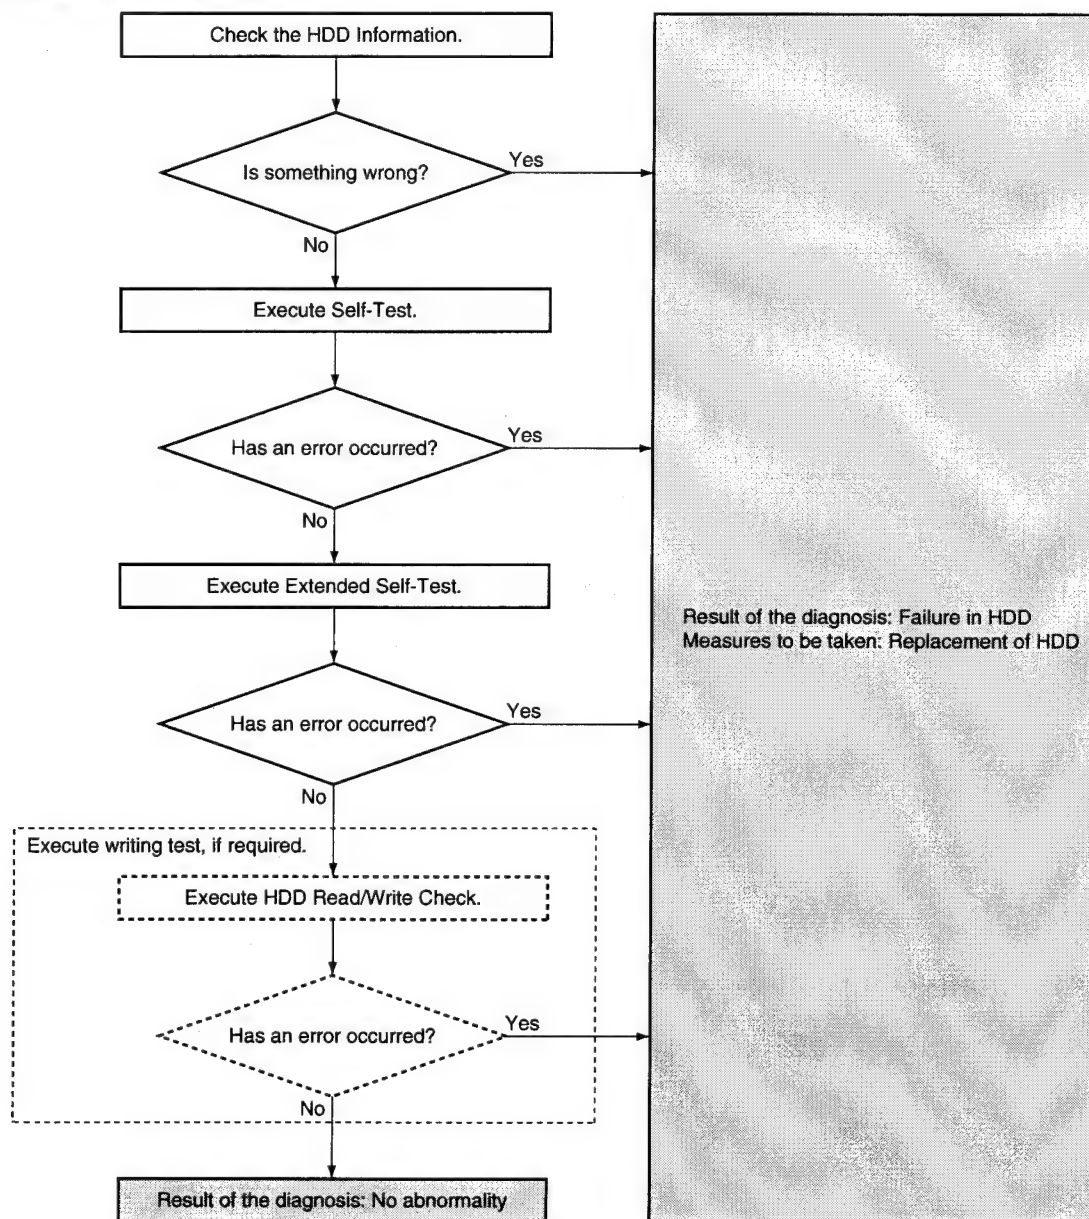

(2) Overview of the diagnosis items


<div>HDD Information</div>	<div>This is a display for checking the HDD information, such as the model name of the HDD, continuous power-on time, authentication status, and results of the diagnosis on the end of service life.</div>	A
<div>SELF TEST</div>	<div>This is a simplified diagnosis for the HDD. A serious failure in the HDD can be detected with this test. Time required for testing: Approx. 90 sec.</div>	■
<div>EXTENDED SELF TEST</div>	<div>This is a reading test across all sectors of the HDD. Data recorded on the HDD will not be erased, because no writing operation is performed. Time required for testing: Approx. 3 hours/160 GB</div>	B
<div>HDD Read / Write Check</div>	<div>This is a writing, reading, and comparing test across all sectors of the HDD. All data recorded on the HDD will be erased, because all the data are to be overwritten. Be sure to obtain your client's consent beforehand. Time required for testing: Approx. 11 hours/160 GB</div>	■
		C

2. How to start or terminate the diagnostic program

<div>How to start/terminate the diagnostic program</div>		■
<div>Use the remote control unit for servicing.</div>		
<div>How to start: Press the "ESC", "CX", "0", and "1" keys simultaneously.</div>		
<div>How to terminate: Press the "ESC" key.</div>		
<div>Do NOT perform other operations on the unit while the HDD diagnosis is in progress. Although the diagnostic program is designed to function independently from the unit's functions, an operation on the unit during a diagnosis may cause a malfunction.</div>	D	
<div>The status of the unit recommended during diagnosis is as follows: All stop, no timer recording (including auto-recording), and Input selection to L1-L3.</div>		■
		E
		■
		F

3. Diagnosis procedures

- A ① Display the menu on the screen.
The menu indicated below is displayed when the diagnostic program is started. To enter each mode, press the corresponding key "1"- "4" on the remote control unit for servicing.

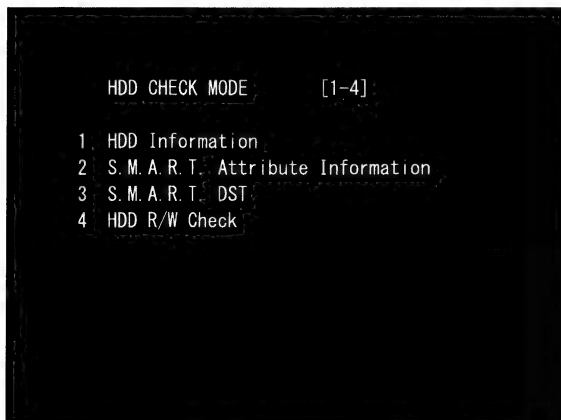


Tests to be executed

- ① HDD Information:
Check of the HDD information
- ② S.M.A.R.T. DST:
Executing a simplified test or a reading test of all data
- ③ HDD R/W Check:
Executing a writing/reading test of all data. All data on the HDD will be erased if this test is executed.

Note: "2. S.M.A.R.T. Attribute . . ." is not to be used.

- C ② Check the HDD information.
Press the "1" key on the remote control unit for servicing. Check the following data:
Model: Is the correct model name of the HDD displayed?
Recog. No: Is a positive value displayed?
SMART threshold: Is "not exceeded" displayed?

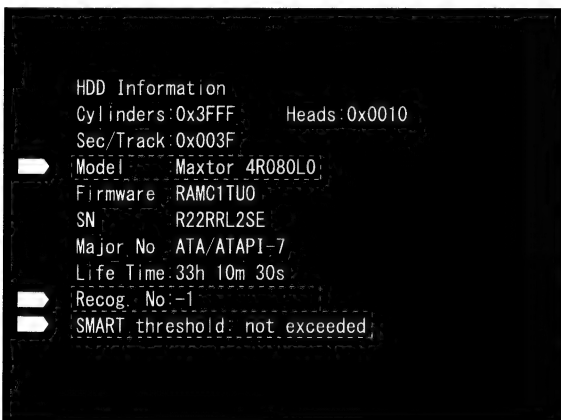



Detailed description

- ① Model:
For the correct model name, refer to the display of the unit.
- ② Recog. No:
Positive value: The HDD has been authenticated.
Negative value: The HDD has not been authenticated.
- ③ SMART threshold:
exceeded: The HDD has come to the end or near the end of its service life.
not exceeded: The HDD has not reached the end of its service life.

To return to the menu screen, press the "Clear" key.

③ Execute Self-Test.

Press the "3" key on the remote control unit for servicing while the menu screen is displayed.
When the following screen is displayed, press the "1" key to start the Self-Test.

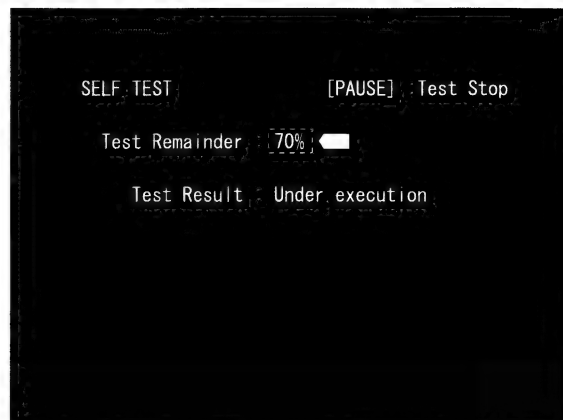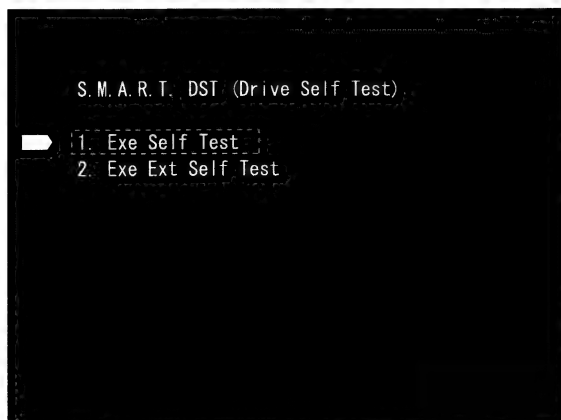


The progress of the test is displayed on the screen. The percentage remaining of the test is displayed on the screen, and the test is terminated when the percentage reaches 00%.
Check whether or not an error has occurred after the test is finished.

Diagnosis results


- Without an error: "... Completed" is displayed.
Then, proceed to the Extended Self-Test.
- With an error: "... Error" is displayed. Look at the number in Test Result.
If the place value for tens is 1 or 2, execute the Self-Test again.
If it is from 3 to 7, the HDD must be replaced.

Note: If the result of the second test is the same, replacement of the HDD is required.

Example: No error

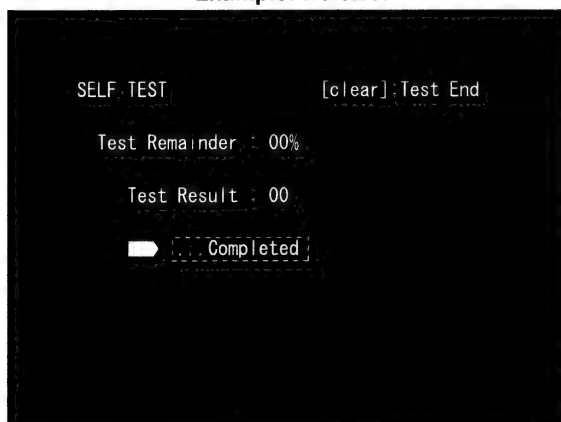



Example: With an error

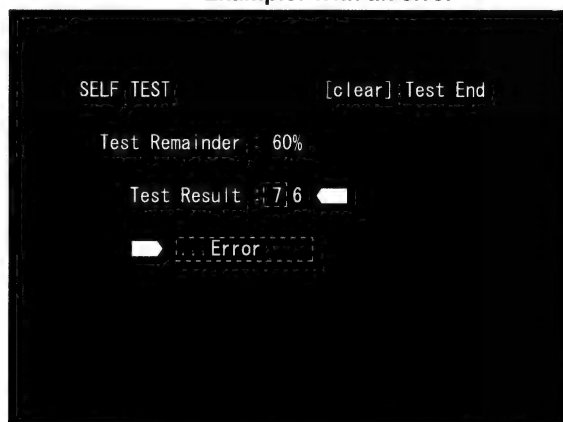

To return to the menu screen, press the "Clear" key.

④ Execute the Ext (Extended) Self-Test.

A

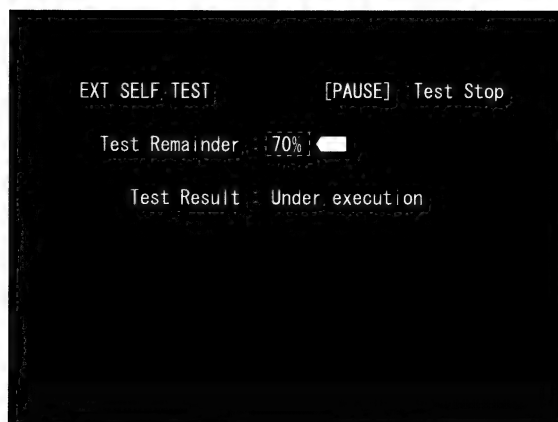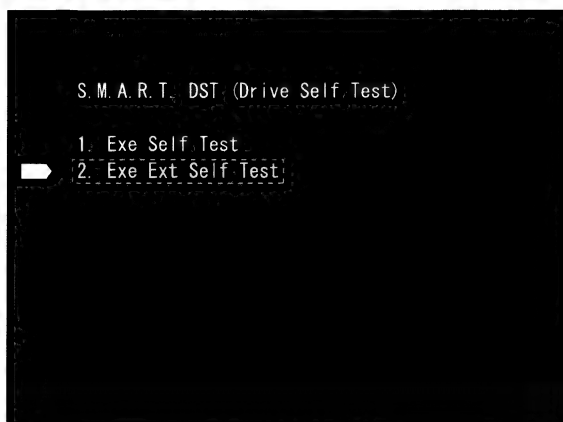

B

Press the "3" key while the menu screen is displayed, then the "2" key on the remote control unit for servicing. The Extended Self-Test starts. The percentage remaining of the test is displayed on the screen, and the test is terminated when the percentage reaches 00%. Check whether or not an error has occurred after the test is finished.

Diagnosis results



- Without an error: "... Completed" is displayed.
If no error occurs up until this stage, HDD operations are normal except for writing operations.
If the unit has a failure in HDD playback, a block other than the HDD may be in failure.
If the unit's failure is in HDD recording, however, the next HDD Read/Write Check must be executed to test writing operations.
- With an error: "... Error" is displayed.
Look at the number in Test Result.
If the place value for tens is 1 or 2, execute the Ext Self-Test again.
If it is from 3 to 7, the HDD must be replaced.

Note: If the result of the second test is the same, replacement of the HDD is required.

Example: No error

Example: With an error

D

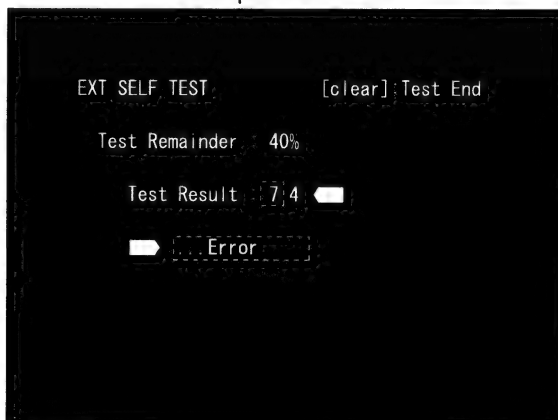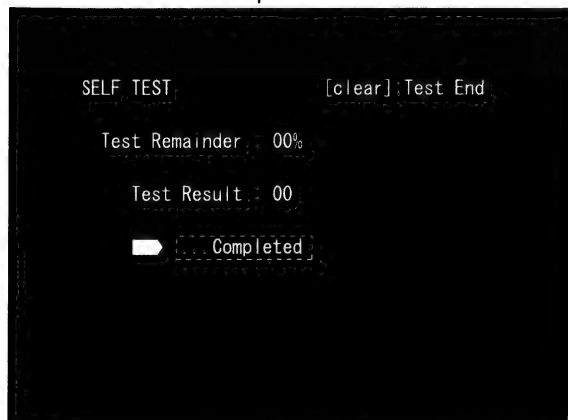

E

To return to the menu screen, press the "Clear" key.


F

⑤ Execute the HDD R/W Check.

Before executing this test, **be sure to obtain your client's consent for erasure of HDD data.**


Press the "4" key while the menu screen is displayed then the "SKIP ►►" key to start the HDD R/W Check.

To stop executing the test (OFF) while it is in progress, press the "SKIP ◄◄" key.

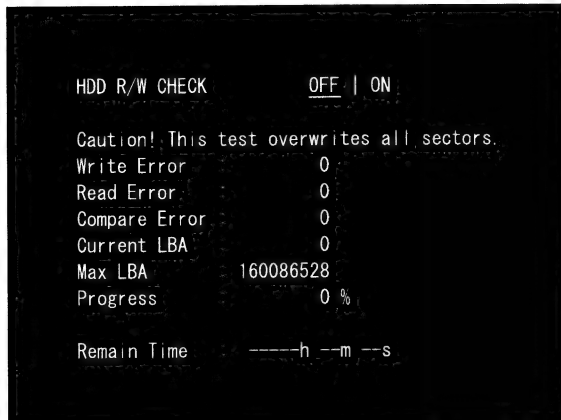

The display on the left indicates the progress of the test.

The percentage of the test progress is displayed on the screen, and the test is finished when the percentage reaches 100%.

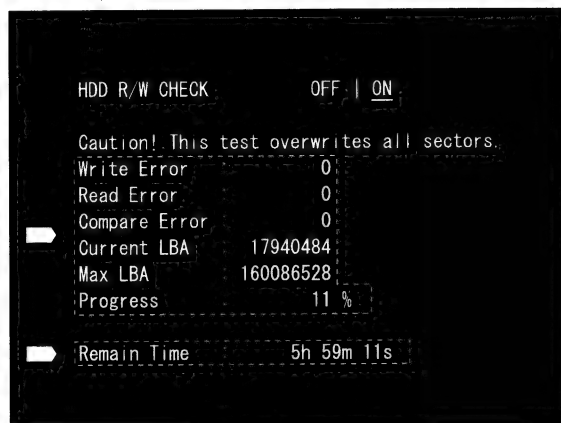

Detailed description on each item on the screen


- Write Error: Number of write errors
- Read Error: Number of read errors
- Compare Error: Number of comparison errors
- Current LBA: The address during testing
- Max LBA: Highest address number of the HDD
- Progress: Percentage of test progress (%)
- Remain Time: Estimated time required for finishing the test across all sectors.
Estimated time: 11 hours/160 GB

Diagnosis results

- If no error occurs in any of the Write/Read/Compare items, the HDD is in normal condition and is not required to be replaced. A block other than the HDD is in failure.
- If any error occurs, the HDD must be replaced.

To terminate the diagnostic program, press the "ESC" key.

7.1.10 SETUP SEQUENCE

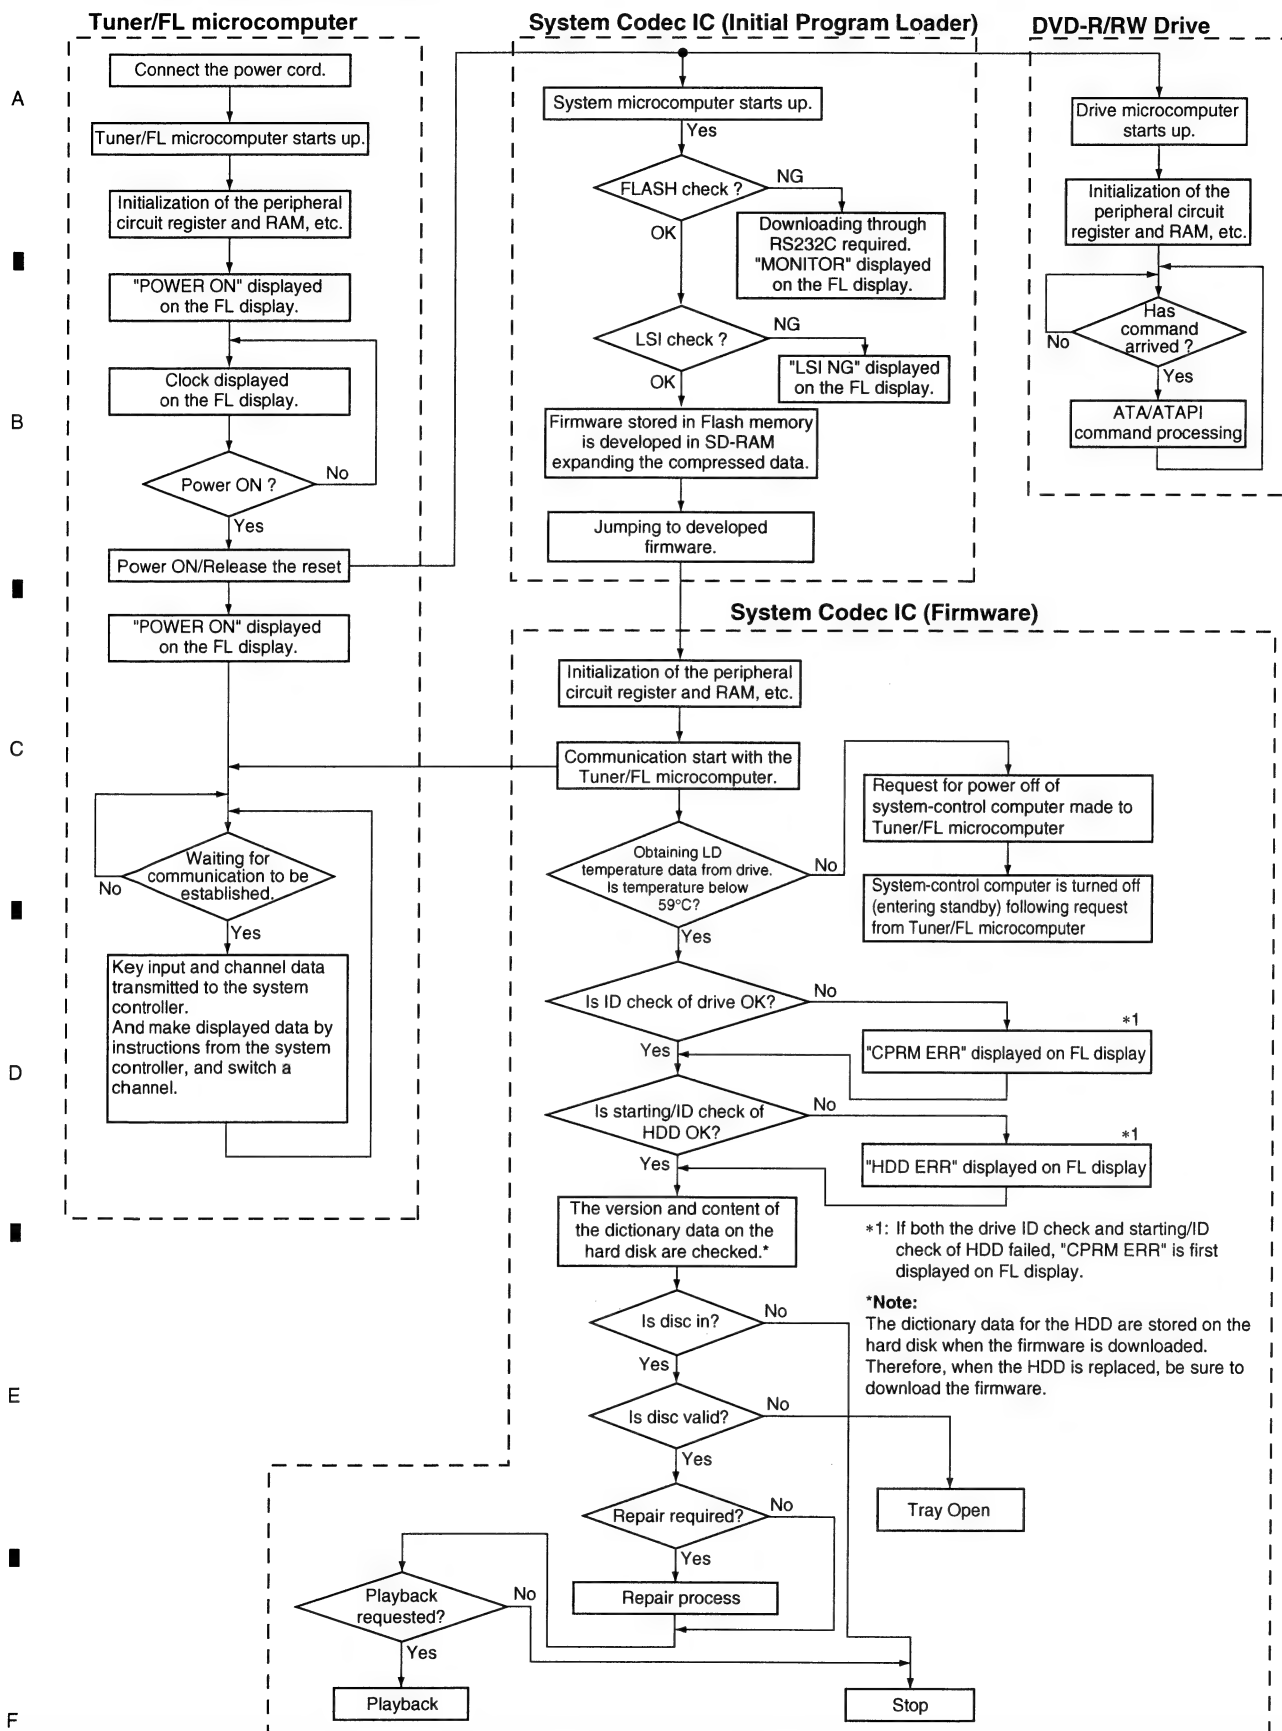

- Note 1:** Do NOT look directly into the pickup lens. The laser beam may cause eye injury.

Note 2: Even if the unit shown in the photos and illustrations in this manual may differ from your product, the procedures described here are common.


Note 3: For performing the diagnosis shown below, the following jigs for service is required:

 - Emergency disc ejection rod (GGF1529)
 - Flexible cable for service (GGD1284), (VKP2291), (GGD1437)
 - Extension board (GGF1532 (A)), (GGF1532 (B))

Diagnosis of MAIN Assy

1 Bonnet Case S


- Remove the four screws.



● Rear view

↓


- Remove the four screws.
- Remove the bonnet case S.

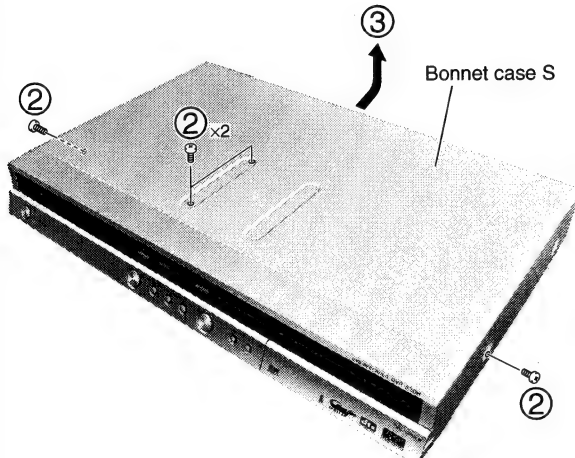

● Bottom view

2 Tray Panel EB

- Press the STANDBY/ON button to turn on the power.
- Press the OPEN/CLOSE button to open the tray.
- Remove the tray panel EB.
- Press the OPEN/CLOSE button to close the tray.
- Press the STANDBY/ON button to turn off the power.

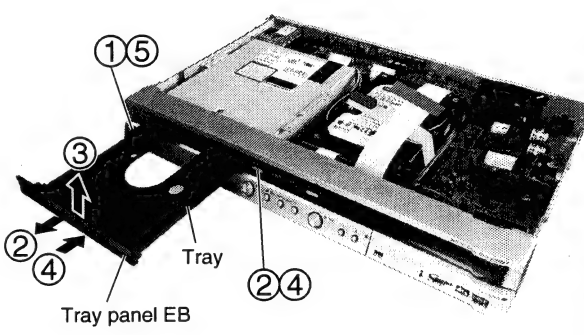


● Bottom view


● How to open the tray when the power cannot be turned on

When the tray cannot be opened because the power cannot be turned on, it can be opened using the emergency disc ejection rod (GGF1529). (A long, thin rod about 1 mm in diameter can be used in place of the rod.)

Insert the rod through the slit at the bottom of the unit and slide the projection for cam R9 in the direction of the arrow, using the rod. When the tray is popped out a little, pull it out by hand. Find the projection by inserting the rod through the slit by about 20 mm, as the projection is not visible from the outside. If the insertion of the rod exceeds 20 mm, you cannot catch the projection.

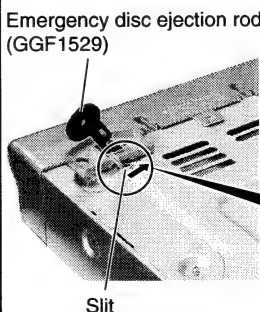



● Bottom view

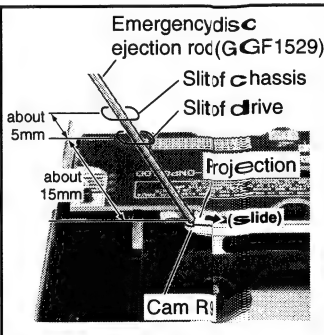



● Bottom view

3 Front Panel Section

- ① Unhook the four hooks.

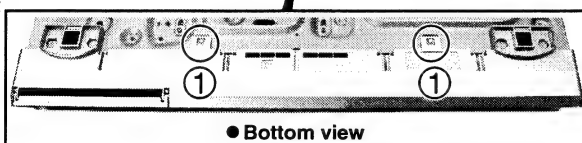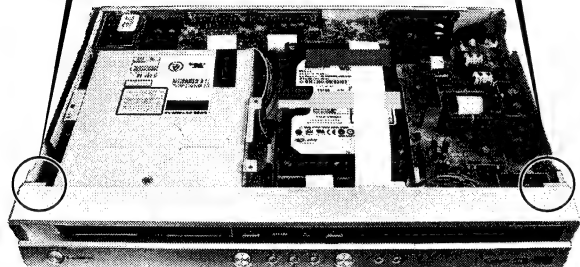

- ② Remove the front panel section while disconnect the connector.

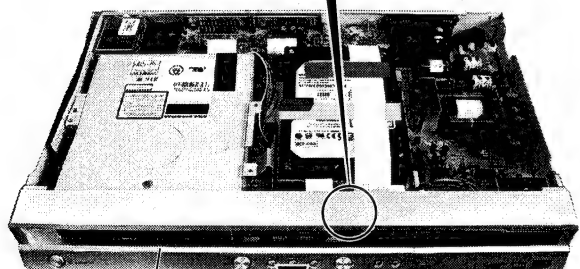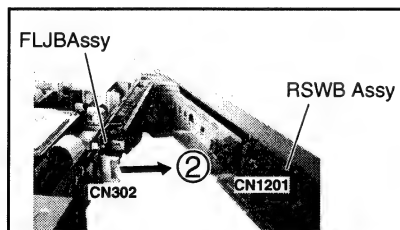

Front panel section

②




4 HDD and DRIVE Assy R9R

• HDD

- ① Disconnect the connector.
- ② Disconnect the flexible cable and connectors.
- ③ Remove the four screws.
- ④ Remove the HDD.

B JACB Assy

J POWER SUPPLY Unit

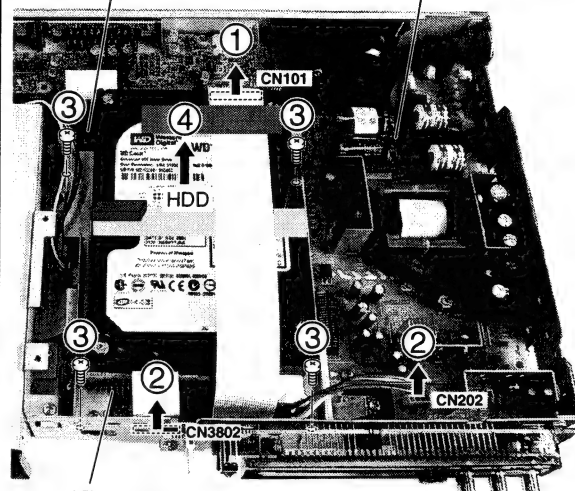


ATAB Assy

E



• DRIVE Assy R9R

- ① Disconnect the flexible cable and connectors.
- ② Remove the six screws.
- ③ Remove the DRIVE Assy R9R.

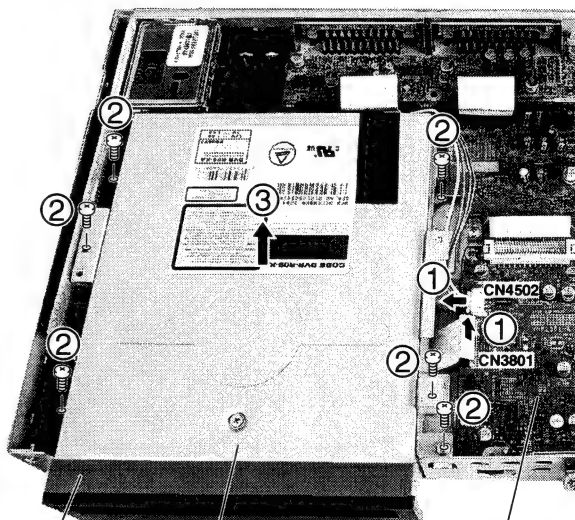

Acetate tape (*)
Refer to next page.


DRIVE Assy R9R

MAIN Assy



5 MAIN Assy

- ① Disconnect the connector.
- ② Disconnect the flexible cable.
- ③ Remove the four screws.
- ④ Stand the MAIN Assy.

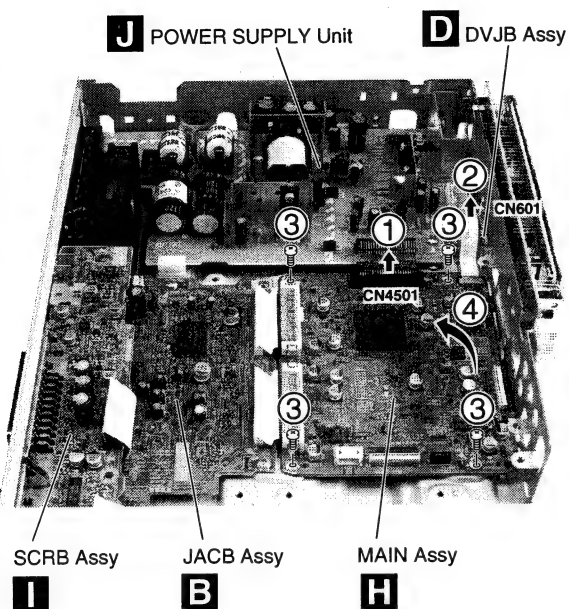


Note:

Acetate tape (*) (former page)


When replacing the DRIVE Assy, remove the acetate tape from the old assy and adhere it to the new assy. Without the acetate tape, the performance of the drive cannot be assured.
If the tape cannot be reused, be sure to use acetate tape for service (GYH1001).

6 Diagnosis

- ① Remove the two tapes.

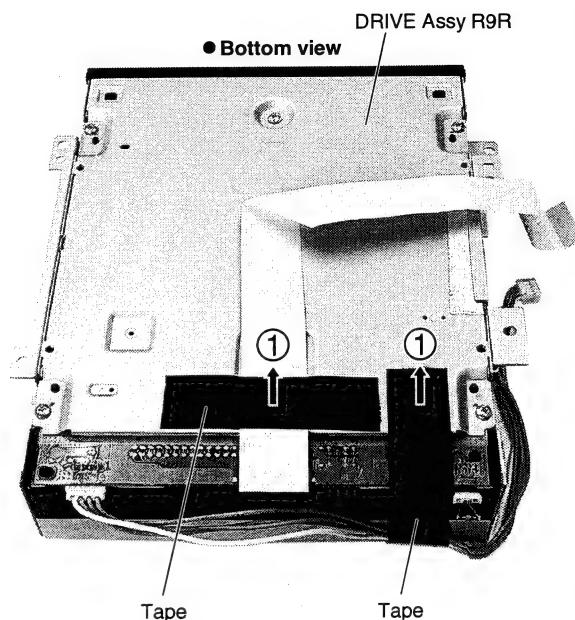


- ② Disconnect the flexible cable.
- ③ Disconnect the connector.

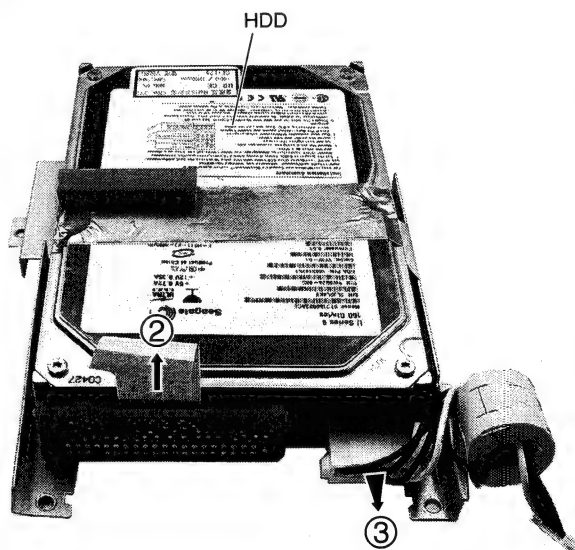

- ④ Reassembling the front panel section.
- ⑤ Connect the flexible cable.
- ⑥ Connect the connector and flexible cables from the DRIVE Assy R9R.
- ⑦ Connect the two flexible cables for service from the HDD.
- ⑧ Connect the two extension boards and flexible cable for service.
- ⑨ Arrange the unit as shown in the photo below.

Caution :

Main IC (IC1001) on the MAIN Assy will be heated to around 80 degrees celsius.
Be careful when works.

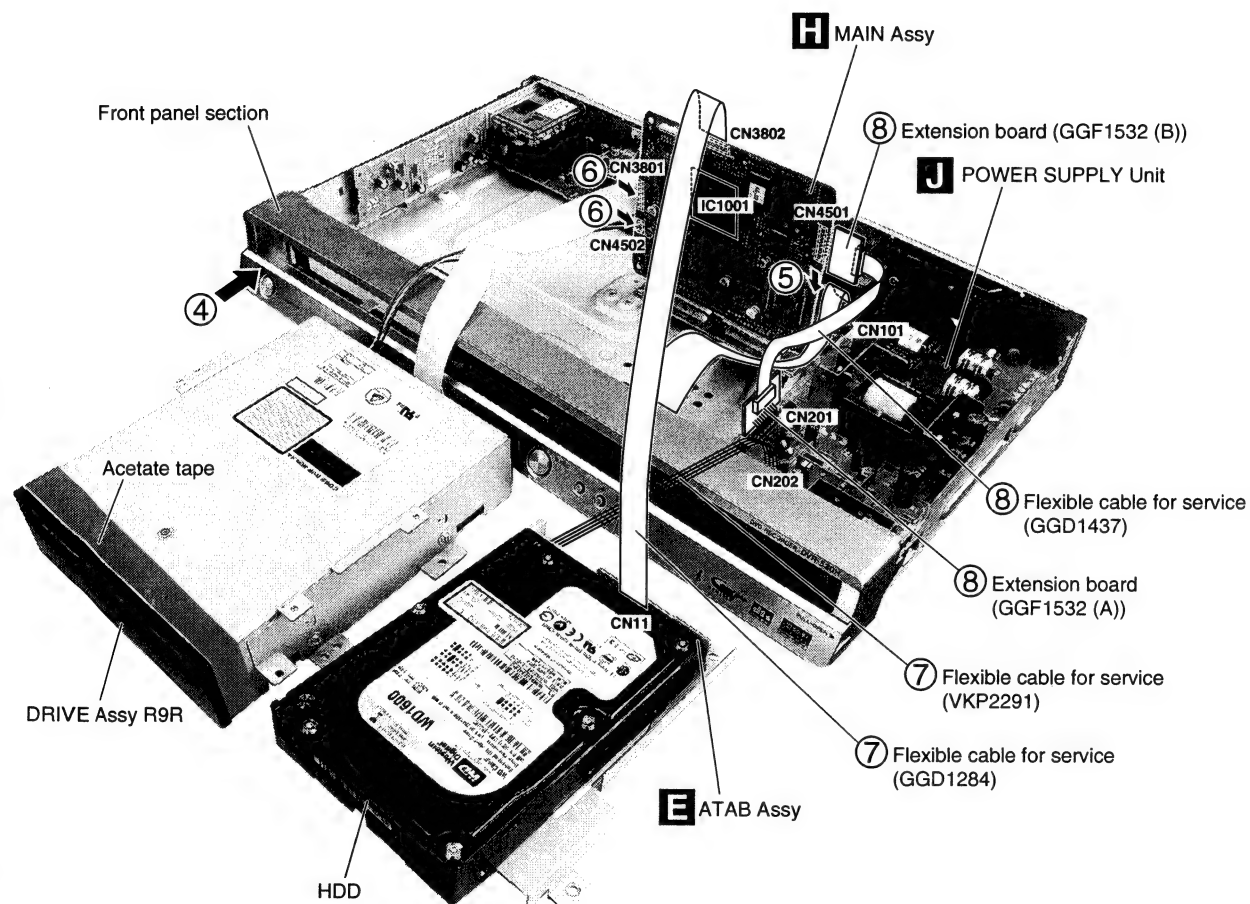


Diagnosis

Cleanning the Pickup Lens


① Remove the two screws.

② Remove the writer stay L.

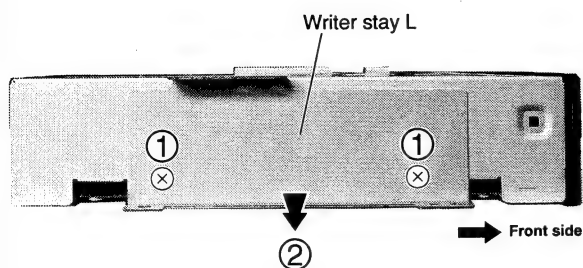

③ Remove the two screws.

④ Remove the writer stay R.

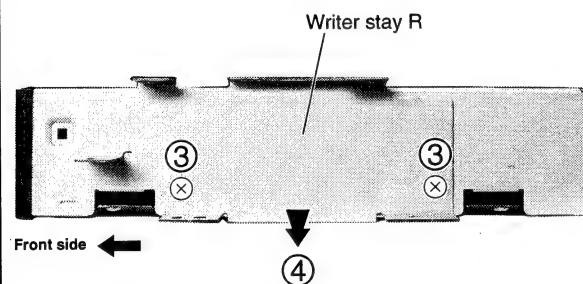


⑤ Remove the alminum tape.

⑥ Unhook the four hooks.


⑦ Remove the front bezel.

⑧ Remove the four screws.

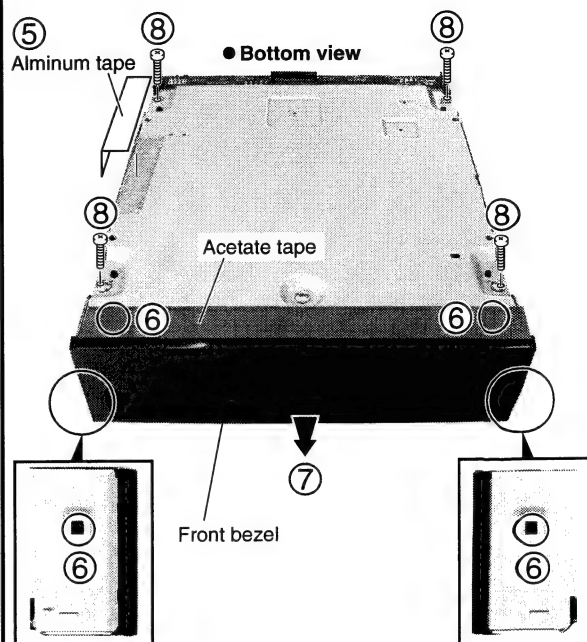

⑨ Remove the one screw.

⑩ Remove the top cover.

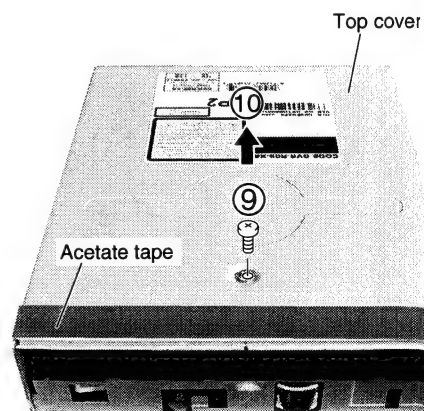


A

⑪ Remove the two screws.

⑫ Remove the clamper section.

Clamper section

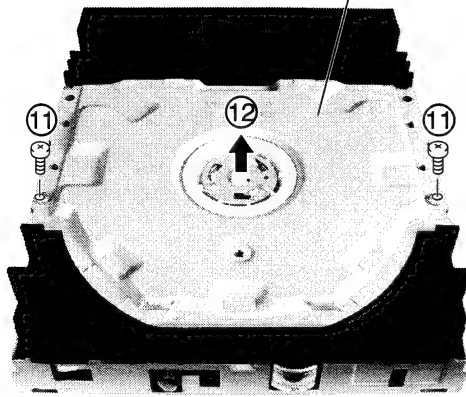

B

C



⑬ Clean the pickup lens.




Before shipment, be sure to clean the pickup lens, using the following cleaning materials:

Cleaning liquid : GEM1004
Cleaning paper : GED-008

D

E

Pickup lens

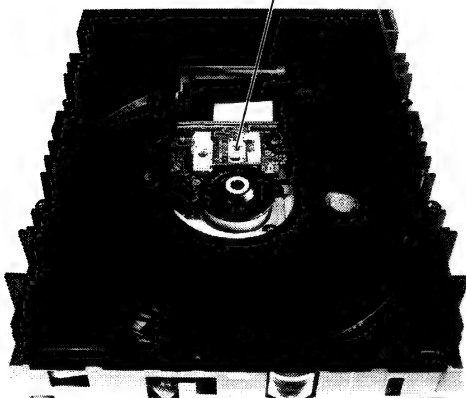

F

7.2 IC

• The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.

• List of IC

PMC002A8, LA73026AV, CM0045AF, R8A34011BG-K, BU4828F, R1170S331B, PQ035ZN01ZPH, NJM2861F33, BA25F18WHFP, BD3823FV, LA73031V

■ PMC002A8 (JCKB ASSY : IC101)

• TUNUER Microcomputer

• Pin Function

No.	Pin Name	Signal Name	I/O	Function	Active
1	PA3/S08	FLDATA	O	Communication line with FL Driver	
2	PA4/SI8/SB8	FLSTB	O	Ccommunication strobe line with FL Driver	
3	PA5/SCK8	FLCLK	O	Communication clock with FL Driver	
4	P70/INT0/TOCLP	WDT	I	WDT for detection of u-com in the state of out of control	
5	P71/INT1/TOHCP	ACDET	I	Detection of AC power	
6	P72/INT2/TOIN/TOLCP	HS_MTMOT	I	Handshaking of system control u-com communication	
7	P73/INT3/TOIN/TOHCP	IR	I	Pulse input of remote control	
8	RES#	XRESET	I	Reset input	
9	XT1	XT1	I	Connection of sub clock	
10	XT2	XT2	O	Connection of sub clock	
11	VSS1	GND	—		
12	CF1	CF1	I	Connection of main clock	
13	CF2	CF2	O	Connection of main clock	
14	VDD1	VDD1	—		
15	P80/AN0	MODEL1	Analog In	Input #1 for model type judgement	
16	P81/AN1	MODEL2	Analog In	Input #1 for model type judgement	
17	P82/AN2	KEY1	Analog In	Main unit key input #1	
18	P83/AN3	KEY2	Analog In	Main unit key input #2	
19	P84/AN4	KEY3	Analog In	Main unit key input #3	
20	P85/AN5	AGC	Analog In	AGC voltage input from tuner	
21	P86/AN6	BATTERY	Analog In	Input for battery voltage checking	
22	P87/AN7	FUNC	Analog In		
23	P10/SO0	SDET3	I	Detection of S tereminal #3 connection	
24	P11/SI0/SB0	SDET2	I	Detection of S tereminal #2 connection	
25	P12/SCK0	SDET1	I	Detection of S tereminal #1 connection	
26	P13/SO1	AVLOUT	O	Input for battery voltage checking	
27	P14/SI1/SB1	SDA	Nch O/D	I2C communication (data)	
28	P15/SCK1	SCL	Nch O/D	I2C communication (clock)	
29	P16/T1PWML	XSYSRST	O	IC reset signal of whole system	
30	P17/T1PWMH/BUZ	XVDECRST	O	Reset signal to VDEC2	
31	PE0/AN12	MUTEV	O	CVBS, Y/C mute signal for video driver IC	
32	PE1/AN13	COMPMUTE	O	Y/Cb/Cr mute signal for video driver IC	
33	PE2/AN14	AMUTE1	O	Audio mute signal of ouput stage	
34	PE3/AN15	INSEL1	O	Input selection of video selector	
35	PE4	INSEL2	O	Input selection of video selector	
36	PE5	INSEL3	O	Input selection of video selector	
37	PE6	YCSEL	O	CVBS or Y/C selection of video selector	
38	PE7	STBYVS	O	Standby mode selection of video selector	
39	VSS4	GND	—		
40	VDD4	VDD4	—		

No.	Pin Name	Signal Name	I/O	Function	Active
41	PF0	LET	O	Letter-box output superimposed signal	
42	PF1	SQU	O	Squeeze output superimposed signal	
43	PF2	RGBSEL	O	Input RGB selection	
44	PF3	XTUMODE	O		
45	PF4	S1	O	S1/S2 selection signal	
46	PF5	XLPTHU	O		
47	PF6	PSMUTE	O		
48	PF7	XAVLTH	O	Through selection of AV.Link communication line	
49	SI2P0/SO2	NC	O		
50	SI2P1/SI2/SB2	NC	O		
51	SI2P2/SCK2	NC	O		
52	SI2P3/SCK2O	RFTHRU	O	RF through selection of tuner	
53	PWM1	NC	O		
54	PWM0	FANCTRL	O	Rotation speed control of radiating fan	
55	VDD2	VDD2	-		
56	VSS2	GND	-		
57	PO0	P_CONT2	O		
58	PO1	MUTECTL	O		
59	PO2	EPGEXT	O	Equaliser selection of slicer input video	
60	PO3	TUON	O	Power control for tuner section	
61	PO4	SWVION	O	Power control for tvideo section	
62	PO5/CKO	P_CONT	O	Power control for whole system	
63	PO6/T6O	FLON	O	Power control for FL tube	
64	PO7/T7O	XP_SAVE	O		
65	P20/INT4/T1IN/TOCLP/TOHCP/INT6	STATCHG	I	Detection of audio multi-plex status change of MSP	
66	P21/INT4/T1IN/TOCLP/TOHCP	J_CLOCK	I	Input audio for Just Clock	
67	P22/INT4/T1IN/TOCLP/TOHCP/HCTR	CSYNCIN	I	C-sync for Auto-Rec	
68	P23/INT4/T1IN/TOCLP/TOHCP	XCHECKER	I	Detection of attaching the unit checker	
69	P24/INT5/T1IN/TOCLP/TOHCP/INT7	MRST	I	Detection of abnormality of Main Board power	
70	P25/INT5/T1IN/TOCLP/TOHCP	AVLIN	I	Input line of NexTVViewLink	
71	P26/INT5/T1IN/TOCLP/TOHCP	NC	O		
72	P27/INT5/T1IN/TOCLP/TOHCP	BLANKIN	I		
73	P30/PWM4	LEDDVD	O	DVD indicator	
74	P31/PWM5	LEDHDD	O	HDD indicator	
75	P32/UTX1	TXD1	O	Transmission for RS232-C terminal	
76	P33/URX1	RXD1	I	Reception for RS232-C terminal	
77	P34/UTX2	TXD2	O	Reservation	
78	P35/URX2	RXD2	I	Reservation	
79	P36	HS_TTOM	O	Handshaking of sys con SYS → Tuner	
80	VDDODA	VDDODA	-		

No.	Pin Name	Signal Name	I/O	Function	Active
81	PB6/CVD/CSYNC	CVBSIN	I	Input video for data slicer	
82	VSSVCO	GND	–		
83	PB4/FILTSLC	FILTSLC	I	External filter for slicer PLL	
84	VDDVCO	VDDVCO	–		
85	PB2	NC	O		
86	PB1	NC	O		
87	PB0/DS1FLD	NC	O		
88	VSS3	GND	–		
89	VDD3	VDD3	–		
90	PC7/DBGP2	DBGP2	Nch O/D	Control port for on-chip debugger	
91	PC6/DBGP1	DBGP1	Nch O/D	Control port for on-chip debugger	
92	PC5/DBGP0	DBGP0	Nch O/D	Control port for on-chip debugger	
93	PC4/AN10	NC	O		
94	PC3/AN11	NC	O		
95	PC2/AN9	NC	O		
96	PC1/AN8	NC	O		
97	PC0/OCSYNC	NC	O		
98	PA0/SO7	SD_TTOM	O	Communication data line of sys con Tuner → Sys	
99	PA1/SI7/SB7	SD_MTOT	I	Communication data line of sys con Sys → Tuner	
100	PA2/SCK7	SCK_MTOT	I	Communication clock of sys con Sys → Tuner	


LA73026AV (SCRB ASSY : IC801)

• Dual SCART Interface IC

● Pin Function

No.	Pin Name	DC Voltage	Function
1 2 10 11 15 16 33 34 36 37	AIN1R AIN1L AIN2R AIN2L AIN3R AIN3L AIN4L AIN4R AIN5L AIN5R	5.58V	Audio input terminal
3 4 19 35	EXTCTL1 EXTCTL2 EXTCTL3 EXTCTL4	2.5mA, ON →0.75V OFF →OPEN	General purpose output Opencollector
5	VOUT	1.10V	Video output terminal Push-pull output/Low-impedance
6 17 27 32 38	GND GND EXT-75ΩDR-GND DEC-75Ω-GND GND	0V	
7 13 18 23 28	VIN1 VIN2 VIN3 VIN4 VIN5	1.8V	Video input terminal Sync-tip clamp Input/Hi-impedance
8	PWRSAB	0.2V	Power save mode select pin OPEN : L
9	AUMUTE	0.05V	Control terminal for audio mute OPEN : L
12	REFFIL	4.94V	Terminal for Ref_DC ripple removing
14	VCC12		Vcc for audio
20	FSSOUT	H : Vcc-0.5V M : 6V L : 0V	FSS control terminal Output H, M, L 3 values with serial control
21	DATA		Confirmed to IIC BUS. Data input terminal
22	CLOCK		Confirmed to IIC BUS. Clock input terminal
24	VCC5A		Control Vcc for Video
25 26	VOUT75A VOUT75B	1.10V	Video driver output terminal Push-pull output/Low-impedance
29	VCC5B		Always VCC for Video
30 31 42 43	AOUT2L AOUT2R AOUT3L AOUT3R	4.91V	Audio output terminal Push-pull output/Low-impedance
39 40	AOUT1L AOUT1R	4.91V	Audio output terminal Push-pull output/Low-impedance
41 44	PWRMUTE1 PWRMUTE2	0V	Output terminal of audio muting

● Block Diagram

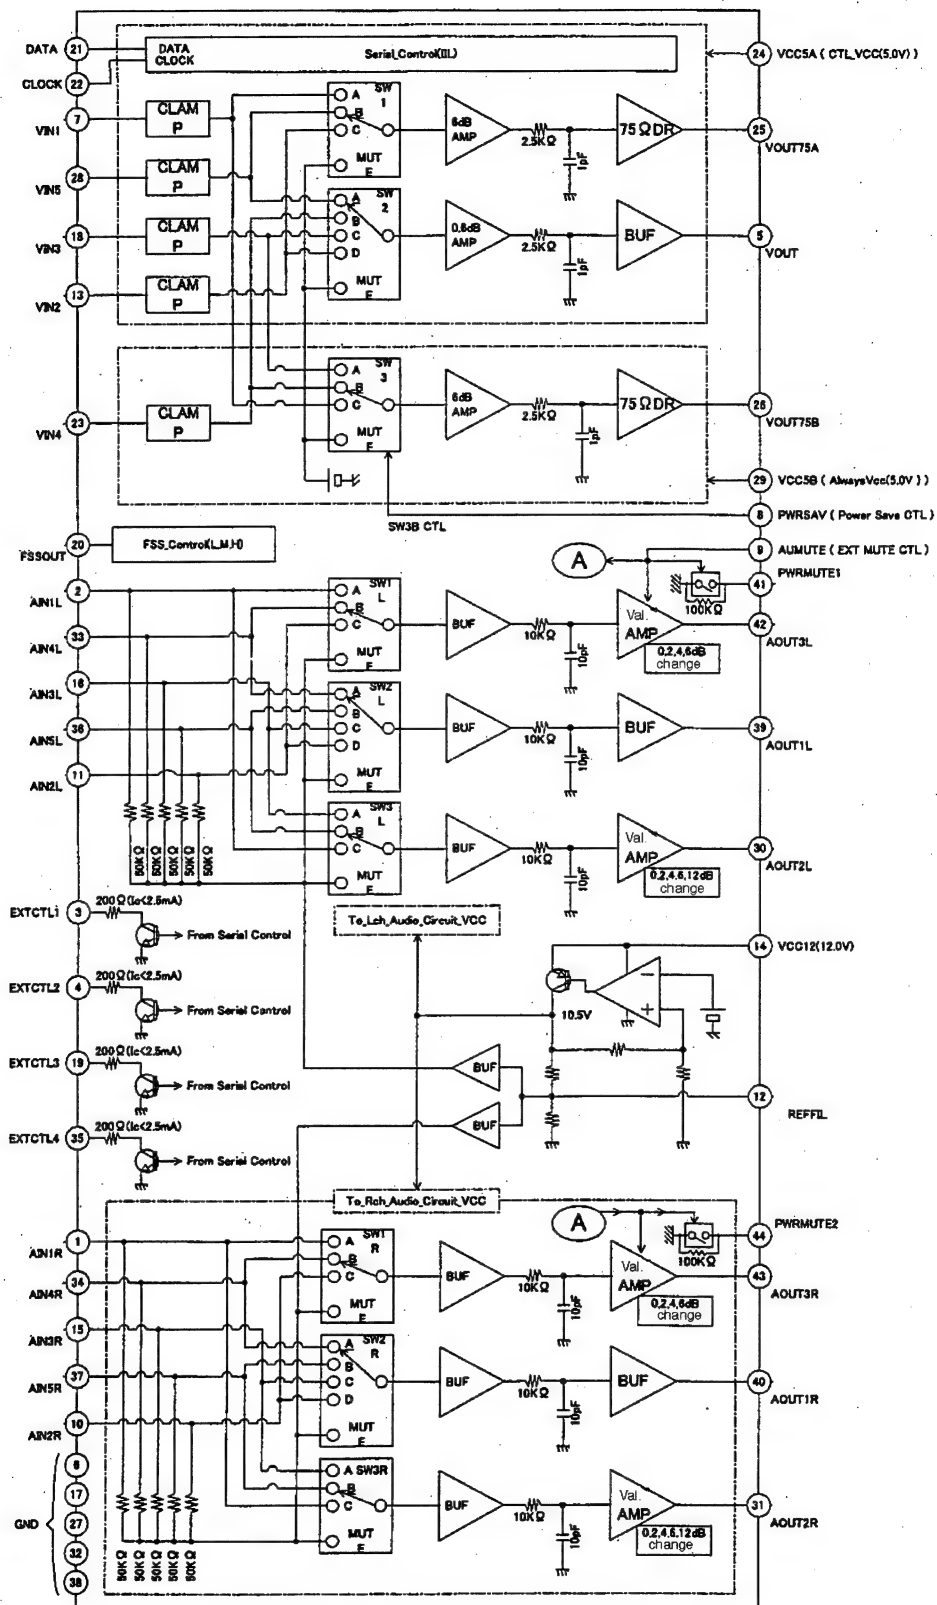

CM0045AF (MAIN ASSY: IC4201)

• Video Decoder


A

• Pin Arrangement (Top view)

B

C

D

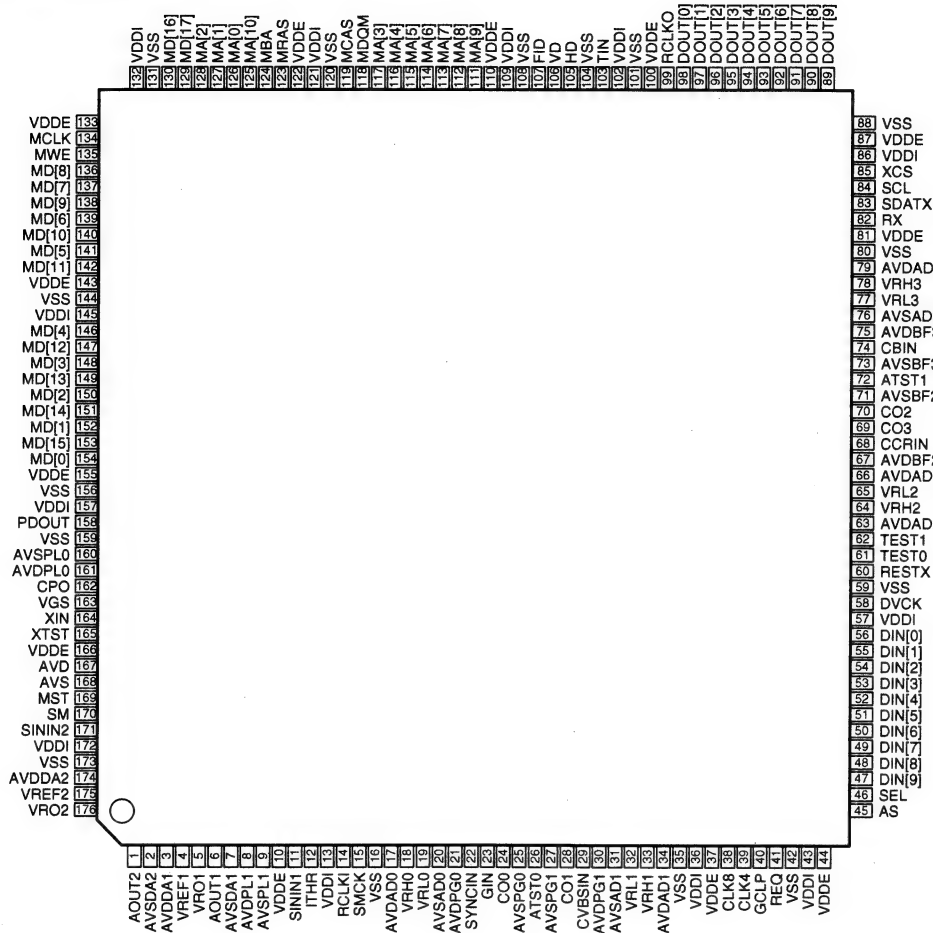

E

F

• Pin Function


No.	Pin Name	I/O	Function	No.	Pin Name	I/O	Function
1	AOUT2	O	DAC2 analog signal output	9	AVSPL1	P	PLL1 GND
2	AVSDA2	P	DAC2 GND	10	VDDE	P	I/O power supply 1
3	AVDDA1	P	DAC1 power supply	11	SININ1	I	PLL1 reference input
4	VREF1	I	DAC1 reference voltage input	12	ITHR	I	Penetration current test pin
5	VRO1	O	DAC1 inward current setting pin	13	VDDI	P	CORE power supply 1
6	AOUT1	O	DAC1 analog signal output	14	RCLKI	I	Resampling clock input
7	AVSDA1	P	DAC1 GND	15	SMCK	I	SCAN test pin
8	AVDPL1	P	PLL1 power supply	16	VSS	P	Digital GND 1

No.	Pin Name	I/O	Function	No.	Pin Name	I/O	Function
17	AVDAD0	P	ADC0 power supply	57	VDDI	P	CORE power supply 4
18	VRH0	I	ADC0 top reference electric potential	58	DVCK	I	DVIF clock input
19	VRL0	I	ADC0 bottom reference electric potential	59	VSS	P	Digital GND4
20	AVSAD0	P	ADC0 GND	60	RESETX	I	System reset input
21	AVDPG0	P	PGA0, CLP0, OFFC power supply	61	TEST0	I	Test mode setting 0
22	SYNCIN	I	ADC0 analog input	62	TEST1	I	Test mode setting 1
23	GIN	I	ADC0 analog input	63	AVDAD2	P	ADC2 power supply
24	CO0	O	PGA0 capacitor connection pin (REF0-synctip)	64	VRH2	I	ADC2 top reference electric potential
25	AVSPG0	P	PGA0, CLP0, OFFC GND	65	VRL2	I	ADC2 bottom reference electric potential
26	ATST0	I	Analog test pin	66	AVSAD2	P	ADC2 GND
27	AVSPG1	P	PGA1, CLP1, OFFC GND	67	AVDBF2	P	BUF2.CLP2 power supply
28	CO1	O	PGA1 capacitor connection pin (REF1-synctip)	68	CCRIN	I	ADC2 analog input
29	CVBSIN	I	ADC1 analog input	69	CO3	O	PGA3 capacitor connection pin
30	AVDPG1	P	PGA1, CLP1, OFFC power supply	70	CO2	O	BUF2 capacitor connection pin
31	AVSAD1	P	ADC1 GND	71	AVSBF2	P	BUF2, CLP2 GND
32	VRL1	I	ADC1 bottom reference electric potential	72	ATST1	I	Analog test pin
33	VRH1	I	ADC1 top reference electric potential	73	AVSBF3	P	BUF3, BUFF GND
34	AVDAD1	P	ADC1 power supply	74	CBIN	I	ADC3 analog input
35	VSS	P	Digital GND2	75	AVDBF3	P	BUF3.BUFF power supply
36	VDDI	P	CORE power supply 2	76	AVSAD3	P	ADC3 GND
37	VDDE	P	I/O power supply 2	77	VRL3	I	ADC3 bottom reference electric potential
38	CLK8	O	8fsc clock output for GCR	78	VRH3	I	ADC3 top reference electric potential
39	CLK4	O	4fsc clock output for GCR	79	AVDAD3	P	ADC3 power supply
40	GCLP	I/O	Clamp pulse output for GCR/FB input	80	VSS	P	Digital GND5
41	REQ	O	Interrupt signal output	81	VDDE	P	I/O power supply 4
42	VSS	P	Digital GND3	82	RX	O	--
43	VDDI	P	CORE power supply 3	83	SDATX	I/O	Data for serial communication (I2C: SDA)
44	VDDE	P	I/O power supply 3	84	SCL	I	Clock for serial communication (I2C: SCL)
45	AS	I	Address select input	85	XCS	I	--
46	SEL	I	Serial communication mode setting	86	VDDI	P	CORE power supply 5
47	DIN[9]	I	Digital data input (MSB)	87	VDDE	P	I/O power supply 5
48	DIN[8]	I	Digital data input	88	VSS	P	Digital GND6
49	DIN[7]	I	Digital data input	89	DOUT[9]	O	Digital data output (MSB)
50	DIN[6]	I	Digital data input	90	DOUT[8]	O	Digital data output
51	DIN[5]	I	Digital data input	91	DOUT[7]	O	Digital data output
52	DIN[4]	I	Digital data input	92	DOUT[6]	O	Digital data output
53	DIN[3]	I	Digital data input	93	DOUT[5]	O	Digital data output
54	DIN[2]	I	Digital data input	94	DOUT[4]	O	Digital data output
55	DIN[1]	I	Digital data input	95	DOUT[3]	O	Digital data output
56	DIN[0]	I	Digital data input (LSB)	96	DOUT[2]	O	Digital data output

No.	Pin Name	I/O	Function	No.	Pin Name	I/O	Function
97	DOUT[1]	O	Digital data output	137	MD[7]	I/O	SDRAM data bus
98	DOUT[0]	O	Digital data output (LSB)	138	MD[9]	I/O	SDRAM data bus
99	RCLKO	O	Resampling clock output	139	MD[6]	I/O	SDRAM data bus
100	VDDE	P	I/O power supply 6	140	MD[10]	I/O	SDRAM data bus
101	VSS	P	Digital GND7	141	MD[5]	I/O	SDRAM data bus
102	VDDI	P	CORE power supply 6	142	MD[11]	I/O	SDRAM data bus
103	TIN	I	Control input of data output timing	143	VDDE	P	I/O power supply 10
104	VSS	P	Digital GND8	144	VSS	P	Digital GND12
105	HD	O	H drive output	145	VDDI	P	CORE power supply 10
106	VD	I/O	V drive output (MD[19])	146	MD[4]	I/O	SDRAM data bus
107	FID	I/O	Field ID output (MD[18])	147	MD[12]	I/O	SDRAM data bus
108	VSS	P	Digital GND9	148	MD[3]	I/O	SDRAM data bus
109	VDDI	P	CORE power supply 7	149	MD[13]	I/O	SDRAM data bus
110	VDDE	P	I/O power supply 7	150	MD[2]	I/O	SDRAM data bus
111	MA[9]	O	SDRAM address output	151	MD[14]	I/O	SDRAM data bus
112	MA[8]	O	SDRAM address output	152	MD[1]	I/O	SDRAM data bus
113	MA[7]	O	SDRAM address output	153	MD[15]	I/O	SDRAM data bus (MSB)
114	MA[6]	O	SDRAM address output	154	MD[0]	I/O	SDRAM data bus (LSB)
115	MA[5]	O	SDRAM address output	155	VDDE	P	I/O power supply 11
116	MA[4]	O	SDRAM address output	156	VSS	P	Digital GND13
117	MA[3]	O	SDRAM address output	157	VDDI	P	CORE power supply 11
118	MDQM	O	SDRAM DQM output	158	PDOUT	O	Phase comparison output
119	MCAS	O	SDRAM CAS output	159	VSS	P	Digital GND14
120	VSS	P	Digital GND10	160	AVSPL0	P	PLL0 GND
121	VDDI	P	CORE power supply 8	161	AVDPL0	P	PLL0 power supply
122	VDDE	P	I/O power supply 8	162	CPO	O	PLL0 Charge Pump output
123	MRAS	O	SDRAM RAS output	163	VGS	I	GND for PLL0 guard band
124	MBA	O	SDRAM bank address output	164	XIN	I	27MHz clock input
125	MA[10]	O	SDRAM address output (MSB)	165	XTST	I	SCAN test pin
126	MA[0]	O	SDRAM address output (LSB)	166	VDDE	P	I/O power supply 12
127	MA[1]	O	SDRAM address output	167	AVD	P	PLL2 power supply
128	MA[2]	O	SDRAM address output	168	AVS	P	PLL2 GND
129	MD[17]	I/O	(SDRAM data bus)	169	MST	I	SCAN test pin
130	MD[16]	I/O	(SDRAM data bus)	170	SM	I	SCAN test pin
131	VSS	P	Digital GND11	171	SININ2	I	PLL2 reference input
132	VDDI	P	CORE power supply 9	172	VDDI	P	CORE power supply 12
133	VDDE	P	I/O power supply 9	173	VSS	P	Digital GND15
134	MCLK	O	SDRAM clock output	174	AVDDA2	P	DAC2 power supply
135	MWE	O	SDRAM WE output	175	VREF2	I	DAC2 reference voltage input
136	MD[8]	I/O	SDRAM data bus	176	VRO2	O	DAC2 inward current setting pin

■ R8A34011BG-K (MAIN ASSY : IC1001)
 • System Codec


● Block Diagram

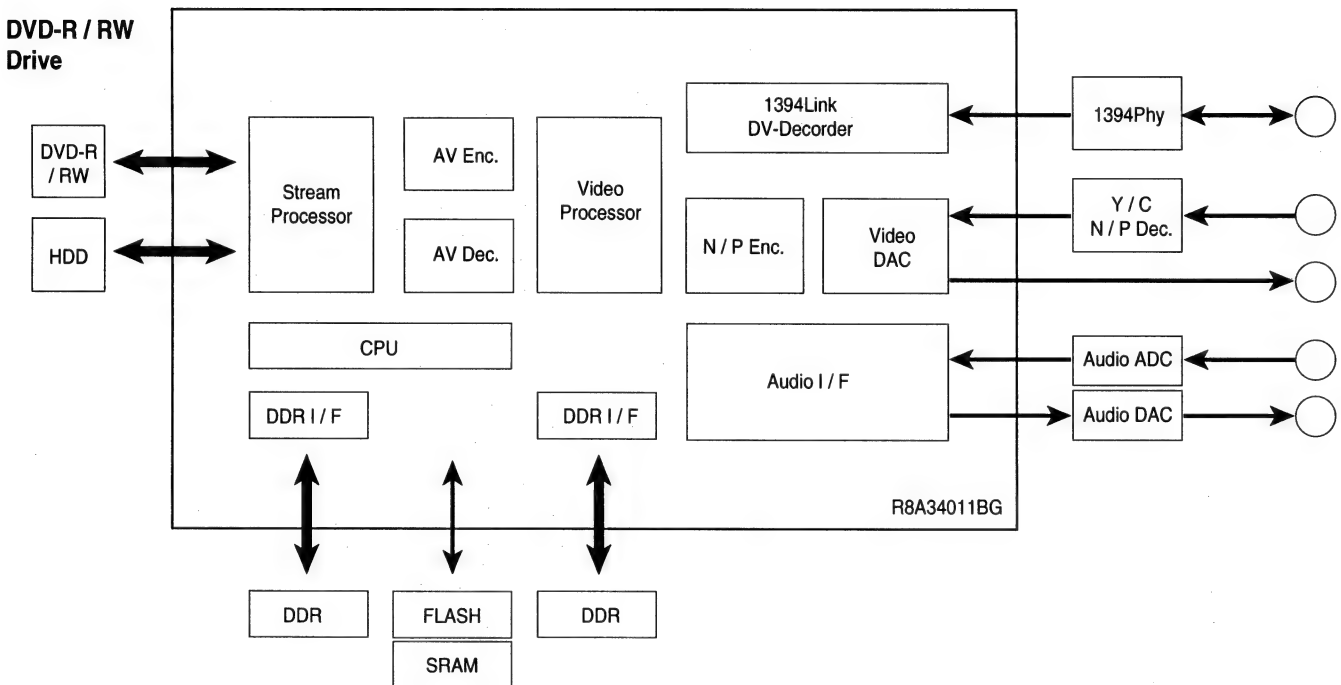

■ BU4828F (MAIN ASSY : IC3706)

• Reset IC

● Block Diagram

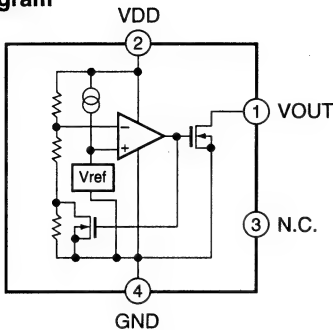


● Pin Discription

No.	Pin Name	I/O	Function
1	VOUT	O	Output Pin
2	VDD	I	Power Supply Input pin
3	N.C.	–	N.C.
4	GND	–	GND pin

■ R1170S331B (MAIN ASSY : IC4506)

• Regulator IC

● Block Diagram

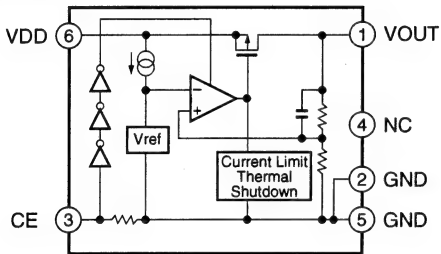


● Pin Discription

No.	Pin Name	I/O	Function
1	VOUT	O	VR Output Pin
2	GND	–	GND pin
3	CE.	O	Cjip Enable ("H" active)
4	N.C.	–	N.C.
5	GND	–	GND pin
6	VDD	I	Power Supply Input pin

■ PQ035ZN01ZPH (MAIN ASSY : IC4509)

• Regulator IC


● Block Diagram

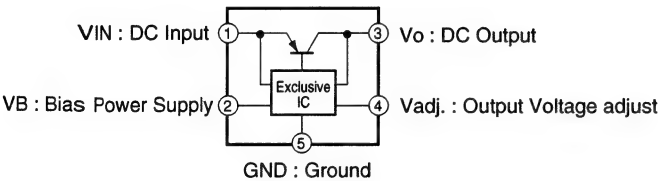

■ NJM2861F33 (MAIN ASSY : IC4512)

- Regulator IC


● Block Diagram

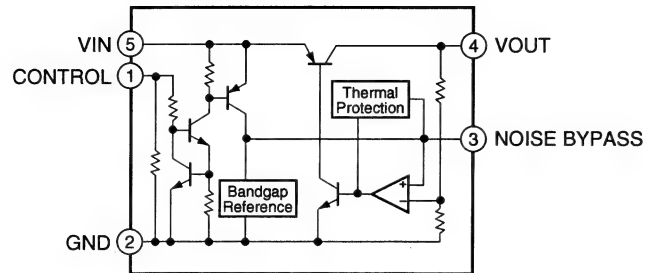

■ BA25F18WHFP (MAIN ASSY : IC4571)

- Dual Low-Dropout Voltage Regulator


● Block Diagram

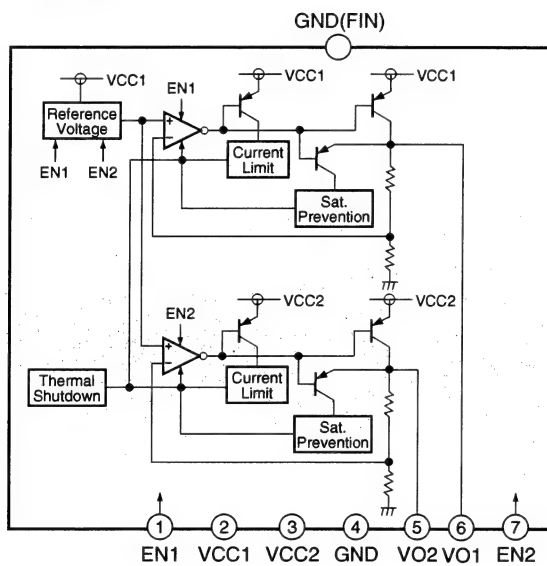


■ BD3823FV (JACB ASSY : IC103)

• Audio Sound Processor

A ● Pin Layout (Upper view)

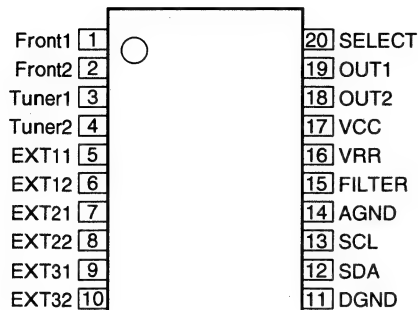

● Block Diagram

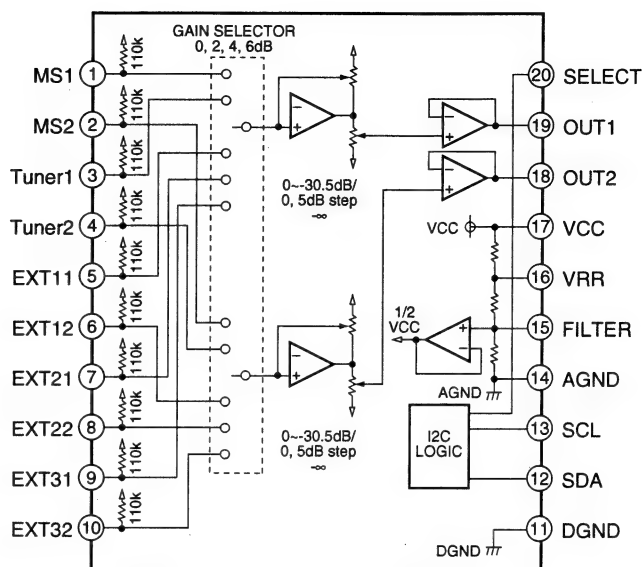


● Pin Discription

No.	Pin Name	I/O	Function
1	MS1	I	Music server input terminal
2	MS2	I	Music server input terminal
3	Tuner1	I	Tuner input terminal of ch1
4	Tuner2	I	Tuner input terminal of ch2
5	EXT11	I	External 1 input terminal of ch1
6	EXT12	I	External 1 input terminal of ch2
7	EXT21	I	External 2 input terminal of ch1
8	EXT22	I	External 2 input terminal of ch2
9	EXT31	I	External 3 input terminal of ch1
10	EXT32	I	External 3 input terminal of ch2
11	DGND	-	Ground terminal
12	SDA	I	I2C BUS data terminal
13	SCL	I	I2C BUS clock terminal
14	AGND	-	GND terminal
15	FILTER	I	1/2 VCC terminal
16	VRR	I	Ripple rejection filter terminal
17	VCC	-	Power supply terminal
18	OUT2	O	Volume output terminal of ch2
19	OUT1	O	Volume output terminal of ch1
20	SELECT	I	Slave address selection terminal

■ LA73031V (JACB ASSY : IC401)

• Video Input selector

● Block Diagram

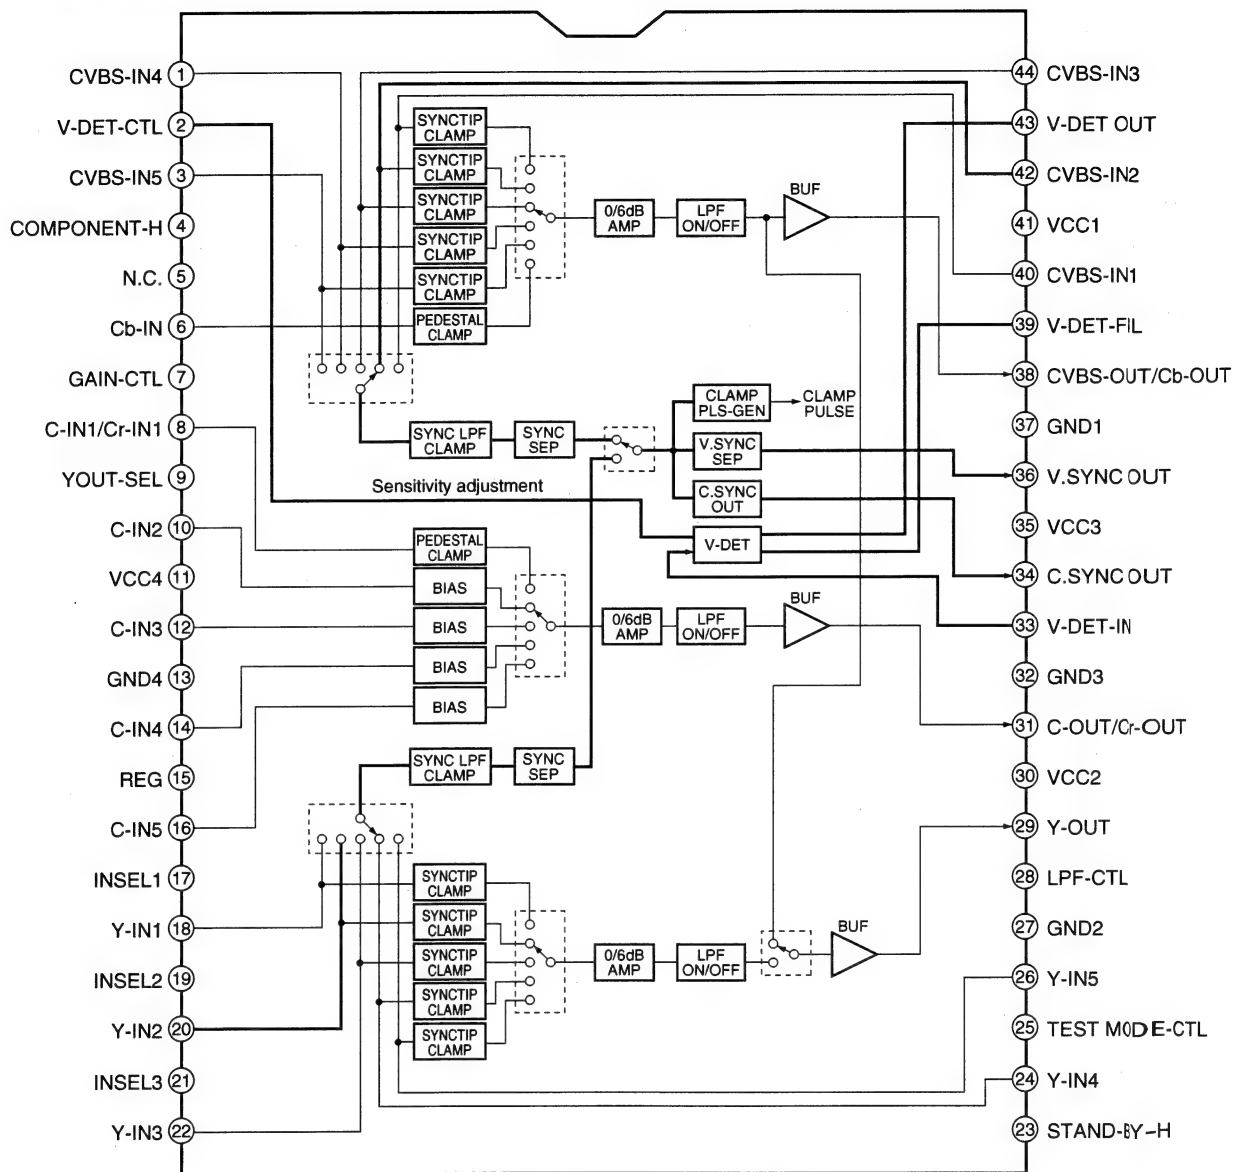

The parts connected by wide lines operate even at standby mode.

7.3 CAUTIONS ON HANDLING THE HDD

(1) Cautions on Handling the HDD

- The HDD is very sensitive to shocks and vibrations. Care must be taken especially during operation (when the power is on).
- The HDD is very sensitive to electrostatic charges.
- Rapid change in temperature or humidity may cause deterioration of the HDD.

Note: After receiving damage caused by any above-mentioned factors, the HDD may operate normally for dozens or some hundreds of hours but then suddenly crash. If you are certain you have damaged a new repair part (HDD) while making repairs, do not use the part.

The HDD is about 10 times as sensitive to shock during operation than during nonoperation.

Reference: Main specifications on damage to the HDD

	During operation	During nonoperation
Shock G (acceleration)	<approx. 20 G	<approx. 200 G
Temperature change	< 15°C/hour	
Moisture change	< 20%/hour	

Reference: Estimate value of falling distance vs. shock (G) when the HDD is dropped without protection

Falling distance	Landing surface	Granite surface	Concrete floor	Synthetic-resin-coated table	Antistatic sponge
0.5 inch / 12.7 mm		387	217	200	26
1.0 inch / 25.4 mm		595	457	310	37
2.0 inch / 50.8 mm		1133	600	680	70
4.0 inch / 101.6 mm		1795	1040	1050	267

(2) Cautions on handling the product on which the HDD is mounted or the HDD as a repair part, and examples of dangerous handling

[Cautions on handling the product on which the HDD is mounted]

- While the unit is turned on, the HDD is always in operation. Be sure NOT to impart shock to the unit.

• Examples of dangerous handling: while the power is on

- Bumping on the bonnet
- Dropping an object, such as a small screwdriver or remote control unit, onto the bonnet, or bumping an object against the cabinet
- Moving the unit by dragging
- Stacking another product on the unit

Note: Be sure NOT to impart shock, such as bumping or hitting a screwdriver against the HDD, during diagnosis with the bonnet open.

• Examples of dangerous handling: while the power is off

- Imparting strong shock, although the HDD is more resistant to shock when the power is off
- Dropping the unit from a height of several centimeters, or after lifting one side of the unit up, then letting the unit drop.
- Do NOT move the unit immediately after the power is turned off. Wait at least 30 seconds after the indication on the FL display changed from POWER OFF to the clock indication before moving the unit.
- If the AC power cord is accidentally disconnected before turning the unit off, wait at least for one minute before moving it. In this case, damage to the HDD caused by sudden shutoff may be small, because the emergency relief mechanism is activated. However, if sudden shutoff occurs during recording or playback, recorded data may be damaged. Be sure to check operations.

[Cautions on handling the HDD as a repair part]

1. Handle the HDD in a safe environment:

- Handle the HDD over an antistatic pad that can also absorb shock.
- Wear wrist bands to prevent electrostatic charges generated in your body from affecting the HDD.

2. The following must be observed when handling the HDD:

- Handle one HDD at a time. Do NOT hold several HDDs at the same time.
- Grip the HDD on both sides so that you do not touch its terminals or circuit boards.
- Do NOT stack one HDD onto another HDD (even if the HDDs are protected in antistatic bags).
- Do NOT bump the HDDs against one another.
- Do NOT bump any tool, such as a screwdriver, or other hard object against the HDD.
- When a repair part (HDD) is transported and there is a large temperature difference between outdoors and indoors, to the indoor, leave it in its package for about a half day to gradually cool or warm the HDD to room temperature before unpacking it.

[Notes on packing for shipment]

- When returning a defective HDD for analysis, handle with care as if it were a good product. Otherwise, the results of analysis may not be correct.
- When packing, use the antistatic bag and packing materials in which the repair part for service was delivered. Attach a copy of the slip for service or a memo stating symptoms in as much detail as possible.


■ Outline and part No. of the HDDs

*Pioneer's part No. is not stamped.


Model Name	Capacity	Western Digital		SEAGATE	
		Pioneer's Part No. (for service)	Manufacture's Part No.	Pioneer's Part No. (for service)	Manufacture's Part No.
DVR-530H-S DVR-530H-AV	160GB	VXF1047	WD1600BB	VXF1040	ST316002xACE
		VXF1068	WD1600BB	VXF1086	
DVR-630H-S	250GB	VXF1049	WD2500BB -xxGUAx	VXF1082	ST325082xACE
		VXF1072	WD2500BB -xxGUCx		

- When replacing the HDD, carefully check the capacity and manufacturer's part No. on the part label to avoid replacing with a similar but inappropriate product. You can also check the model No. of the mounted HDD on the Service mode screen.
- Do NOT use repair parts, such as commercially available HDDs, other than those designated above, as their functions, performance or reliability cannot be guaranteed.

Western Digital(160G, 250GB)

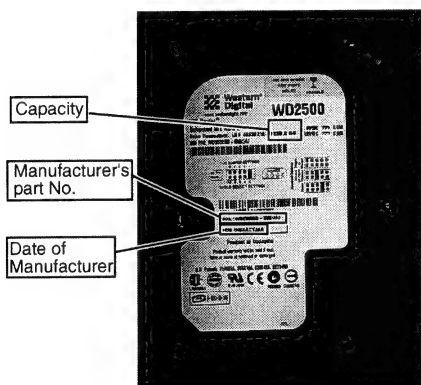


Seagate

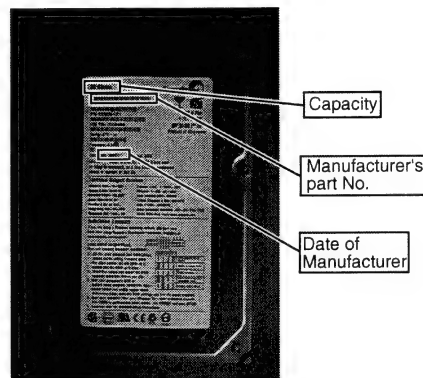


■ Confirmation of the jumper pin location of the HDD

Western Digital

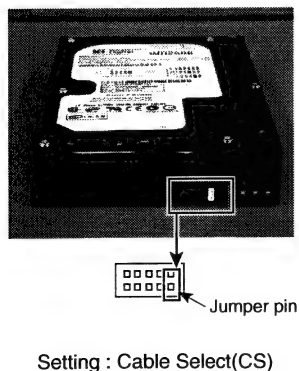

Seagate

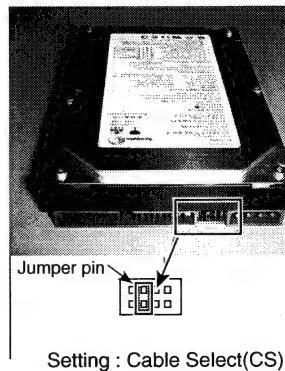



7.4 DISC/CONTENT FORMAT

Disc / content format playback compatibility

General disc compatibility

This recorder is compatible with a wide range of disc types (media) and formats. Playable discs will generally feature one of the following logos on the disc and/or disc packaging. Note however that some disc types, such as recordable CD and DVD, may be in an unplayable format—see below for further compatibility information.



- Also compatible with KODAK Picture CD
- **DVD** is a trademark of DVD Format/Logo Licensing Corporation.
-  is a trademark of Fuji Photo Film Co. Ltd.

This recorder also supports the IEC's Super VCD standard. Compared to the Video CD standard, Super VCD offers superior picture quality, and allows two soundtracks to be recorded. Super VCD also supports the widescreen size.



DVD-R/RW compatibility

This recorder will play and record DVD-R/RW discs.

Compatible media:

- DVD-RW Ver. 1.1, Ver. 1.1 / 2x, Ver. 1.2 / 2–4x and Ver. 1.2 / 2–6x
- DVD-R Ver. 2.0 and Ver. 2.0 / 4x / 8x / 16x, and Ver. 2.1 1–8x / 1–16x

Recording formats:

- DVD-R/RW: Video Recording (VR) format and DVD-Video format (Video mode)

Readable formats:

- DVD-R/RW: Video Recording (VR) format and DVD-Video format (Video mode)

Note that older models of DVD recorders and DVD writers may reject DVD-RW Ver. 1.2 discs and/or corrupt the data on the disc. If you want to share DVD-RW discs between this recorder and an older recorder/writer, we recommend using Ver. 1.1 discs.

CD-R/RW compatibility

This recorder cannot record CD-R or CD-RW discs.

- Readable formats: CD-Audio, Video CD/Super VCD, ISO 9660 CD-ROM* containing MP3, WMA or JPEG files

* ISO 9660 Level 1 or 2 compliant. CD physical format: Mode1, Mode2 XA Form1. Romeo and Joliet file

systems are both compatible with this recorder.

- Multi-session playback: Yes (except CD-Audio and Video CD/Super VCD)
- Unfinalized disc playback: CD-Audio only

Compressed audio compatibility

- Compatible media: CD-ROM, CD-R, CD-RW
- Compatible formats: MPEG-1 Audio Layer 3 (MP3), Windows Media Audio (WMA)
Sampling rates: 44.1 or 48kHz
- Bit-rates: Any (128Kbps or higher recommended)
- Variable bit-rate (VBR) MP3 playback: Yes
- VBR WMA playback: No
- WMA encoder compatibility: Windows Media Codec 8 (files encoded using Windows Media Codec 9 may be playable but some parts of the specification are not supported; specifically, Pro, Lossless, Voice and VBR)
- DRM (Digital Rights Management) file playback: No (see also DRM in the Glossary on page 121)
- File extensions: .mp3, .wma (these must be used for the recorder to recognize MP3 and WMA files – do not use for other file types)
- File structure: Up to 99 folders / 999 files (if these limits are exceeded, only files and folders up to these limits are playable)

WMA (Windows Media Audio) compatibility



The Windows Media® logo printed on disc indicates that this recorder can playback Windows Media Audio content.

WMA is an acronym for Windows Media Audio and refers to an audio compression technology developed by Microsoft Corporation. WMA content can be encoded by using Windows Media® Player for Windows® XP, Windows Media® Player 9 or Windows Media® Player 10 series.

Microsoft, Windows Media, and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

JPEG file compatibility

- Compatible formats: Baseline JPEG and EXIF 2.2* still image files
* File format used by digital still cameras
- Sampling ratio: 4:4:4, 4:2:2, 4:2:0
- Horizontal resolution: 160 – 5120 pixels
- Vertical resolution: 120 – 3840 pixels
- Progressive JPEG compatible: No
- File extensions: .jpg, .jpeg, .jif, .jfif (must be used for the recorder to recognize JPEG files – do not use for other file types)
- File structure: The recorder can load up to 99 folders / 999 files at one time (if there are more files/folders than this on the disc then more can be reloaded)

PC-created disc compatibility

Discs recorded using a personal computer may not be playable in this unit due to the setting of the application software used to create the disc. In these particular instances, check with the software publisher for more detailed information.

Discs recorded in packet write mode (UDF format) are not compatible with this recorder.

Check the DVD-R/RW or CD-R/RW software disc boxes for additional compatibility information.

A

B

C

D


E

F

8. PANEL FACILITIES

8.1 FRONT SECTION

Front panel

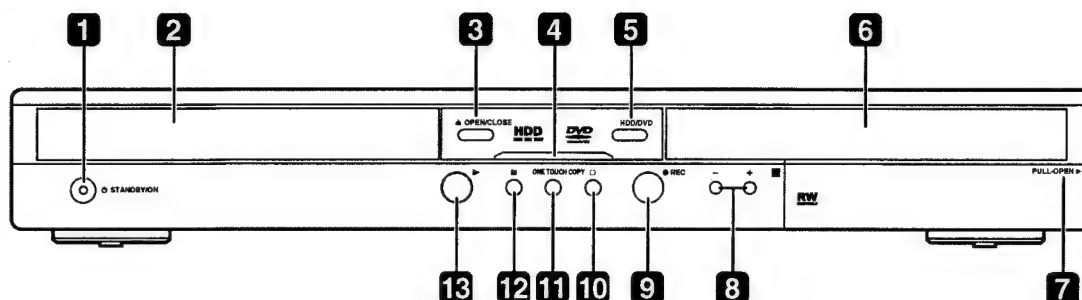

1 STANDBY/ON

Press to switch the recorder on/into standby.

2 Disc tray

3 OPEN/CLOSE

Press to open/close the disc tray.

4 HDD/DVD indicator

Lights blue when the HDD is selected; orange when DVD is selected.

5 HDD/DVD

Press to switch between the hard disk drive (HDD) and DVD for recording and playback.

6 Front panel display and IR remote sensor

7 Front panel inputs

Pull the cover down where indicated to access the front panel input jacks (audio, video and DV). Especially convenient for connecting camcorders and other portable equipment.

8 +/-

Use to change channels, skip chapters/tracks, etc.

9 REC

Press to start recording. Press repeatedly to set the recording time in 30 minute blocks.

10

Press to stop recording.

11 ONE TOUCH COPY

Press to start One Touch Copy of the currently playing title to DVD or the HDD. See also the *Note on copying*.

12


Press to stop playback.

13

Press to start or restart playback.

8.2 REAR PART

Rear panel connections

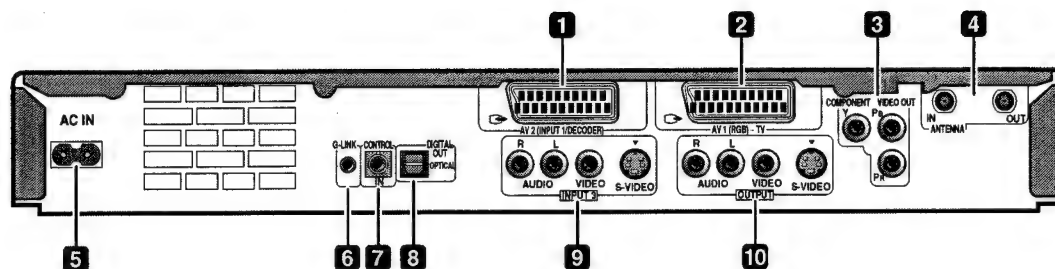

1 AV2(INPUT 1/DECODER) AV connector

Audio/video input/output SCART-type AV connector for connecting to a VCR, or other equipment with a SCART connector. The input accepts video, S-video and RGB. See *AV2/L1 In* for how to set this up.

2 AV1(RGB)-TV AV connector

Audio/video output SCART-type AV connector for connecting to a TV or other equipment with a SCART connector. The video output is switchable between video, S-video and RGB. See page *AV1 Out* for how to set this up.

3 COMPONENT VIDEO OUT

A high-quality video output for connecting to a TV or monitor with a component video input.

4 ANTENNA IN (RF IN)/OUT


Connect your TV antenna to the **ANTENNA IN (RF IN)** jack. The signal is passed through to the **ANTENNA OUT** jack for connection to your TV.

5 AC IN - Power inlet

6 G-LINK™

Use to connect the supplied G-LINK™ cable to enable GUIDE Plus+® to control an external satellite receiver, etc.

7 CONTROL IN

Use to control this recorder from the remote sensor of another Pioneer component with a **CONTROL OUT** terminal and bearing the Pioneer  mark. Connect the **CONTROL OUT** of the other component to the **CONTROL IN** of this recorder using a mini-plug cord.

8 DIGITAL AUDIO OUT

Optical digital audio jack for connecting to an AV amplifier/receiver, Dolby Digital/DTS/MPEG decoder or other equipment with a digital input.


9 INPUT 3

Stereo analog audio, video and S-video inputs for connection to a VCR or other source component.

10 OUTPUT

Stereo analog audio, video and S-video outputs for connection to a TV or AV amplifier/receiver.

Front panel connections

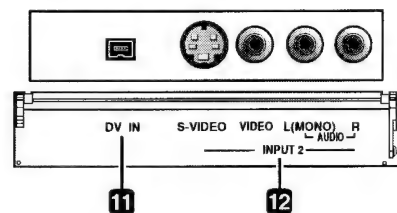

On the right side of the front panel a flip-down cover hides more connections.

11 DV IN


A DV input i.LINK connector, suitable for connecting a DV camcorder.

12 Audio/video input 2

Audio/video input (stereo analog audio; composite and S-video video), especially suitable for camcorders, game consoles, portable audio, etc.

8.3 DISPLAY

Display

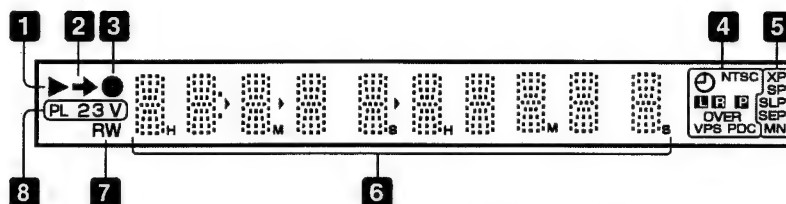

1 ►

Lights during playback; blinks when playback is paused.

2 →

Lights when copying.

3 ●

Lights during recording; blinks when recording is paused.

4 ⏸

Lights when a timer recording has been set. (Indicator blinks if the timer has been set to DVD but there isn't a recordable disc loaded, or the timer has been set to HDD but the HDD is not recordable.)

NTSC

Lights when playing NTSC format video.

L R

Indicates which channels of a bilingual broadcast are recorded.

P

Lights when the component video output is set to progressive scan.

OVER

Lights when the analog audio input level is too high.

VPS / PDC

Lights when receiving a VPS/PDC broadcast during a VPS/PDC-enabled timer recording.

5 Recording quality indicators

XP

Lights when the recording mode is set to **XP** (best quality).

SP

Lights when the recording mode is set to **SP** (standard play).

LP / SLP

Lights when the recording mode is set to **LP** (long play) or **SLP** (super long play).

EP / SEP

Lights when the recording mode is set to **EP** (extended play) or **SEP** (super extended play).

MN

Lights when the recording mode is set to **MN** (manual recording level) mode.

6 Character display

7 R / RW

Indicates the type of recordable DVD loaded: DVD-R or DVD-RW.

8 PL

Lights when a VR mode disc is loaded and the recorder is in Play List mode.

2 3


Shows the remote control mode (if nothing is displayed, the remote control mode is 1).

V

Lights when an unfinalized Video mode disc is loaded.

8.4 REMOTE CONTROL

Remote control

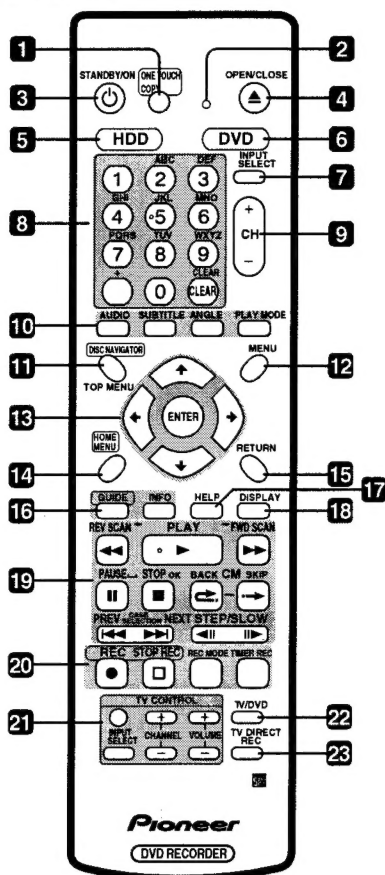

1 ONE TOUCH COPY

Press to start One Touch Copy of the currently playing title to DVD or the HDD.

2 Remote control indicator

Lights when setting up the remote control for use with a TV and when setting the remote control mode

3 STANDBY/ON

Press to switch the recorder on/into standby.

4 OPEN/CLOSE

Press to open/close the disc tray.

5 HDD

Press to select the hard disk (HDD) for recording or playback.

6 DVD

Press to select the DVD for recording or playback.

7 INPUT SELECT

Press to change the input to use for recording.

8 Alphanumeric buttons, + and CLEAR

Use the number buttons for track/chapter/title selection; channel selection, and so on. The same buttons can also be used to enter names for titles, discs and so on.

Use the + button to enter non-alphanumeric characters and symbols.

Use **CLEAR** to clear an entry and start again.

9 CH +/-

Press to change the channel of the built-in TV tuner.

10 GUIDE Plus+® Action buttons and DVD playback functions

When in the GUIDE Plus+® system, these buttons act as the Red, Green, Yellow and Blue Action buttons (the functions of these buttons change according to the GUIDE Plus+® Area.

AUDIO

Changes the audio language or channel. (When the recorder is stopped, press to change the tuner audio.)

SUBTITLE

Displays/changes the subtitles included in multilingual DVD-Video discs.

ANGLE

Switches camera angles on discs with multi-angle scenes.

PLAY MODE

Press to display the Play Mode menu (for features such as search, repeat and program play).

11 DISC NAVIGATOR / TOP MENU

Press to display the Disc Navigator screen, or the top menu if a DVD-Video disc is loaded.

12 MENU

Press to display the disc menu if a DVD-Video disc is loaded.

When in the GUIDE Plus+® system, use to jump directly to the Menu bar.

13 and ENTER

Used to navigate all on-screen displays. Press **ENTER** to select the currently highlighted option.

14 HOME MENU

Press to display the Home Menu, from which you can navigate all the functions of the recorder.

15 RETURN

Press to go back one level in the on-screen menu or display.

16 GUIDE Plus+® system controls

GUIDE

Press to display the GUIDE Plus+® screen; press again to exit.

INFO

Press to see additional information for the highlighted item in GUIDE Plus+®.

17 HELP

Press for help on how to use the current GUI screen

18 DISPLAY

Displays/changes the on-screen information displays.

19 Playback controls

◀◀ REV SCAN / FWD SCAN ▶▶

Press to start reverse or forward scanning. Press again to change the speed.

▶ PLAY

Press to start playback.

⏸ PAUSE

Press to pause playback or recording.

■ STOP

Press to stop playback.

CM BACK (commercial back)

Press repeatedly to skip progressively backward through the audio or video playing.

CM SKIP (commercial skip)

Press repeatedly to skip progressively forward through the audio or video playing.

◀◀ PREV / NEXT ▶▶

Press to skip to the previous or next title/chapter/track/folder; or to display the previous or next menu page.

When GUIDE Plus+® is displayed, use to display the previous/next page.

◀⏸ STEP/SLOW ▶

During playback, press to start slow-motion playback; while paused, press to show the previous or next video frame.

When GUIDE Plus+® is displayed, use to display the previous/next day.

20 Recording controls

● REC

Press to start recording. Press repeatedly to set the recording time in blocks of 30 mins.

□ STOP REC

Press to stop recording.

REC MODE

Press repeatedly to change the recording mode (picture quality).

TIMER REC

Press to set a timer recording from the GUIDE Plus+® system.

21 TV CONTROL

After setting up, use these controls to control your TV.

22 TV/DVD

Press to switch between 'TV mode', in which you get the picture and sound from the TV's tuner, and 'DVD mode', in which you get picture and sound from the recorder's tuner (or an external input).

23 TV DIRECT REC

Press to start recording whatever channel your TV is set to.

■

5

■

6

■

7

■

8

■

A

■

B

■

C

■

D

■

E

■

F

■

5

■

6

■

7

■

8

■

DVR-530H-S

■ Jigs list

A	Name	Jig No.	Remarks
	Service Remote Control Unit	GGF1381	adjustment, diagnosis
	DVD Test Disc (DVD-Video)	GGV1025	Check of DVD-Video
	DVD Recorder Data Disc	GGV1239 (*)	diagnosis (ID data setting)
	Flexible Cable (28P)	GGD1437	diagnosis of MAIN Assy
	ATA cable	GGD1284	Extension of HDD
	4P Power Cable	VKP2291	Extension of HDD
	Extension Board (A)(B)	GGF1532	diagnosis of MAIN Assy
	Emergency Disc Ejection Rod	GGF1529	Forced ejection of the Disc
B	Acetate Tape	GYH1001	Performance keeping of DRIVE Assy

(*) GGV 1239 will be available on June 2005.
For servicing until June 2005, use GGV1179 disc.



Before shipping out the product, be sure to clean the following positions by using the prescribed cleaning tools:

Position to be cleaned	Cleaning tools
Pickup lenses	Cleaning liquid : GEM1004 Cleaning paper : GED-008

Position to be cleaned	Cleaning tools
Fans	Cleaning paper : GED-008